

Philips
DVD soundmachine

USB

Tape

AZ5740



Enjoy your favorite DVD movies, music and photos

You can now enjoy your favorite movies, music and even photos from portable USB device on the TV with this all-in-one Philips DVD soundmachine. It plays DVDs, MP3/WMA-CD, Picture CDs, radio and cassette.

Everything you need

- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- USB Direct for MP3/WMA music playback
- FM tuner for radio enjoyment
- Autostop cassette deck

Easy to use

- CD to tape synchro-start recording
- On Screen Display for easy navigation
- Handy remote control for extra convenience

Rich and clear sound

- 10.2 cm (4") full range speakers for powerful sound
- Bass Reflex Speaker System delivers a powerful, deeper bass

PHILIPS
sense and simplicity

Highlights

PlayDVD,VCD,MP3-CD,CD(RW)&Pict




The Philips player is compatible with most DVD and CD discs available in the market. DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD - all of them can play on the player. SVCD stands for "Super VideoCD". The quality of a SVCD is much better than a VCD, especially much more sharpen picture than a VCD because of the higher resolution. CD(RW) is a shorthand term for a CD drive that can accept the common rewritable CD format.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Autostop cassette deck

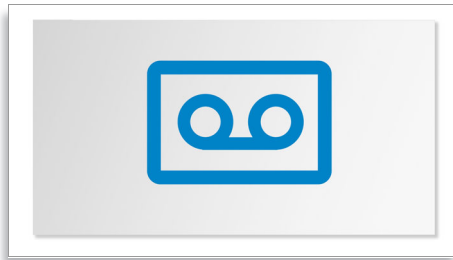

Autostop cassette deck


Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

CD synchro-start recording

CD to tape synchro-start recording



Specifications

Video Playback

- Playback media: DVD-Video, DVD+R/+RW, picture CD, video CD/SVCD
- Disc playback modes: A-B Repeat, fast backward, fast forward, OSD, pause, PBC, Zoom

Audio playback

- Cassette deck technology: mechanical
- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Number of decks: 1
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle

Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM

Sound

- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Audio recording

- Recording media: tape
- Tape recording enhancement: CD synchro start recording

Connectivity

- Audio/Video output: 3.5mm audio/video out, Headphone (3.5mm)
- USB: USB host

Convenience

- Display Digits: 7
- Loader type: top
- Display type: LCD display

Accessories

- Remote control
- Cables/Connection: audio/video cable, power cord
- Others: User Manual
- Warranty: Warranty Certificate

Dimensions

- Gross weight: 4.13 kg
- Packaging depth: 196 mm
- Packaging height: 275 mm
- Packaging width: 453 mm
- Weight: 3.2 kg
- Main unit depth: 243 mm
- Main unit height: 172 mm
- Main unit width: 401 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2013-02-12

Version: 1.0.6

12 NC: 8670 000 60921
EAN: 87 12581 53048 8

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com