Always there to help you

Register your product and get support at www.philips.com/welcome



SBT10



User manual



Contents

1	Important	2
2	Your portable speaker Introduction What's in the box Overview of the speaker	3 3 3 4
3	Get started Charge the built-in battery Power on/off	5 5 5
4	Use Bluetooth devices Connect a device Play audio via Bluetooth Make a call Clear the pairing information	6 6 6 7 7
5	Listen to an external device	8
6	Product information General information Bluetooth Amplifier	9 9 9
7	Troubleshooting General About Bluetooth device	10 10 10
8	Notice Compliance Care of the environment Trademark notice Copyright	11 11 11 11 11

1 Important

- = Note
- The type plate is located on the back of the product.

- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).



Caution

 Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.



2 Your portable speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this speaker, you can

- listen to audio from an external device via Bluetooth connection.
- listen to audio from an external device through the AUX socket, and
- · make phone calls.

What's in the box

Check and identify the contents of your package:

- Main unit
- USB cable
- Short user manual
- Safety sheet











Overview of the speaker

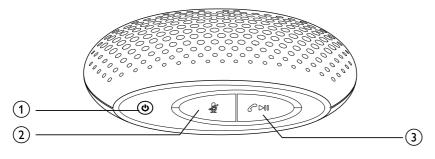

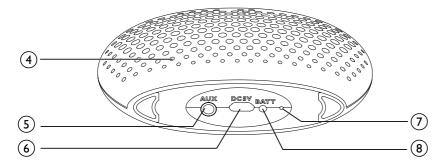

- (1) t
 - Power the speaker on or off.
 - When the speaker is powered off, press and hold to clear pairing information.
- 2
 - During a call, mute the integrated microphone or release it from mute status.
- (3) **(>)**
 - Start, pause, or resume play.
 - Press to answer an incoming call.
 - Press to end the current call.
 - Press and hold to reject an incoming call.
 - Press twice to dial the last called number;
 - Press twice to hold on the current call and answer another incoming call.

- (4) Bluetooth indicator
 - Indicate the current Bluetooth connection status.
- (5) AUX
 - Connect to an external player.
- 6 DC 5V
 - Recharge the built-in battery.
- 7 Integrated microphone
- 8 BATT
 - During charging, indicate the current battery status.

3 Get started

Always follow the instructions in this chapter in sequence.


Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.



Note

· Before use, fully charge the built-in battery.

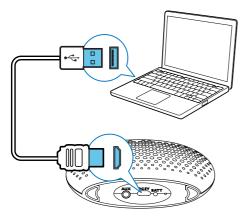

Connect the USB cable between

- the DC 5V socket on the speaker, and
- a USB socket of a computer.

Charging indicator

The indicator on the bottom indicates the battery status during charging.

Indicator	Battery
Solid	Under charging
green	
Off	Fully charged

Power on/off

Press and hold ϕ for 2 seconds.



Note

- If an audio input cable is connected to the AUX socket, this product does not automatically power off. To save battery power, disconnect the audio input cable or manually power off the product after use.
- In Bluetooth mode, if Bluetooth connection is invalid for 15 minutes, this product automatically powers off.

4 Use Bluetooth devices

With this speaker, you can listen to audio from a player and make a call through Bluetooth.



Note

- Make sure that no audio input cable is connected to the AUX socket.
- Philips does not guarantee the compatibility with all Bluetooth devices.
- Before pairing a device with this system, read its user manual for Bluetooth compatibility.
- The product can memorize a maximum of 8 paired devices.
- Make sure that Bluetooth function is enabled on your device, and your device is set as visible to all other Bluetooth devices.
- Any obstacle between this system and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.

Connect a device

- 1 Power on the speaker.
- 2 On your device, search for Bluetooth devices
- 3 In the device list, select PHILIPS SBT10.
 - If a message prompts for the permission for Bluetooth connection with PHILIPS SBT10, confirm it.
 - If a password is required, enter 0000 and then confirm.

Note: Make sure that no audio input cable is connected to the **AUX** socket.

Bluetooth indicator

Indicator	Bluetooth connection
Blinking	Connecting or waiting for
blue	connection
Solid blue	Connected

Disconnect a device

On your device, disable the Bluetooth connection with this product.



Note

 Before connecting another Bluetooth device, disconnect the current device first.

Reconnect a device

- For a paired Bluetooth device on which the automatic reconnection is enabled, this product reconnects with it once it is detected.
- For a paired Bluetooth device that does not support the automatic reconnection, reconnect it with this product manually.

Play audio via Bluetooth



Note

- If the connected Bluetooth device supports the Advanced Audio Distribution Profile (A2DP), you can listen to tracks that are stored on the device through the system.
- If the device also supports the Audio Video Remote Control Profile (AVRCP), you can control play on this product.
- If the connected device does not support the AVRCP, control play on the connected device.
- If there is an incoming call on the connected mobile phone, music play pauses.

Buttons	Functions
€ ►II	Start, pause, or resume play.

Make a call


Buttons	Functions
~ ►II	Press to answer an incoming call.
	Press to end the current call.
	Press and hold to reject an incoming call.
	Press twice to dial the last called number.
	Press twice to hold on the current call and answer another incoming call.
*	Mute the integrated microphone or release it from mute status.

Clear the pairing information

When the product is powered off, press and hold $\ensuremath{\mathfrak{O}}$ for 8 seconds.

5 Listen to an external device

You can also listen to an external audio device, for example, MP3 player, through this product.

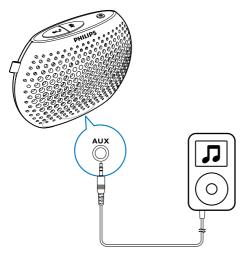

- 1 Connect an audio input cable with a 3.5 mm connector on both ends to
 - the AUX socket on this product, and
 - the headphone socket on the external device.
- 2 Play audio on the external device (refer to its user manual).

6 Product information



 Product information is subject to change without prior notice.

General information

5 V, 0.6 A
Lithium battery
107 × 71 × 36 mm
0.12 kg

Bluetooth

Bluetooth specification	V2.1+EDR
Supported profiles	HFP v1.6, A2DP v1.2, HSP v1.2

Amplifier

Rated Output Power	1.2 W RMS
Signal to Noise Ratio	> 62 dBA
AUX Input	600 mV RMS, 22 kOhm

7 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

General

No power

Recharge your speaker.

No sound

- Adjust volume on the connected device.
- When you listen to audio through Bluetooth, make sure that no audio input cable is connected to the AUX socket.
- Make sure that your Bluetooth device is within the effective operational range.

No response from the speaker

Restart the speaker.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
 Disconnect that device and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Compliance

C€1588

This product complies with the radio interference requirements of the European Community.

This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www. philips.com/support.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Philips is under license.

Copyright

2013 © Koninklijke Philips Electronics N.V. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Specifications are subject to change without notice © 2013 Koninklijke Philips Electronics N.V. All rights reserved.

