

Always there to help you

Register your product and get support at
www.philips.com/support



BT2200



EN

Short User Manual

ZH-CN

简明用户手册

PHILIPS



2014 © WOOX Innovations Limited.
All rights reserved.
Philips and the Philips' Shield Emblem are
registered trademarks of Koninklijke Philips N.V.
and are used by WOOX Innovations Limited
under license from Koninklijke Philips N.V.

BT2200_93_Short User Manual_V1.0



EN

1 Important



Warning

- Never remove the casing of this speaker.
- Never lubricate any part of this speaker.
- Never place this speaker on other electrical equipment.
- Keep this speaker away from direct sunlight, naked flames or heat.

Important safety instructions

- Make sure that there is enough free space around the speaker for ventilation.
- Only use attachments/accessories specified by the manufacturer.
- Use only power supplies listed in the user manual.
- Do not place any sources of danger on the product (e.g. lighted candles).
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- This speaker is designed to be waterproof in compliance with IEC 60529 IPX6.
- Before use in environment subject to water; always securely close the protective cover at the bottom of the speaker.
- After use in environment subject to water; immediately clean the speaker with a soft dry cloth and let it dry in a well-ventilated place away from direct sunlight.



Note

- The type plate is located on the bottom of the product.

2 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.


Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point or recycling. By doing this, you help to preserve the environment.



Caution

- Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.

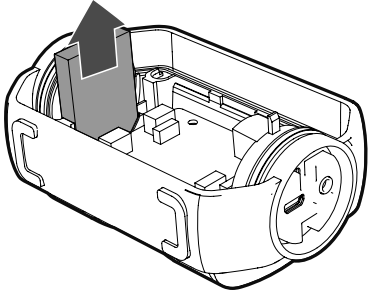

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.

3 Specifications

Amplifier

Rated Output Power	1 X 2.8W RMS
Frequency Response	40 - 20000 Hz, ±3dB
Signal to Noise Ratio	> 62dBA
AUX Input sensitivity	260mV RMS 22kohm

Bluetooth

Bluetooth version	V4.0
Bluetooth Frequency Band	2.402GHz ~ 2.48GHz ISM Band
Range	10 m (Free space)

Speakers

Speaker Impedance	4 ohm
Speaker Driver	4 cm full range
Sensitivity	> 81dB/m/W ± 3dB/m/W

General information

Power Supply (through USB socket)	DC 5 V, 500mA
Built-in Battery	Li-polymer battery (3.7V, 500mAh)
Water resistance	IPX6
Operation temperature	0°C~45°C
Storage temperature	-40°C~70°C
Dimensions - Main Unit (W x H x D)	107.3 x 69.1 x 58 mm
Weight - Main Unit	0.2 kg

简体中文

1 注意事项



警告

- 切勿拆下本扬声器的外壳。
- 切勿润滑本扬声器的任何部件。
- 切勿将本扬声器放在其他电气设备上面。
- 应让本扬声器远离阳光直射、明火或高温。

重要安全说明

- 请确保扬声器周围有足够的空间进行通风。
- 仅使用制造商指定的附件/配件。
- 仅使用用户手册中列出的电源。
- 不要将任何危险源放在本产品上（例如点燃的蜡烛）。
- 不要将任何危险源放在本装置上（例如装有液体的物体、点燃的蜡烛）。
- 本扬声器采用防水设计，符合 IEC 60529 IPX6。
- 在水中使用之前，请务必紧闭扬声器底部的保护盖。
- 在水中使用之后，请立即用柔软干布清洁本扬声器，并让其在通风良好的地方干燥，请避开阳光直射。



注

- 型号铭牌位于产品底部。

2 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

弃置旧产品



本产品采用可回收利用的高性能材料和组件制造而成。


弃置产品时，请不要将其与一般生活垃圾一同丢弃，应将其交给政府指定的回收中心或回收。这样做有利于环保。



注意

- 拆卸内置电池将使保修失效，并可能毁坏本产品。

务必让专业人员拆卸产品中的内置电池。

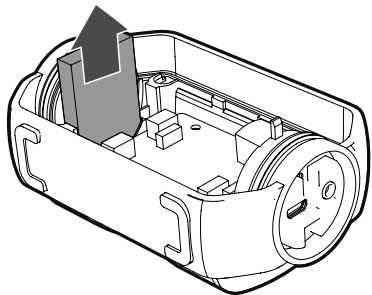

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚乙烯（袋、保护性泡沫片）。

您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。



Bluetooth

蓝牙® 字样和徽标均为 Bluetooth SIG, Inc. 所有， WOOX Innovations 对这些字样和徽标的任何使用均属合法。

3 规格

功放器

额定输出功率	1 X 2.8 瓦 RMS
频率响应	40 -20000 Hz, ±3dB
信噪比	>62dBA
AUX 输入灵敏度	260 毫伏 RMS, 22 千欧

蓝牙

蓝牙版本	V4.0
蓝牙频段	2.402GHz ~ 2.48GHz ISM 频段
范围	10 米（开阔空间）

扬声器

扬声器阻抗	4 欧姆
扬声器驱动器	4 厘米全频
灵敏度	> 81dB/m/W ± 3dB/m/W

一般信息

电源（通过 USB 插孔）	5 伏直流，500 毫安
内置电池	锂聚合物电池（3.7 伏，500 毫安时）
防水	IPX6
工作温度	0°C~45°C
存放温度	-40°C~70°C
尺寸 - 主装置（宽 x 高 x 厚）	107.3 x 69.1 x 58 毫米
重量 - 主装置	0.2 千克



部件名称 Name of the Parts	有害物质 Hazardous Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	×	○	○	○	○	○
Accessories (cables) 附件 (电源线、连接线)	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

The table is compiled according to SJ/T 11364.

○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

○：Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

×：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有害物质在正常使用条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对人体、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

EN

To download the full user manual, visit www.philips.com/support.

ZH-CN

要下载完整用户手册，请访问 www.philips.com/support。

EN Before using your product, read all accompanying safety information.

ZH-CN 使用产品之前，请先阅读所有随附的安全信息。

EN Press and hold to switch on.
Notes:To switch off, press and hold again.
The speaker switches to standby mode automatically when being idle for 15 minutes.

ZH-CN 按住 可打开。
注：要关闭，请再次按住 。
闲置 15 分钟后，扬声器将自动切换至待机模式。

EN

- On your device, enable Bluetooth and search for Bluetooth devices.
- Select **[Philips BT2200]** on your device to start pairing and connection. If necessary, enter default password “0000”.
↳ After successful pairing and connection, the speaker beeps twice, and the Bluetooth indicator turns solid white.
- Play audio on the device.

Notes:

- The speaker can memorize a maximum of 8 paired devices.
- Keep away from any other electronic device that may cause interference.

ZH-CN

- 在您的设备上，启用蓝牙并搜索蓝牙设备。
- 在设备上选择 **[Philips BT2200]** 以开始配对并连接。如有必要，请输入默认密码“0000”。
↳ 配对并连接成功后，扬声器会发出两声蜂鸣，蓝牙指示灯会变为呈白色持续亮起。
- 在设备上播放音频。

注：

- 本扬声器最多可记忆 8 个已配对设备。
- 请远离任何其他可能造成干扰的电子设备。

EN

After Bluetooth connection, you can control an incoming call with this speaker:

Button	Function
	Press to answer an incoming call.
	Press and hold to reject an incoming call.
	During a call, press to end the current call.

Notes:

- You can talk through the microphone of the speaker.
- Music play pauses when there is an incoming call.

ZH-CN

蓝牙连接后，您可以使用此扬声器控制来电。

按钮	功能
	按下可接听来电。
	按住可拒接来电。
	通话时，按下可结束当前通话。

注：

- 您可以通过扬声器的麦克风通话。
- 若有来电，音乐播放会暂停。

EN

LED indicator	Battery status
Solid red	Under charging
Off	Fully charged
Flashing red	Low power

Note: Before use, fully charge the built-in battery.

ZH-CN

LED 指示灯	电池状态
呈红色持续亮起	正在充电
关	充满电
呈红色闪烁	电量不足

注意：使用之前，为内置电池充满电。