

Register your product and get support at
www.philips.com/welcome

AD712



EN User manual

PHILIPS

Contents

1	Important	2
----------	------------------	----------

2	Your Docking Entertainment System	3
	Introduction	3
	What's in the box	3
	Overview of the main unit	3

3	Get started	5
	Connect power	5
	Synchronize time with iPod/iPhone	5

4	Play from iPod/iPhone	6
	Compatible iPod/iPhone	6
	Listen to audio from iPod/iPhone	6
	Remove the iPod/iPhone	6
	Charge the iPod/iPhone	6
	Adjust volume	6

5	Other features	7
	Play audio from an external device	7
	Set sleep timer	7
	Adjust display brightness	7

6	Product information	8
	Specifications	8

7	Troubleshooting	9
----------	------------------------	----------

8	Notice	10
----------	---------------	-----------

1 Important

- Read these instructions.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The unit shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction



With this unit, you can enjoy audio from iPod/iPhone or an external device.

What's in the box

Check and identify the contents of your package:

- Main unit
- Power adapter
- Quick start guide
- Safety sheet

Overview of the main unit

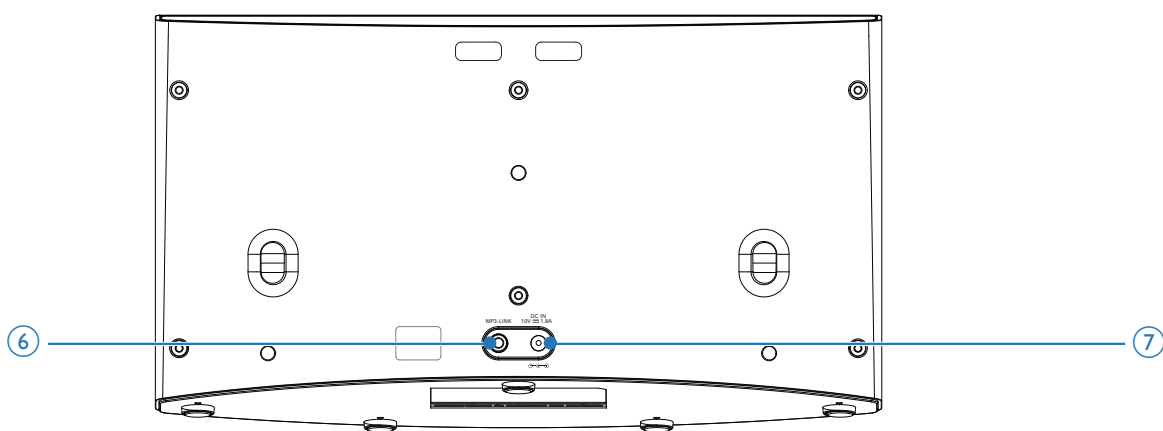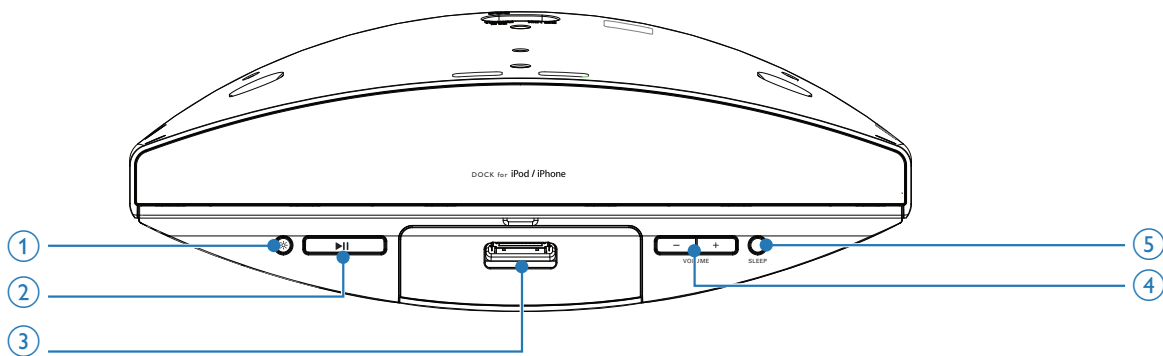

- ① ☀
 - Adjust display brightness.
 - Set time and time format.
- ② ▶||
 - Start/pause play.
- ③ Dock for iPod/iPhone
- ④ VOLUME +/-
 - Adjust volume.
 - Adjust time format and time.
- ⑤ SLEEP
 - Set sleep timer.
- ⑥ MP3-LINK
 - Connect an external audio device.
- ⑦ DC IN
 - Connect power.

3 Get started

Always follow the instructions in this chapter in sequence.

Connect power

Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the unit.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

Warning

- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.

Connect the power adapter to:

- the **DC IN** socket at the back of the device.
- the power socket.

Tip



- The type plate is located on the bottom of the device.

Synchronize time with iPod/iPhone

When the docking system is connected to power and an iPod/iPhone is docked, the docking system synchronizes time with the iPod/Phone automatically.

- ↳ Time is stored in the docking system even if the ipod/iPhone is disconnected.

Set time format

- 1 Press and hold  for 2 seconds.
↳ [12H] or [24H] is displayed.
- 2 Press **VOLUME +/-** repeatedly to select 12 or 24 hour format.
- 3 Press  to confirm.

4 Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

Compatible iPod/iPhone

The docking system supports these iPod and iPhone models:

Made for:

- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod classic
- iPod with video
- iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)
- iPod with color display
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Listen to audio from iPod/iPhone

- 1 Place an iPod/iPhone in the dock.
- 2 Play audio from the iPod/iPhone.



Tip

- To pause/resume play, press **▶ ||**.
- In iPod/iPhone mode, if an external audio device is connected, the device switches to MP3 Link mode.

Remove the iPod/iPhone

Pull the iPod/iPhone out of the dock.

Charge the iPod/iPhone

When the device is connected to power, the docked iPod/iPhone starts charging.

Adjust volume

To adjust volume, press **VOLUME +/-** repeatedly.

5 Other features

Play audio from an external device

You can listen to audio from an external device through this docking system.

- 1 Connect the MP3 link cable (not supplied) to:
 - the **MP3-LINK** socket.
 - the headphone socket of an external device.
- 2 Play tracks in the external device (see the device's user manual).

Set sleep timer


This docking system can be switched off automatically after a preset period.

Press **SLEEP** repeatedly to select the sleep timer period (in minutes).

To deactivate the sleep timer, press **SLEEP** repeatedly until **[OFF]** (off) appears.

15 → 30 → 60 → 90 → 120
↑ OFF ↓

Adjust display brightness

Press  repeatedly to select different brightness levels.

6 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	20W RMS
--------------------	---------

General information

AC Power	Model: AS190-100-AI180; Input: 100-240V ~, 50/60Hz, 0.7A; Output: 10V \equiv 1.8A
----------	--

Operation Power Consumption	<12 W
-----------------------------	-------

Standby Power Consumption	<2 W
---------------------------	------

Max. Load for iPod/iPhone	5 V, 1 A
---------------------------	----------

Dimensions	
- Main Unit (W x H x D)	290 x 158 x 113 mm

Weight	
- With Packing	1.97 kg
- Main Unit	1.47 kg

7 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

8 Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

AD712_05_CCR_V2.0

