








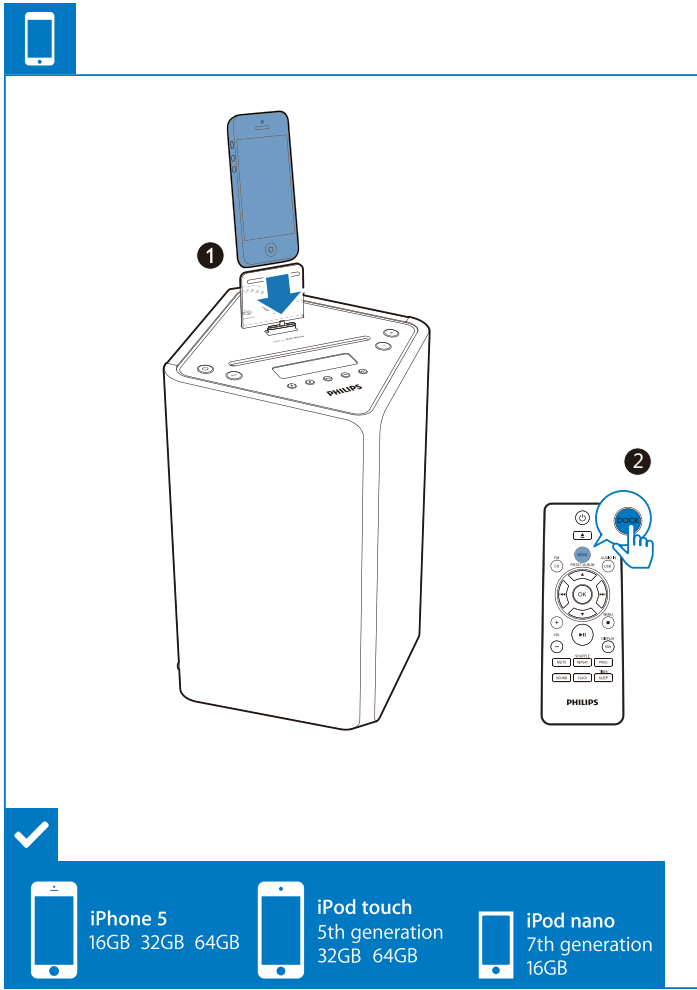


- English 1. Insert the iPod/iPhone in the dock. Press **DOCK** to select iPod/iPhone source.
2. Play music on iPod/iPhone.
- 简体中文 1. 将 iPod/iPhone 插接到底座中。按 **DOCK** 可选择 iPod/iPhone 来源。
2. 播放 iPod/iPhone 中的音乐。

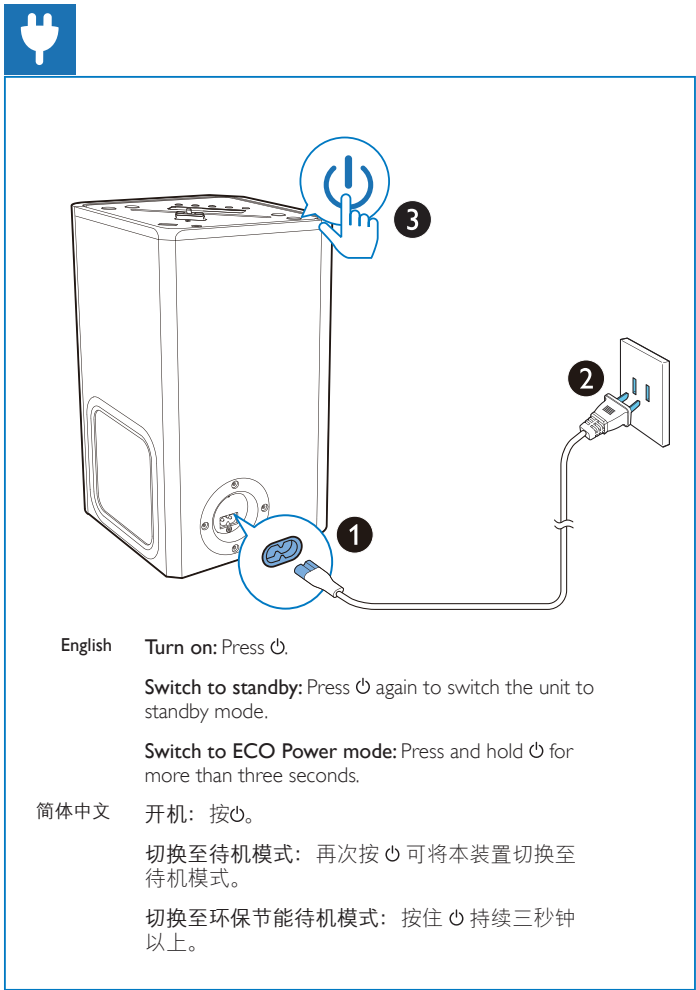


English If the docking system goes to Eco power mode for energy saving, press **⏻** or press and hold **⏻** to switch the unit to standby mode first to make sure the docked iPod/iPhone can charge normally.

简体中文 如果底座系统进入环保节能模式以节能，可按 **⏻** 或按住 **⏻** 将装置先切换至待机模式，以确保所连接的 iPod/iPhone 可以正常充电。

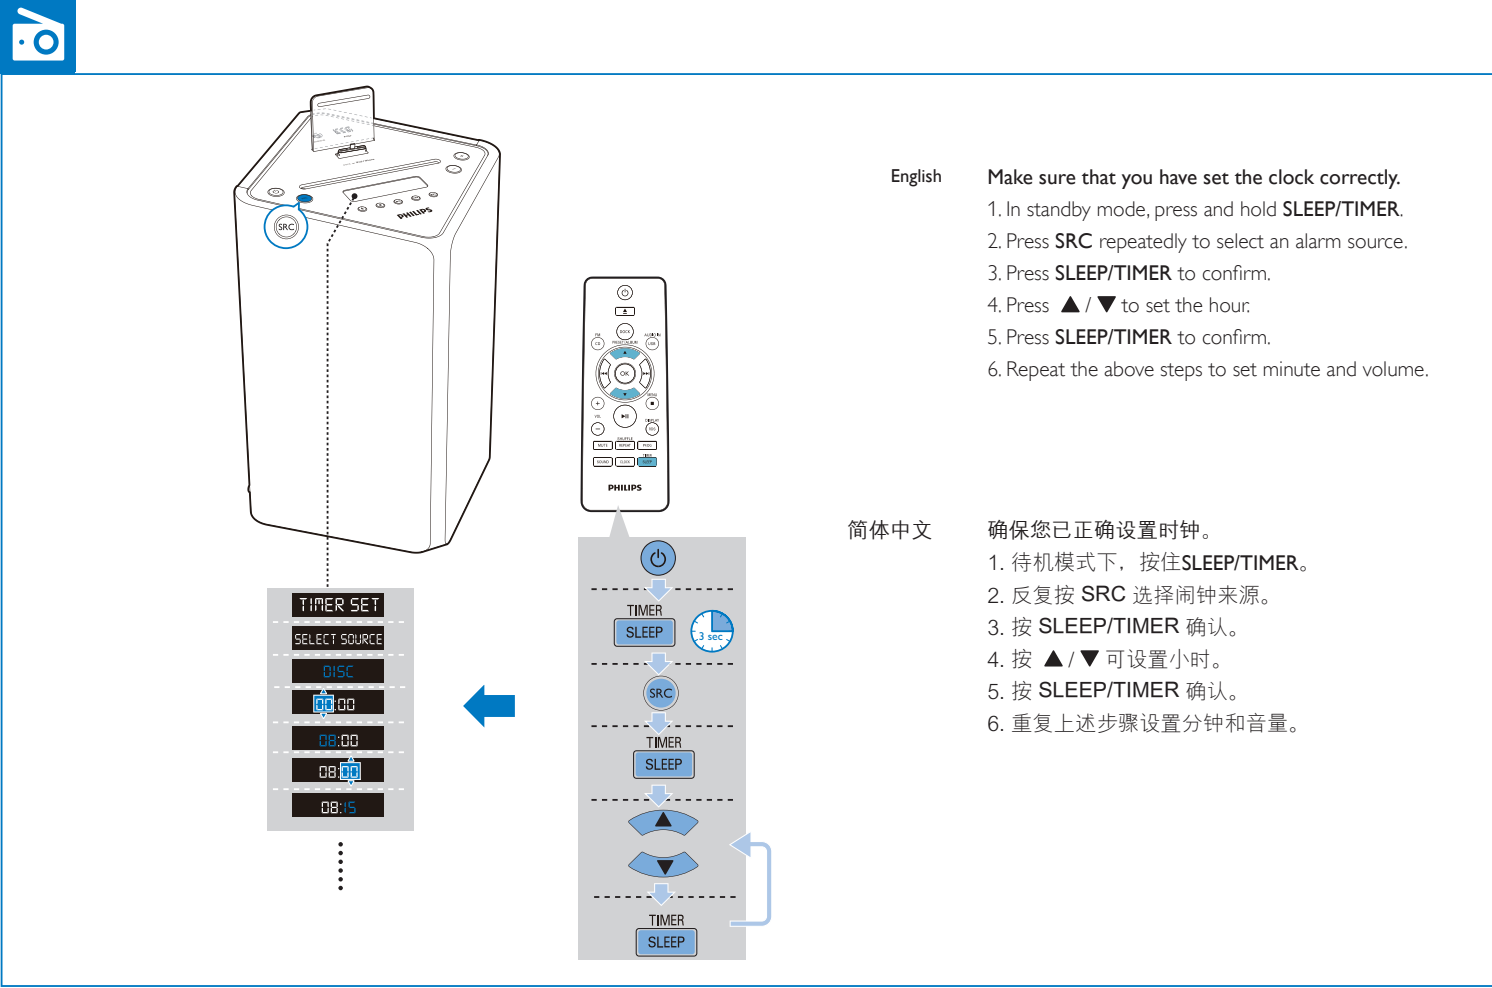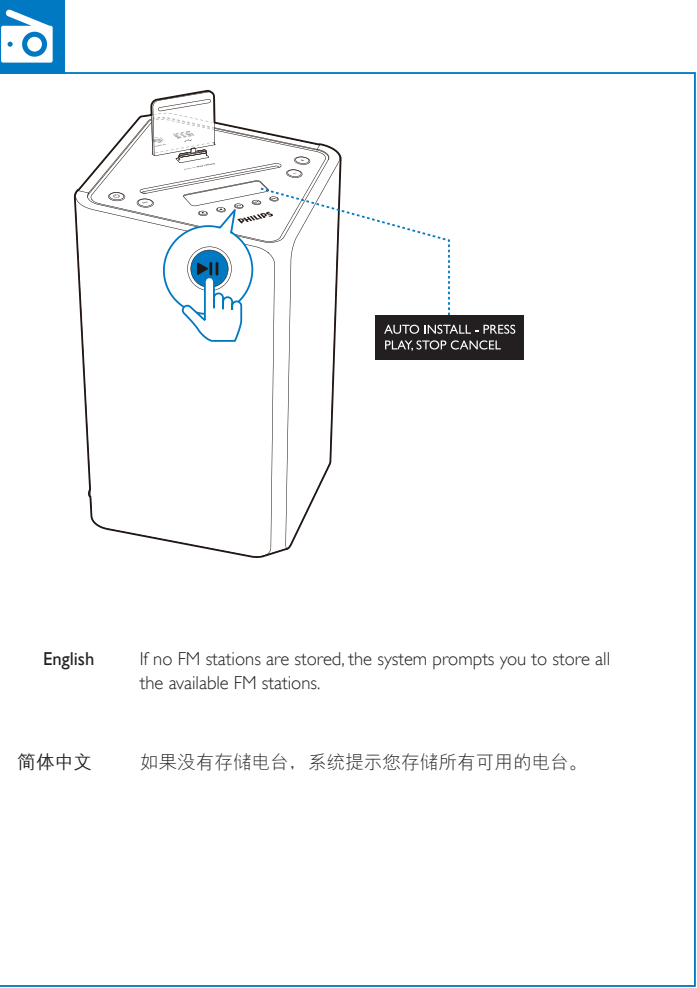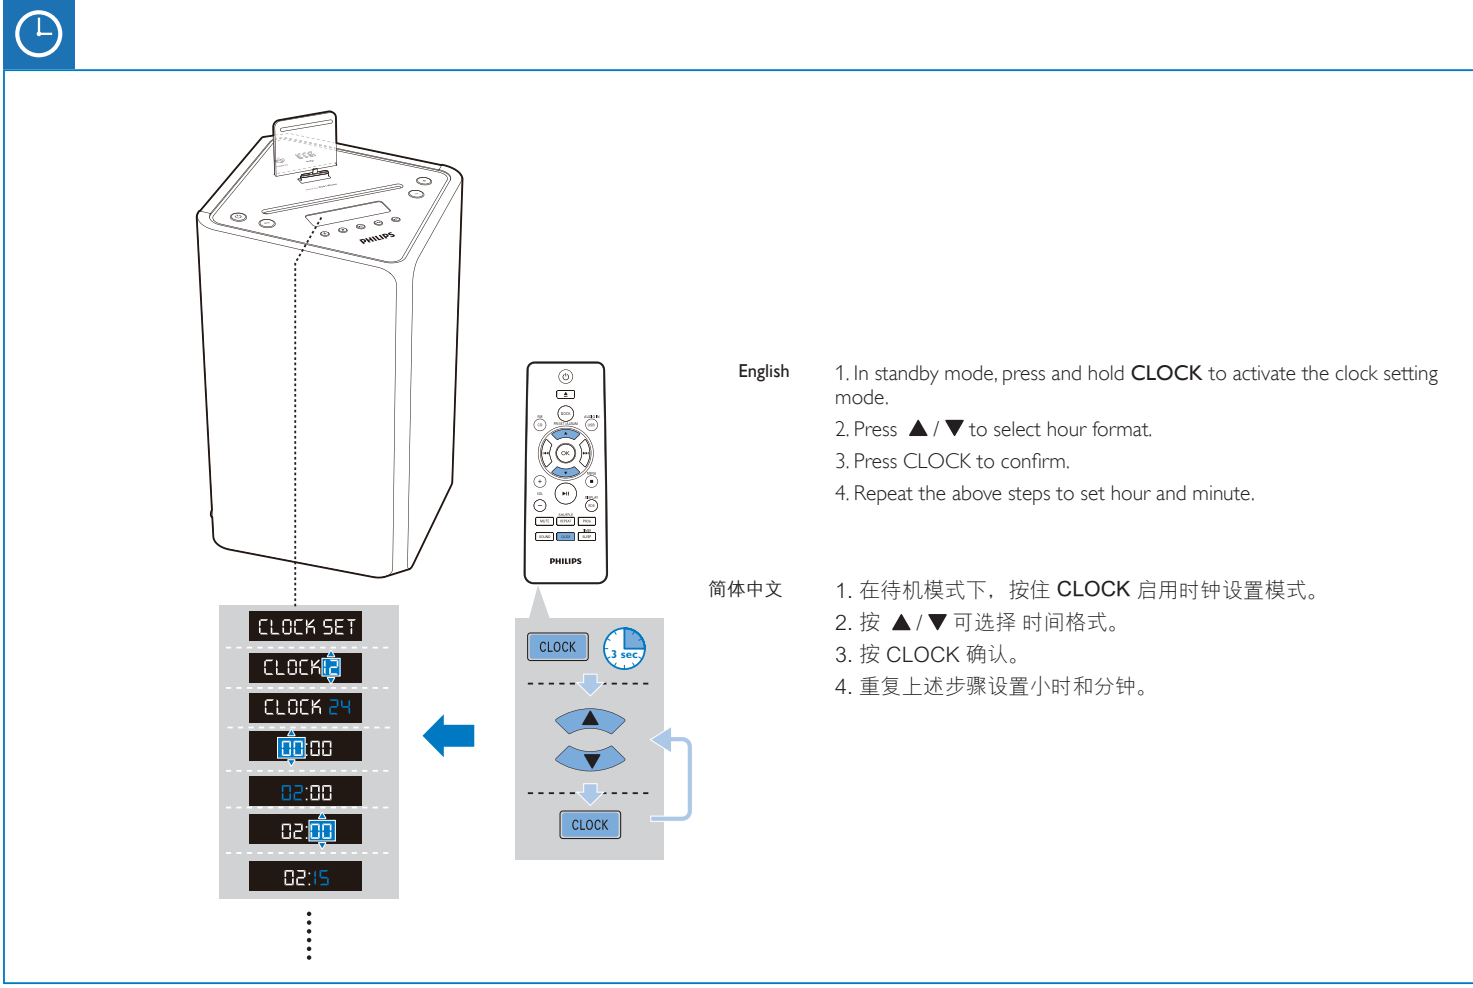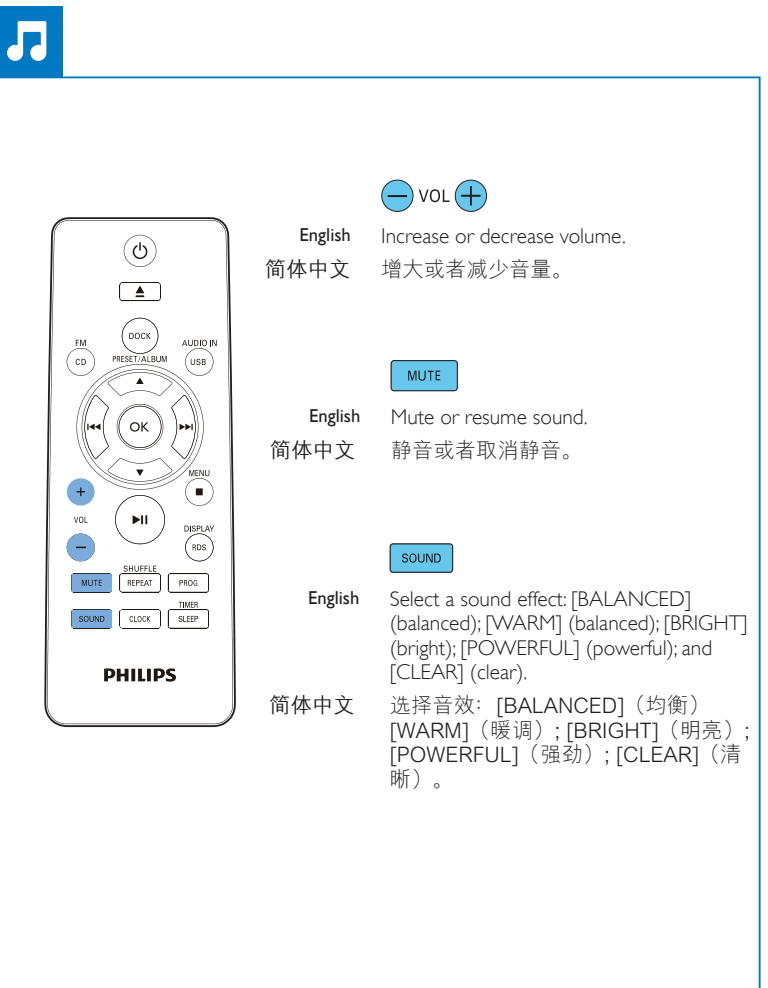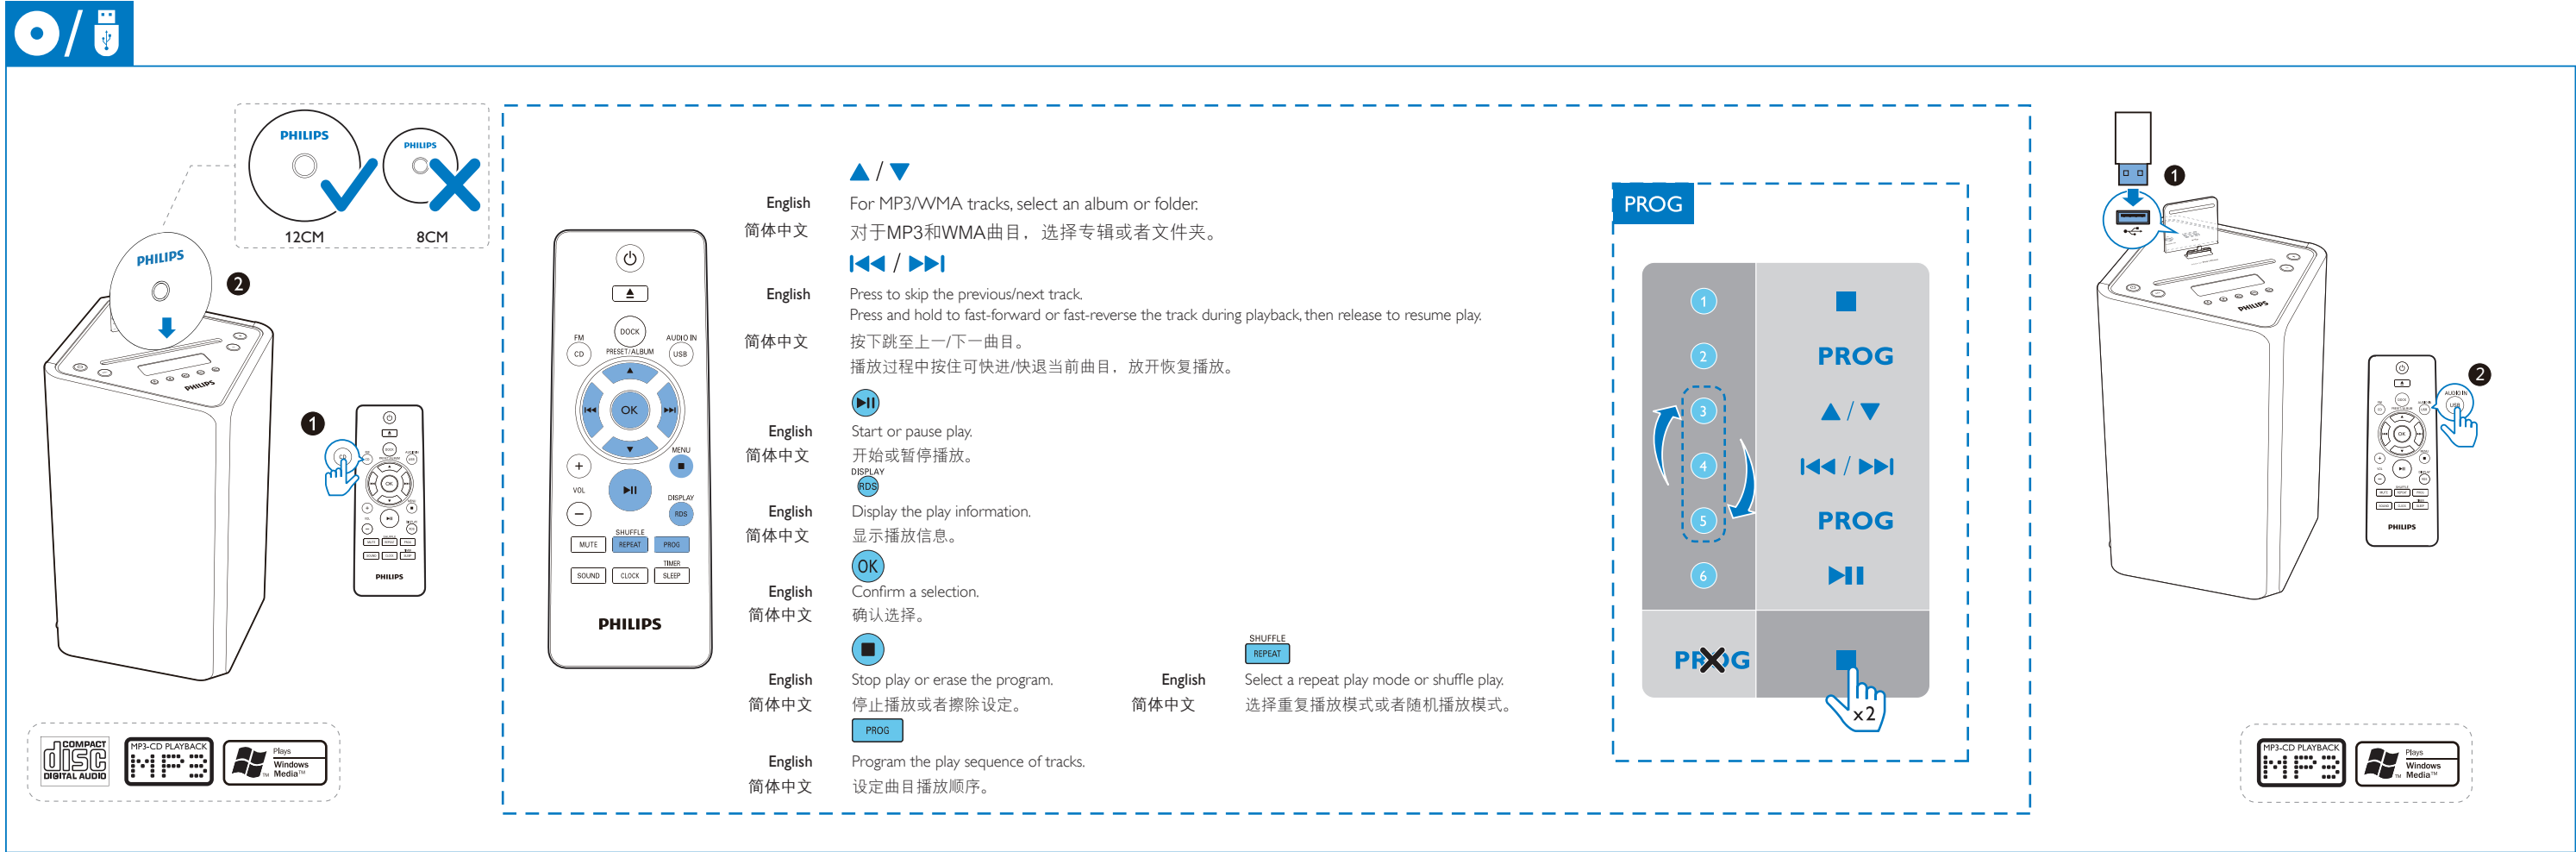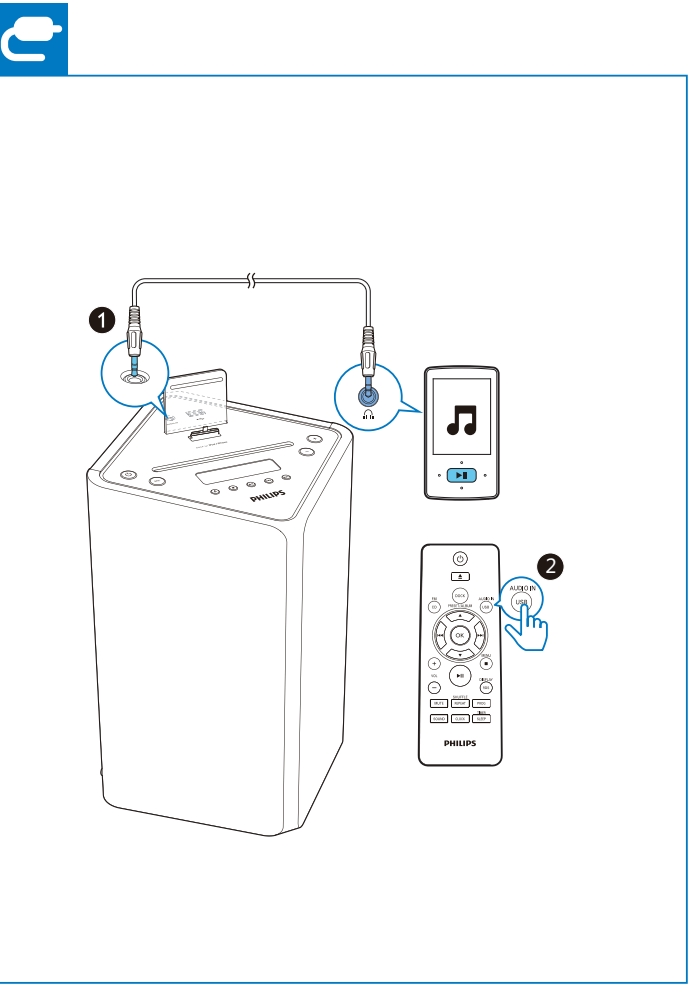



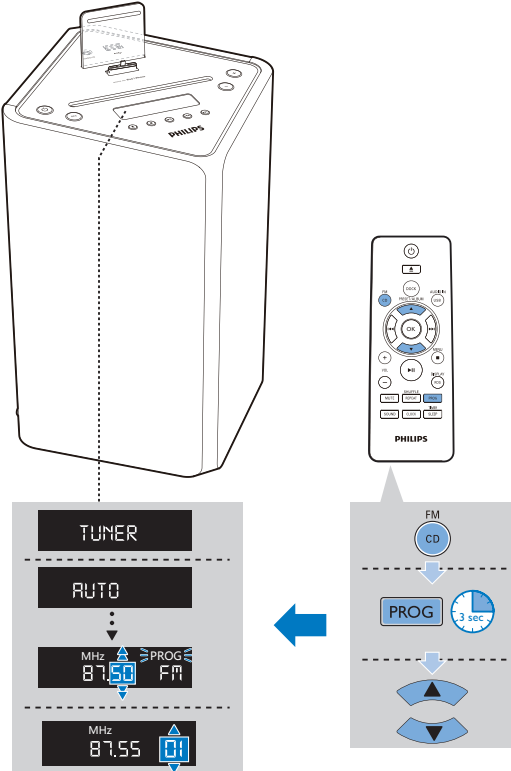

English

Store FM radio stations automatically

- Press and hold **PROG** to activate automatic program mode.
- Press **▲/▼** to select preset stations.

简体中文

自动存储电台

- 按住 **PROG** 启用自动设定模式。
- 按下**▲/▼** 选择预设电台。

English

Store FM radio stations manually

- Press and hold **◀◀/▶▶** to tune to a radio station.
- Press **PROG** to activate program mode.
- Press **▲/▼** to allocate a preset number then press **PROG** to confirm.

简体中文

手动存储电台

- 按住 **◀◀/▶▶** 调谐至电台。
- 按 **PROG** 激活设定模式。
- 按 **▲/▼** 可为该电台分配编号，然后按 **PROG** 确认。

English

Switch between mono and stereo broadcast.

简体中文

在单声道广播和双声道广播之间切换。

English

1 Safety and Notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety

Safety

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

- The device shall not exposed to dripping or splashing.
- Do no place any source of danger on the device (e.g.liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specified by the manufacturer.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Note

- The type plate is located on the bottom of the apparatus.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Be responsible
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"Made for iPod" and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

2 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Amplifier	
Maximum Output Power	50W
Frequency Response	45 Hz - 20 kHz, ± 3 dB
Signal to Noise Ratio	> 77 dBA
Audio In Input	600mV RMS 22 k Ω
Disc	
Laser Type	Semiconductor
Disc Diameter	12 cm
Support disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24 Bits / 44.1 kHz
Total Harmonic Distortion	< 0.8% (1 kHz)
Frequency Response	4 Hz -20 kHz (44.1 kHz)
Signal to Noise Ratio	> 77 dBA
Tuner	
Tuning Range	FM: 87.5 - 108 MHz
Tuning grid	50 KHz
Number of presets	20
Sensitivity	
- Mono, 26dB S/N Ratio	< 22 dBf
- Stereo, 46dB S/N Ratio	< 43 dBf
Search Selectivity	< 28 dBf
Total Harmonic Distortion	< 2%
Signal to Noise Ratio	> 55 dB
Speakers	
Speaker Impedance	8 ohm
Speaker Driver	65 mm full range
Sensitivity	>83dB/m/VV ±4dB/m/VV

General information	
AC power	220V ~, 50Hz
Operation Power Consumption	25 W
Eco Standby Power Consumption	< 0.5 W
USB Direct	Version 2.0HS
Dimensions	
- Main Unit (W x H x D)	234 x 364 x 239 mm
Weight	
- Main Unit	2.5 kg

简体中文

1 安全和注意事项

请在使用本产品之前阅读并理解所有说明。因未遵守说明而造成的损坏不在保修范围内。

安全

安全

警告

- 切勿拆下本产品的外观。
- 切勿向喇叭装置的任何部件。
- 切勿直视本装置内部的光束。
- 切勿将本装置放在其它电器设备上面。
- 应让本装置远离阳光直射、明火或高温。
- 确保始终可轻易地接触到电源线、电源插头或适配器，以便于将本装置从电源上断开。

- 切勿将设备暴露于漏水或溅水环境下。
- 不要将任何危险源放在本设备上（例如如有液体的物体、点燃的蜡烛）。
- 将电源插头或产品耦合器用作断开设备时，该断开设备应可以随时使用。
- 请确保产品周围有足够的空间进行通风。
- 仅使用制造商指定的附件/配件。
- 主插头用作断路装置,在不使用时应将插头拔掉,应保证与电网电源完全切断。

旧产品和电池的处理

本产品采用可回收利用的高性能材料和组件制造而成。切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环境 and 人体健康造成潜在的负面影响。

本产品所含的电池不能与一般的生活垃圾一同弃置。请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境 and 人类健康造成潜在的负面影响。

关于您所在地区回收中心的更多信息，请访问 www.recycle.philips.com。

注

- 铭牌(铭牌上的信息包括工作电压,消耗功率)位于主机底部,使用前请先了解铭牌上的相关信息。

注意

如果用户未经 Philips 优质生活部门的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚乙烯（袋、保护性泡沫片）。

您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

Be responsible
Respect copyrights

进行受版权保护材料（包括计算机程序、文件、广播和录音）的未授权复制可能会侵犯版权并构成犯罪。不得将此设备用于这些目的。



"Made for iPod" and "Made for iPhone" 表示电子附件专为连接 iPod 或 iPhone 而设计，并经开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作是否其符合安全和法规标准不负任何责任。请注意，通过 iPod 或 iPhone 使用该附件可能影响无线性能。

iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商标。

2 产品信息

注

- 产品信息如有更改，恕不另行通知。


规格

功放器	
最大输出功率	50 瓦
频率响应	45 赫兹 - 20 千赫，± 3 dB
信噪比	> 77 dBA
音频输入	600 毫伏 RMS 22 k Ω
光盘	
激光类型	半导体
光盘直径	12 厘米
支持的光盘	CD-DA、CD-R、CD-RW、MP3-CD 和 WMA-CD
音频 DAC	24 位/44.1 千赫
总谐波失真	< 0.8%（1 千赫）

频率响应	4 赫兹 -20 千赫（44.1 千赫）
信噪比	> 77 dBA
调谐器	
调谐范围	FM: 87.5 - 108 兆赫
调谐栅	50 千赫
预设编号	20
灵敏度	
- 单声道, 26dB 信噪比	<22 dBf
- 立体声, 46dB 信噪比	< 43 dBf
搜索选择	< 28 dBf
总谐波失真	< 2%
信噪比	> 55 dB
扬声器	
扬声器阻抗	8 欧姆
扬声器驱动器	65 毫米全频
灵敏度	>83dB/m/W ± 4dB/m/W
一般信息	
交流电源	220 伏, 50 赫兹
操作功耗	25 瓦
环保节能待机功耗	< 0.5 瓦
USB 直放	版本 2.0HS
尺寸	
- 主装置 (宽 x 高 x 厚)	234 x 364 x 239 毫米
重量	
- 主装置	2.5 千克

Note



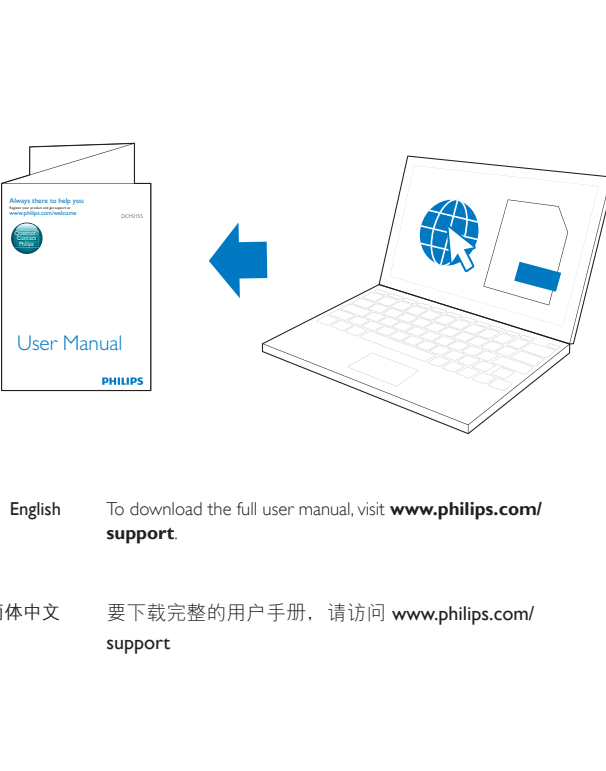

English

To download the full user manual, visit www.philips.com/support.

简体中文

要下载完整的用户手册，请访问 www.philips.com/support





English

To download the full user manual, visit www.philips.com/support.

简体中文

要下载完整的用户手册，请访问 www.philips.com/support

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	O	O	O	O	O	O
CD loader CD 光盘	X	O	O	O	O	O
LCD Panel 液晶面板	X	X	O	O	O	O
Loudspeakers 喇叭单元	O	O	O	O	O	O
PWBs 电路板组件	X	O	O	O	O	O
Accessories (Remote control & cables) 附件（遥控器，电 源线，连接线）	X	O	O	O	O	O
Batteries in Remote Control (ZnC) 遥控器电池	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 — 2006.

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 — 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.