Quick Start Guide




What's in the Box?


You should find these items upon opening the box.







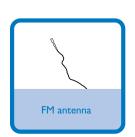

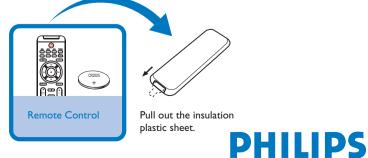


Step A Setup

Connection

- 1 For radio reception, connect the supplied FM antenna to the **FM ANTENNA** terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.
- 3 Connect the power cord of the system to the AC power outlet.


Tips:

- See the User Manual for how to connect other equipment to this system.
- Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!

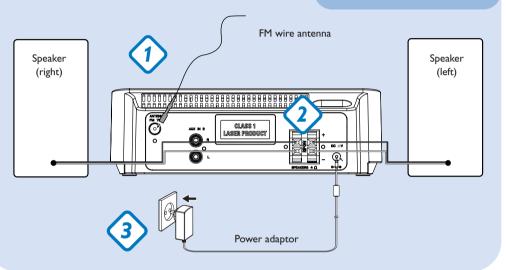

Setting the clock


- 1 In standby mode, press **DISPLAY/CLOCK**.
- 2 Press ALBUM/PRESET +/- to select between 12 hour and 24 hour display.
- 3 Press DISPLAY/CLOCK again to confirm.
- 4 Press ALBUM/PRESET +/- to select the hour.
- 5 Press DISPLAY/CLOCK to confirm.
- 6 Repeat steps 4-5 to set minute.

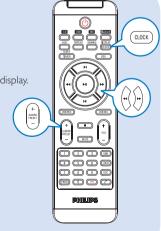

Step B Enjoy

Playing a disc

- 1 Select CD source.
- 2 Press **OPEN/CLOSE** on the top of the system to open the CD door.
- 3 Insert a disc with the printed side facing up and press down on **OPEN/CLOSE** to close the CD door.
- 4 Press ► II to start playback.
- 5 Press to stop playback.

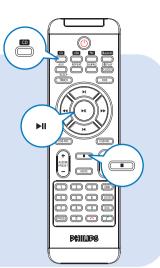

Programming and tuning to radio stations

- 1 Select **FM** source.
- 2 Press PROG on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press
 <!-- In the set (ALBUM/PRESET +/- on the remote control">
 <!-- In the set (ALBUM/PRESET +/- on the remote control) until the desired preset station is displayed.

Tip:

Detailed playback features and additional functions are described in the accompanied owner's manual.

Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (CDor AUX, for example).
- Then select the desired function (►II,
- $| \blacktriangleleft, |$ for example).



Playing a USB mass storage device

1 Make sure that your BTM177 is being powered on.

Press SOURCE repeatedly (or USB on the remote) to enter USB mode. The LCD display shows USB.

3 Plug a compatible USB mass storage device to BTM177's USB port marked ••. If needed, use a suitable USB cable to connect between the device and BTM177's USB port. The device will automatically power on.

Tib:

USB device.

Refer to the user manual supplied for the description about compatibility of USB mass storage device, and

playability of the files stored on the

4 Press ▶ ■ on your BTM177 to start playback.

5 Press ■ to stop playback.

Operating a Bluetooth-enabled device via the system

- Place a Bluetooth-enabled device for pairing within 10 meters from the system.
- 2 Press SOURCE on the top of the system (or BLUETOOTH on the remote control) to select the Bluetooth source.
- **3** Press and hold **PAIRING(** on the top of the system or the remote control for more than 3 seconds.
- **4** Set the Bluetooth-enabled device to search for other available Bluetooth devices until it recognizes "PHILIPS BTM177".
- 5 Select "PHILIPS BTM177" and wait until you hear a double beep from the system and the Bluetooth icon turns on.
 - → Enter "0000" when prompted for a keyword.
- For a paired HFP and/or HSP mobile phone, you can receive, reject or hold a call via the system with the **PAIRING** ←, ← and buttons respectively.
 - For a paired A2DP device, you can enjoy music from it with the ▶ ■, ► / ▶, ► and buttons via the system.



