

Always there to help you

Register your product and get support at
www.philips.com/welcome



AD305



User manual

PHILIPS

Contents

1	Important	2
	Safety	2
	Notice	3

2	Your docking speaker	4
	Introduction	4
	What's in the box	4
	Overview of the main unit	4

3	Prepare	5
	Connect power	5
	Adjust brightness	5

4	Play	6
	Compatibility	6
	Listen to the iPod/iPhone	6
	Adjust volume	6

5	Other features	7
	Charge the iPod/iPhone	7
	Synchronize time	7
	Play from an external device	7

6	Specifications	8
	Amplifier	8
	General information	8

7	Troubleshooting	9
----------	------------------------	----------

1 Important

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Safety

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.

- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs.
- ⑩ Apparatus shall not be exposed to dripping or splashing.
- ⑪ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑫ Only use attachments/accessories specified by the manufacturer.
- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Note

- The type plate is located on the bottom of the apparatus.

2 Your docking speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Introduction

With this docking speaker, you can:


- listen to audio from your iPod/iPhone.
- synchronize time with that on your iPod/iPhone.
- listen to audio from an external audio player.
- charge your iPod/iPhone.

What's in the box

Check and identify the contents of your package:

- Main unit
- AC power adaptor
- Printing materials

Overview of the main unit

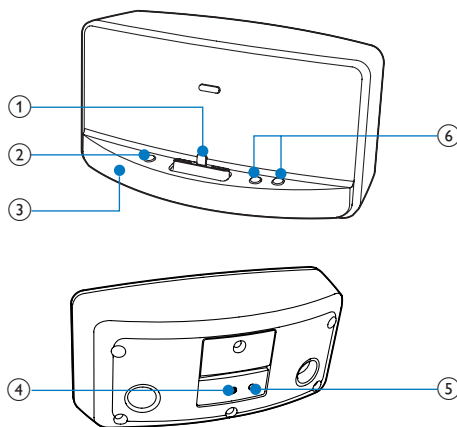

- ① **Dock for iPod/iPhone.**
- ② **☼**
 - Adjust the brightness of LED screen.
 - Select time display format.
- ③ **LED screen**
 - Display the clock after the clock is automatically synchronized with a connected compatible iPhone/iPod.
- ④ **Power socket**
 - Connect the power adaptor.
- ⑤ **AUDIO IN**
 - Connect an external audio player.
- ⑥ **+/-**
 - Adjust volume.

3 Prepare


Always follow the instructions in this chapter in sequence.

Connect power



Caution


- Risk of product damage! Make sure that the power supply voltage matches the voltage printed on the bottom of the unit.
- Risk of electric shock! When you unplug the AC adaptor; always pull the plug from the socket. Never pull the cord.
- Before you connect the AC adaptor; make sure that you have completed all the other connections.

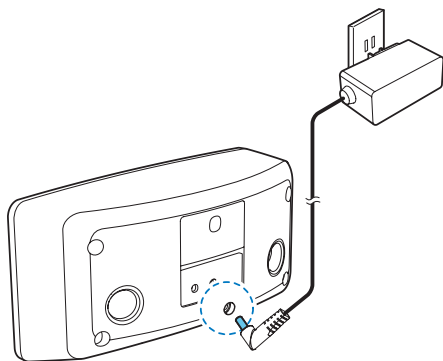


Connect the AC power cord to

- the power socket on the back of the unit.
- the wall power socket.

Adjust brightness

To adjust the brightness of display panel, press  repeatedly.

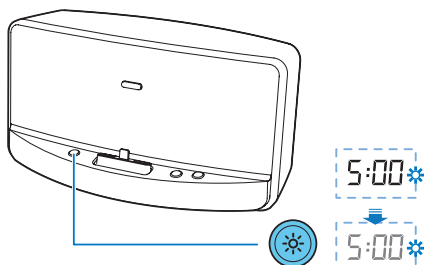

4 Play


Compatibility

Made for Apple iPod/iPhone models with lightning connector as follows:

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 5

Listen to the iPod/iPhone


- 1 Load your iPod/iPhone.

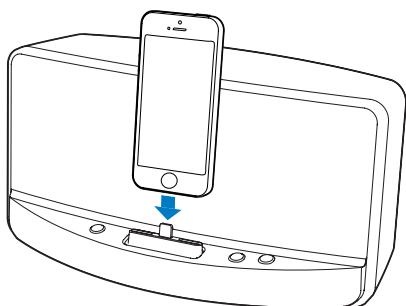

- 2 Play audio files from your iPod/iPhone.
↳ The audio comes out through the unit.

Adjust volume

Press +/- repeatedly to increase/decrease volume.

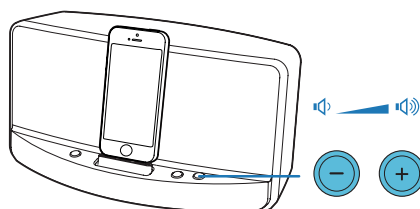


5 Other features


Charge the iPod/iPhone

When the unit is connected to power, the docked iPod/iPhone begins to charge.

Synchronize time


After docking your iPod/iPhone onto the unit, the time on your iPod/iPhone is displayed on the panel of the device automatically.

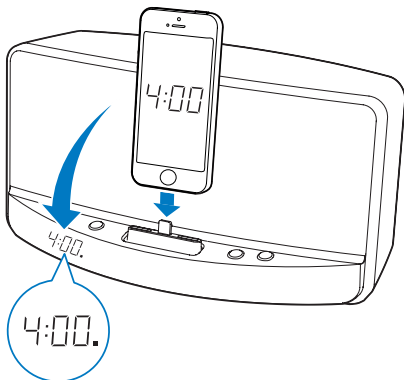

- Press and hold the  button to switch between 12 hour and 24 hour time format.
 - ↳ In 12 hour format, if a dot is displayed behind the last minute digit, the current time is in the afternoon or evening.

Play from an external device

You can also listen to an external audio player through the unit.

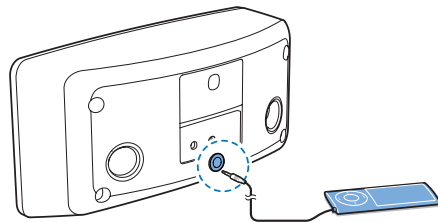

Connect a 3.5mm audio link cable (not supplied) to:

- the **AUDIO IN** socket on the back of unit.
- the headphone socket on an external audio player.

6 Specifications

Amplifier

Rated Output Power	2 X 2 W RMS
Signal to Noise Ratio	>65 dB
AUX IN	0.6 V RMS 10 kohm

General information

AC Power	Model: OH-1015A0592000U1-UL Input: 100-240 V ~, 50/60Hz, 350mA; Output: DC 5.9V === 2.0 A
Operation Power Consumption	<10 W
Standby Power Consumption	<1 W
Dimensions - Main Unit (W x H x D)	216 x 102 x 112 mm
Weight - Main Unit	0.68 kg

7 Troubleshooting



Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the philips web site (www.philips.com/support). When you contact philips, ensure that your apparatus is nearby and the model number and serial number are available.

No power

- Make sure that the AC power adaptor of the device is connected properly.
- Make sure that there is power at the AC outlet.

No response from the speaker

- Disconnect and reconnect the AC power cord, and then turn on the docking speaker again.
- If you are playing from an external audio device, check if the device works properly.

No sound

- Adjust the volume.
- Check if the unit is properly connected to power.
- If you are listening to an audio from an external audio device, adjust the volume from the external audio device.



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

AD305_37_UM_EN_V1.0

