



SPA520/93
ZH-CN 快速入门指南

在以下网站上注册产品并获得支持
www.philips.com/support

简体中文

1 注意事项

重要安全说明

- 阅读并遵循所有说明。
- 在任何音源模式下，必须使用USB连接线连接音箱，得到供电系统方可正常工作；
- USB连接线必须连接电脑设备才可使用扩展USB功能；
- 请使用适当音量来欣赏音乐，避免损伤您的听力系统；
- 音箱内有电危险，请勿自行拆解，以避免触电和影响保修；
- 产品长期不使用时，请断开所有供电电源；
- 避免曝晒、雨淋、渗水，避免长期置于高温、潮湿环境中使用。

2 安装及操作说明

- 使用USB连接线连接电脑和音箱，USB自动提供电源供电；
- 使用音频线连接电脑、音箱、低音炮设备播放音源；
- 使用结束后，断开USB转接线和音频连接线。


3 产品信息

- 峰值功率 60W
- 额定功率 25W + 3W*2
- 电源输入 DC 5V
- 频响范围 100Hz ~ 20kHz
- 长条音箱 L400*W51*H50MM
- 重低音炮 L220*W180*H250MM


注

- 产品信息如有更改，恕不另行通知。

4 物品清单

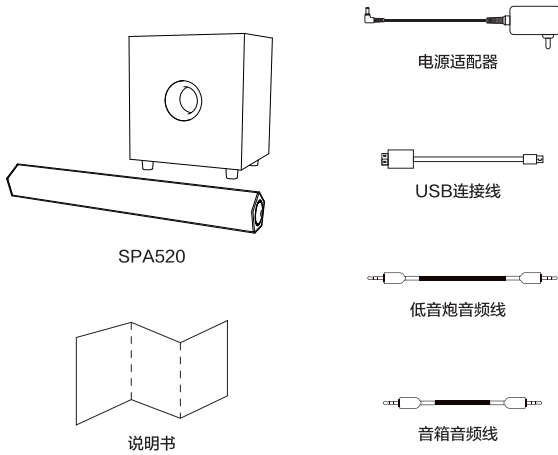

5 功能按键指示图

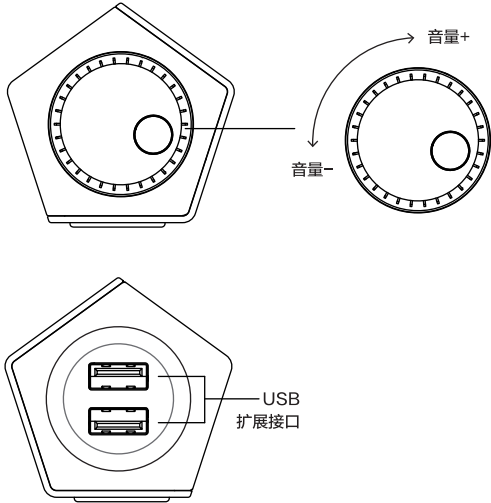



尺寸：L300*W184.5MM；2折页；正反面

材质：80G书写纸 单黑印刷(RoHS/REACH) 入门指南与盾牌为首尾封面



Philips and the philips shield Emblem are registered trademarks of koninklijke philips N.V. and are used under license.This product has been manufactured by and is sold under the responsibility of MMD HongKong Holding Linited. or one of its affiliates, and MMD HongKong Holding Limited is the warrantor in relation to this product. Philips和Philips盾徽是Koninklijke Philips N.V.的注册商标，并经许可后使用。

SPA520/93_UM_V1.0

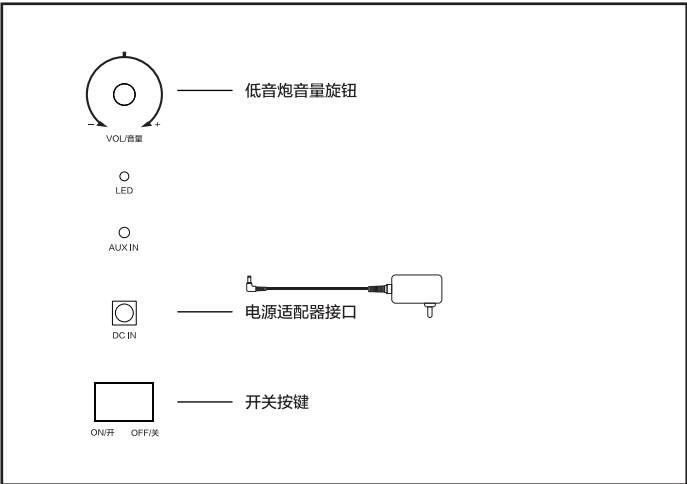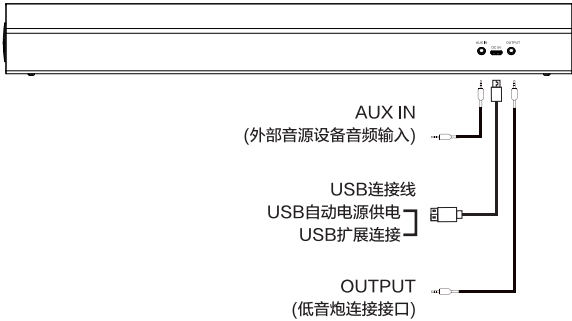

6 故障种类和处理方法

- 连接产品后没有声音怎么办？
检查USB连接线是否正确插入产品和电脑或供电设备，再检查音频线是否正确插入产品和设备。
- 连接产品后扩展器功能无法使用？
检查USB连接线是否正确插入电脑，再检查电脑USB接口驱动是否有安装，如还是不能正常使用，请与我们售后联系。
- 连接产品后如何连接低音炮？或低音炮不工作怎么办？
检查低音炮电源线和开关是否正常，再检查低音炮音频线是否连接正常。

Name of the Parts 部件名称	Hazardous Substance 有害物质					
	Pb 铅	Hg 汞	Cd 镉	Cr(VI) 六价铬	PBB 多溴联苯	PBDE 多溴二苯醚
Housing 外壳	O	O	O	O	O	O
Loudspeakers 喇叭单元	O	O	O	O	O	O
PWBs 电路板组件	X	O	O	O	O	O
Accessories 电源线，连接线	X	O	O	O	O	O

This table is compiled according to SJ/T 11364.
本表格依据SJ/T 11364的规定编制。

O : Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.
O : 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

X : Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.
X : 表示该有害物质至少在该部件的某一均质材料中含量超出 GB/T 26572 标准规定的限量要求。



This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

这标志标识的期间(10年)是电子电气产品中有有害物质在正常使用的条件下不会发生外泄或突变，电子电气产品用户使用该电子电气产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。