First time flushing / New filter flushing

- 1. Fill the tank with tap water up to the "Max" line. Place the filtered water jug in position. Plug in the machine, and press and hold the "Library" button for 3 seconds. When you hear a beep, the machine will start flushing.
- 2. When the progress percentage flashes, empty the filtered water jug and put it back. When " ⟨x " flashes, empty the tap water tank, refill it with tap water up to the "Max" line, and put it back.
- 3. When the progress shows "90%" and flashes, no need to empty the filtered water jug. Place a container with volume at least 2 liters under the water outlet. Press " (a) " . When it shows "100%", the flushing process is complete.








Ice Cube production control panel

Start ice cube and chilled water production:

- ① Press and hold " to cobe" for 3 seconds
 ② Wait until " ♣ " " ♣ " turns from flashing to constant white
- 🚨 "%" indicates the preparation progress of each batch of ice cubes.

Stop ice cubes and chilled water production, and empty the ice cube container and chilled water tank:

- 1 Press and hold "lee cube" for 3 seconds
- ② Place a large capacity container at the water outlet, while the " 🔏 " and " 🛠 " light is flashing, short press " ((a)" to discharge water
- ③ Wait until the emptying progress reaches 100%
- While emptying the water tank, take out the ice box and pour out the ice cubes

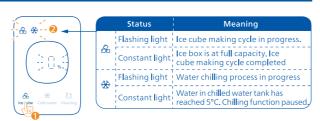



Chilled Water production control panel

Start chilled water production (without ice cubes production):

- 1) Press and hold " Cold water " for 3 seconds
- ② Wait until " * turns from flashing to constant white

2 ** •		Status	Meaning
		Light off	Chi ll ed water making function is not activated
(II) I 1 1 1 1 1 1 1 1 1	**	Flashing light	Chi ll ed water making in process
		Constant light	Water in chilled water tank has reached 5°C. Chilling function paused.
Ice cube Cold pater Cleaning			

Stop chilled water production, and empty the chilled water tank:

- ① Press and hold " cold water " for 3 seconds
- ② Place a large capacity container at the water outlet, while " (a) " light is flashing, short press " (a) " to discharge water
- 3 Wait until the emptying progress reaches 100%




PHILIPS

ADD6922


How to use 使用指南



Water Filtration and Water Dispensing control panel

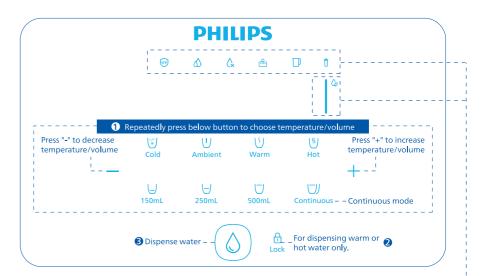

	Status	Meaning		
(v)	Constant white light	UV sterilization in process.		
۵	Constant white light	Filtration in process		
	Flashing white light	The filtration process is on going, so there isn't enough water in the filtered jug to be taken from the water outlet yet.		
	Flashing white light	The tap water in the tap water tank has not been replaced for a long time.		
Ç,	Flashing red light	The tap water in the tap water tank is at a low level or the water quality is poor, please empty the remaining water in the tank and refill it with fresh tap water		
	* The remaining water in the tap water tank will be a mixture of RO drain water and fresh tap water. The tap water tank should always be fully emptied before refilling it with fresh tap water.			
å	Constant white light	Ice box is in place.		
	Flashing white light	ce box is not in place. Please put it back in time after taking out the ice		
	Constant white light	Filtered water jug is in place.		
ן ש	Flashing white light	Filtered water jug is not in place. Please put it back before dispensing water.		
	Constant white light	Filter is within its lifespan, feel free to use.		
Ü	Flashing red light	The filter lifespan has almost expired. It is necessary to promptly purchase a replacement filter.		
	Red light on	The filter lifespan has expired. It is crucial to replace the filter promptly.		
6	White l ight	The water quality is good and safe to drink		
	Yellow light	Recommended to discard the water in the filtered water jug and run the filtration process again		

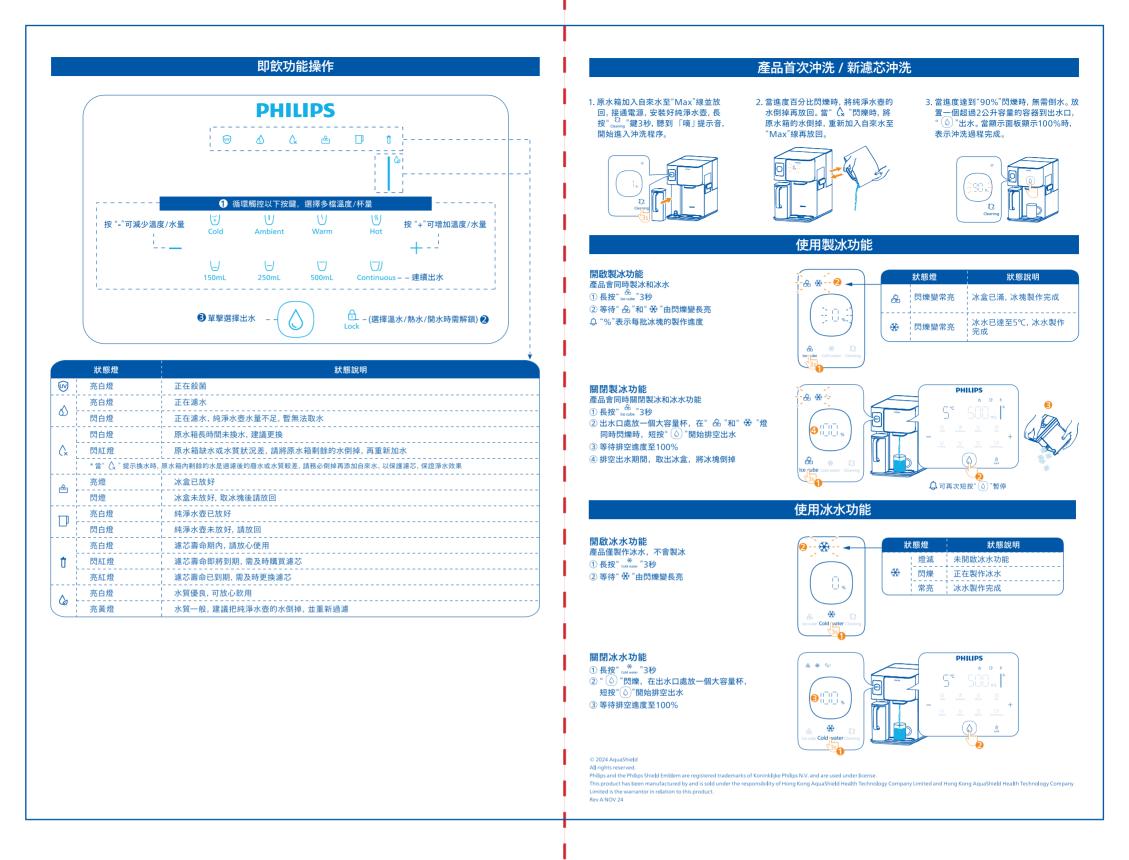

技术要求:

- 1、材质: 150g双面铜版纸;
- 2、彩色印刷 (备注CMYK); 双面印刷
- 3、尺寸: 145*210mm(折叠后尺寸); (虚线为折线)
- 4、表面覆哑膜;
- 5、产品无脏污、翘边翘角及破损现象;
- 6、产品需符合RoHS相关法律要求。
- C0 M100 Y0 K2
- C100 M71 Y0 K2
- C0 M54 Y100 K1