


# PHILIPS




## AMBILIGHT tv

Quick Start Guide

OLED810/OLED820 Series

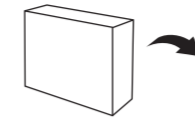

Tool needed for assembly

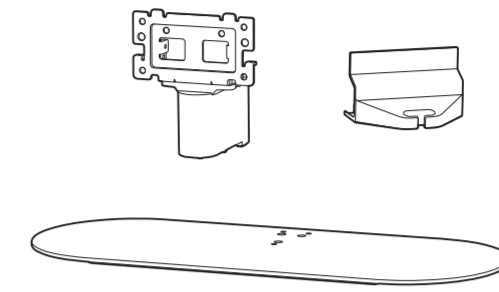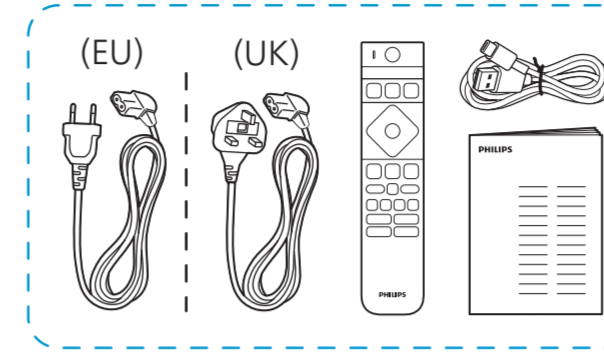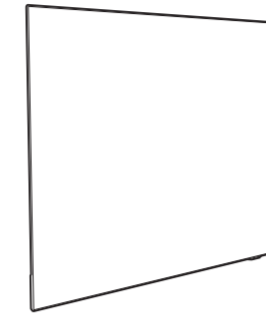

42"/48"/55"/65"  
(M5xL14) : X4  
42"/48"/55"/65"  
(M5xL14) : X3



**1** 42"/48"/55"

65"

**2**

**3**

**A Desk Placement**

**B Wall Placement**

**A**

**Recommended Wall Distance**

10-20 cm

**4** **Get Connected**

[www.philips.to/smartTV](http://www.philips.to/smartTV)

The Philips Smart TV app lets you switch channels and adjust the volume - just like a remote control.

**5** **Register and Support**

[www.philips.com/TVsupport](http://www.philips.com/TVsupport)

Register your TV, find out more, download the user manual and get support

1. Remove the back cover.  
2. Remove the old battery.  
3. Insert the new battery with the correct polarity.

1 2 3  
4 5 6  
7 8 9

Help

**English** Read the safety instructions.

**Български** Прочетете инструкциите за безопасност.

**Čeština** Přečtěte si bezpečnostní pokyny.

**Hrvatski** Pročitajte sigurnosne upute.

**Dansk** Læs sikkerhedsforskrifterne.

**Deutsch** Lesen Sie die Sicherheitshinweise.

**Ελληνικά** Διαβάστε τις οδηγίες ασφαλείας.

**Eesti** Lugege ohutusnõudeid.

**Español** Lea las instrucciones de seguridad.

**Français** Lisez les consignes de sécurité.

**Italiano** Leggere le istruzioni di sicurezza.

**Қазақша** Қорғаныстық нұсқаулар.

**Latviešu** Izlasiet drošības norādījumus.

**Lietuvių** Perskaitykite saugos instrukcijas.

**Magyar** Olvassa el a biztonságási utasításokat.

**Nederlands** Lees de veiligheidsvoorschriften.

**Norsk** Les sikkerhetsforskriftene.

**Polski** Zapoznaj się z instrukcjami bezpieczeństwa.

**Português** Leia as instruções de segurança.

**Română** Citiți instrucțiunile de siguranță.

**Русский** Читайте инструкции по технике безопасности.

**Srpski** Pročitajte bezbednosna uputstva.

**Slovenščina** Preberite varnostna navodila.

**Slovenský** Prečítajte si bezpečnostné pokyny.

**Suomi** Lue turvaohjeet.

**Svenska** Läs säkerhetsinstruktionerna.

**ภาษาไทย** โปรดอ่านคำแนะนำด้านความปลอดภัย

**Türkçe** Güvenlik talimatlarını okuyun.

**Українська** Читайте інструкції з техніки безпеки.

**العربية** قراءة تعليمات السلامة.

**עברית** קראו את הוראות הבטיחות.

FSC Logo H:12mm

FEUILLE

Séparer les éléments avant de lire

Hey Google

3 sec

<= 1m

COMMON INTERFACE CAM

USB 2

USB 1

HDD

HDMI 3/4

HDMI

**B**

1

(42") (48"/55"/65")

2

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
42" / 105	300	300	M6	12-16
48" / 121	300	300	M6	10-15
55" / 139	300	300	M6	10-15
65" / 164	300	300	M6	10-15

TV

**Recommended Wall Distance**

7-10 cm

POWER (EU) POWER (UK) SAT (EU) TV ANTENNA

HDMI 1 4K 120HZ

HDMI 2 ARC/eARC 4K 120HZ

DIGITAL AUDIO OUT (48"/55"/65")

NETWORK

DIGITAL AUDIO OUT (42")

SATELLITE COAXIAL

COAXIAL

Ultra High-speed HDMI cable

TOSLINK

TOSLINK

ROUTER

ROUTER

HDMI eARC

**i**

**Recommended wall distance for the best Ambilight Experience**

Wall

TV

B 7 to 10 cm

A 10 to 20 cm

cm

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27

**!**

PHILIPS

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome