



Television Quick Start Guide 7200 series



Tool needed
for assembly

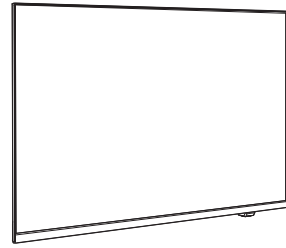


50"/55"/65"

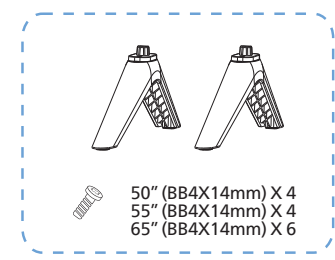


50" (BB4X14mm) X 4
55" (BB4X14mm) X 4
65" (BB4X14mm) X 6

50"/55"/65"

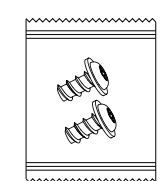



M:Machine Screw
(50"/55"/2 Pieces/bag)
(65"/3 Pieces/bag)

50"/55"/65"

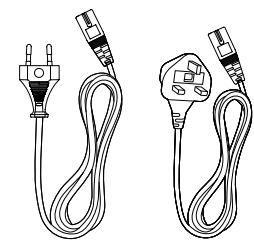

(/40)

(/40)

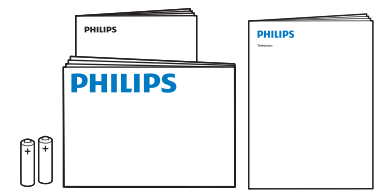


The actual accessories may differ from the illustrations, which are for reference purposes only.


M:Machine screw

ST:Flat tail self-tapping screw


1 50"/55"/65"

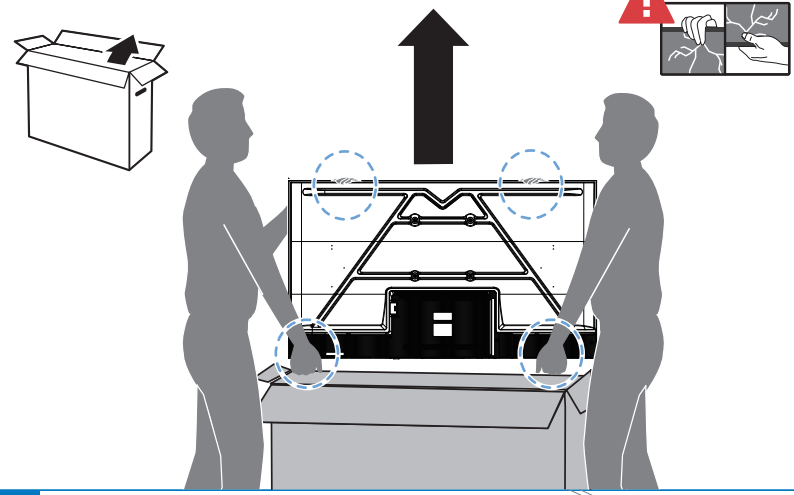


2

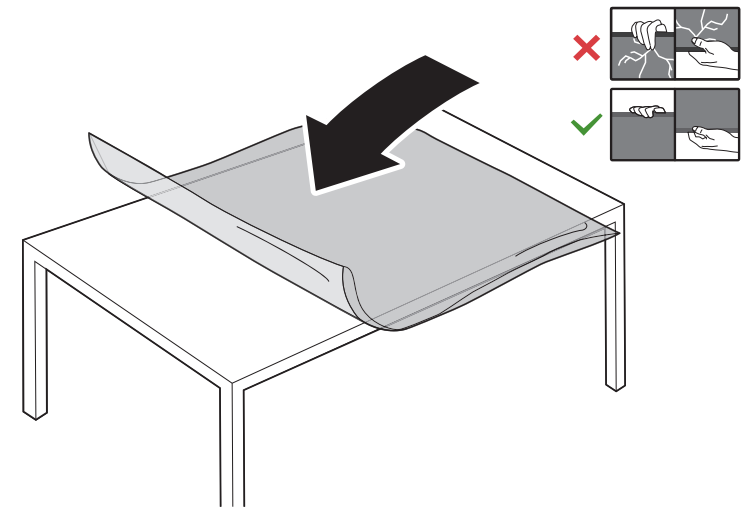


3

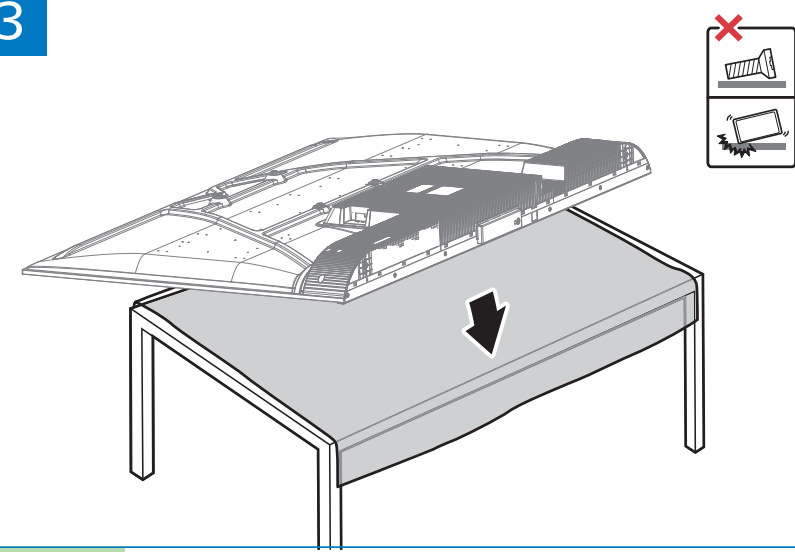


A Desk Placement

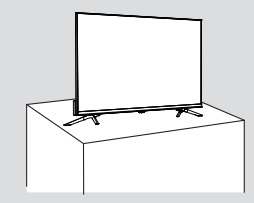

B Wall Placement

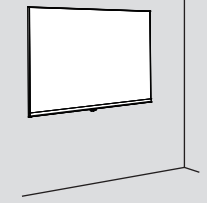

4

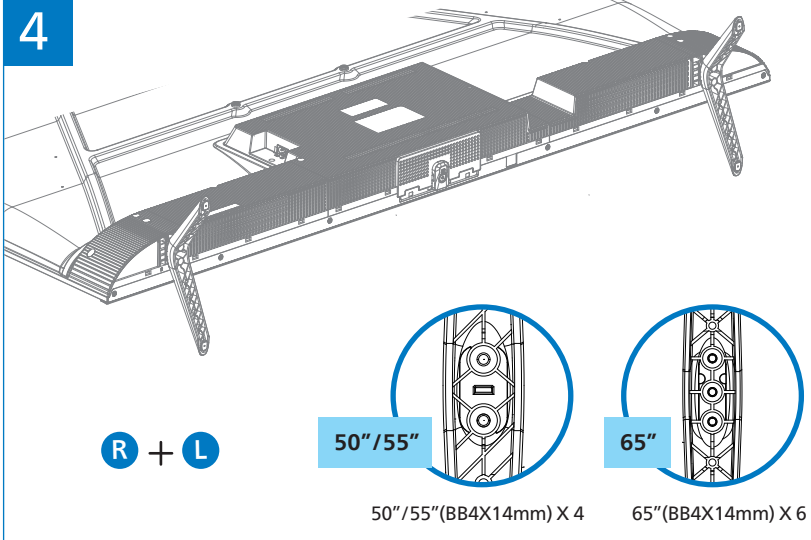

R + L


50"/55"

65"

50"/55"(BB4X14mm) X 4

65"(BB4X14mm) X 6


A

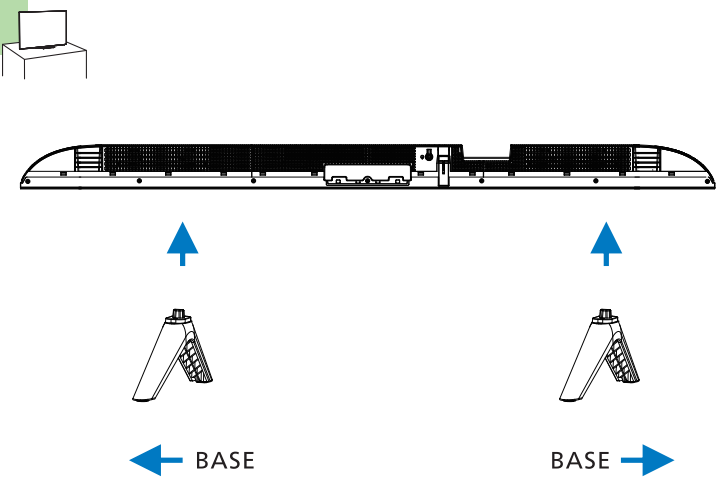


← BASE

BASE →


50"/55"

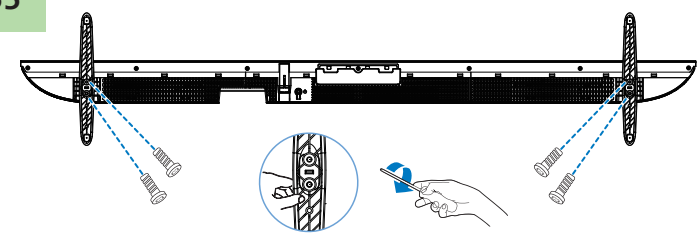

65"


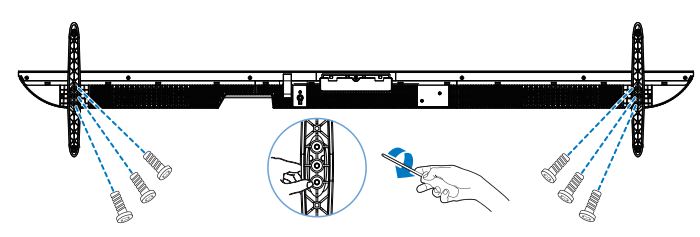


Desk Placement (using table stand)

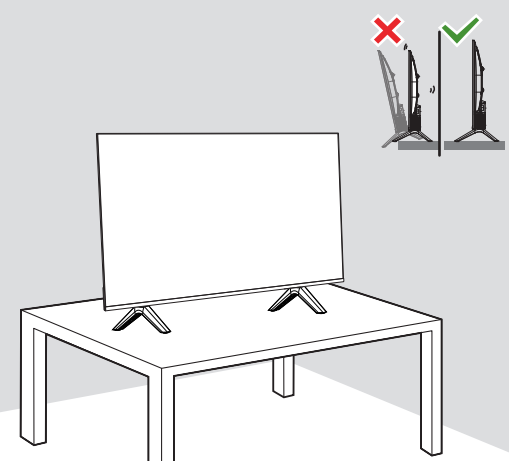

B


Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
50"/126	200	200	M6	9~10mm
55"/139	200	200	M6	9~11mm
65"/164	300	200	M6	9~11mm

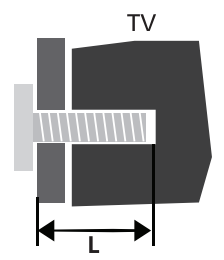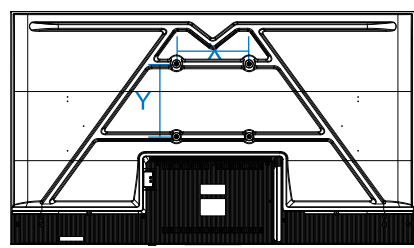

Recommended Wall Distance



7-10 cm

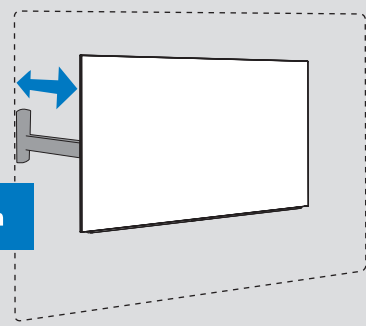

4

Register and Support



www.philips.com/TVsupport

Register your TV, find out more,
download the user manual and
get support




1




To install batteries, slide the battery door up.

2

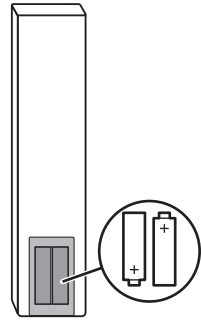


Use 2x AAA 1.5V (included)





3

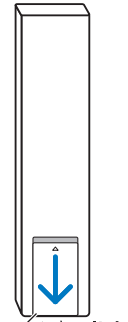

Slide battery door back in place.

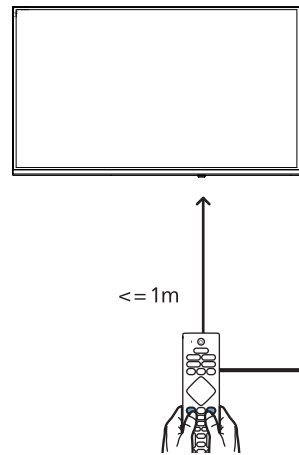

$\leq 1\text{m}$

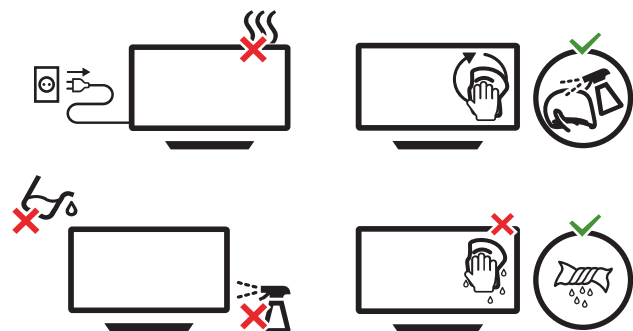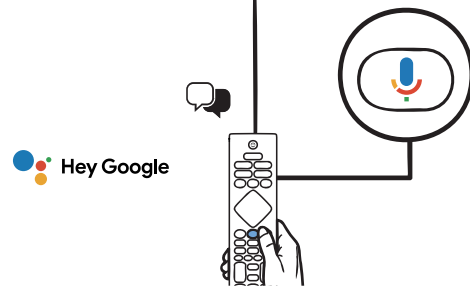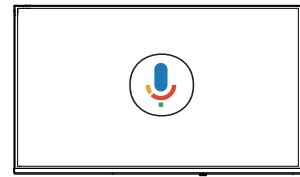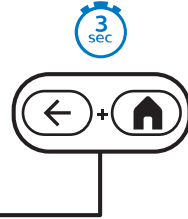


English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.

Deutschh Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.



ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。

العربية قراءة تعليمات السلامة.



50"/55"/65"

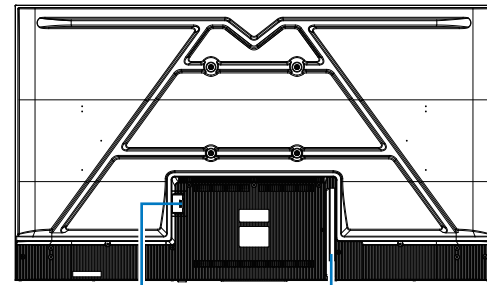

POWER (MO)




POWER (TZ/KE/GH)

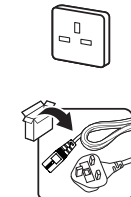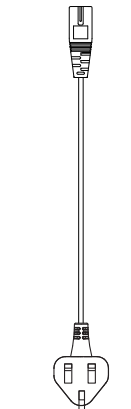


DIGITAL AUDIO OUT (SPDIF)



TV ANTENNA (RF)




SAT (RF S/S2)




AV IN



NETWORK



USB 2 5V 500mA
USB 1 5V 900mA




HDMI 3



HDMI 2 (eARC)



Ultra High-speed HDMI cable

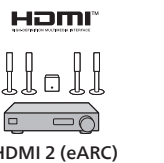

HDMI 1



EARPHONE



All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025© TP Vision Europe B.V. All rights reserved. www.philips.com/welcome