

AUT8950/79

技术要求:

- 1、材质: 150g铜版纸;
- 2、彩色印刷;
- 3、尺寸: 210*297mm;
- 4、表面覆哑膜;
- 5、产品无脏污、翘边翘角及破损现象;
- 6、产品需符合RoHS相关法律要求。

PHILIPS

AUT8950
AUT8990



How to use

Technical drawings & Installation
requirements AUT8950/79

W
Lead Free
AS 3497
WM-060214



Step 1: Install the three-way ball valve

- Insert the nut onto the 3/8" PE pipe and insert the pipe into the convex connector.
- Install the three-way ball valve on the cold water valve.

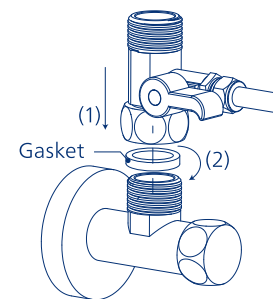
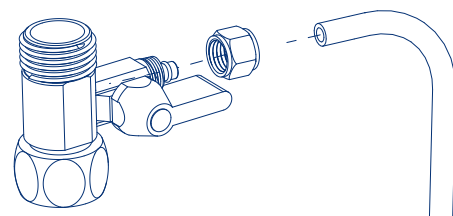


Step 2: Install the faucet

- A 29mm faucet hole is required.

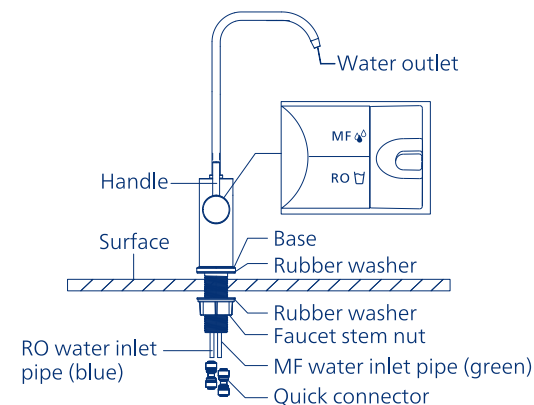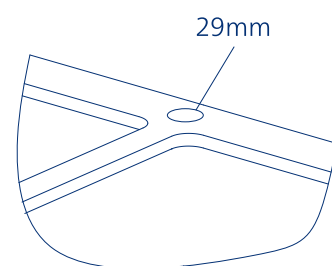

Step 3: Install the main unit

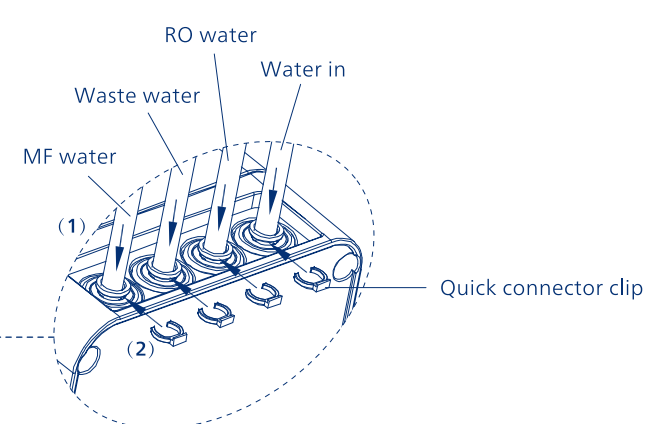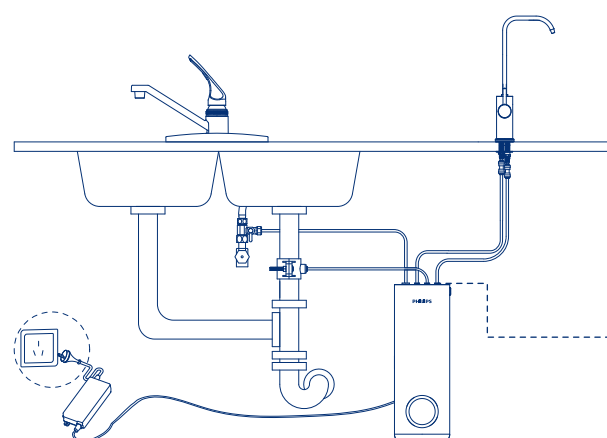

Step 4: Before the first-time use

After the automatic flush is completed, we recommend performing a manual flushing. The specific steps are as follows:

- Turn on the MF water and let it run for 15 minutes.
- Return the tap handle to the middle position and wait for 10 seconds.
- Turn on the RO water and let it run for another 20 minutes.

