

## Disassembly SOP for 27B1N3800

### 1. Suggest Tools

Here are some tools that can be used for the LCD monitor's service and repair.

#### Philips-head Screwdriver

Use a Philips-head screwdriver to fasten/remove the K- or B-typed screws



P/N: N/A

#### Gloves

To protect LCD Panel and your hand



P/N: (L) N/A (M) N/A

#### C/D Disassembly Tool

Use C/D Disassembly Tool to open cosmetic cover and avoid scratch.



P/N: N/A


#### Spacer Screwdriver

Use a spacer screwdriver to fasten/remove spacer screws or hex screws.




P/N: N/A

2. While keeping the release button pressed, tilt the stand and slide it out.

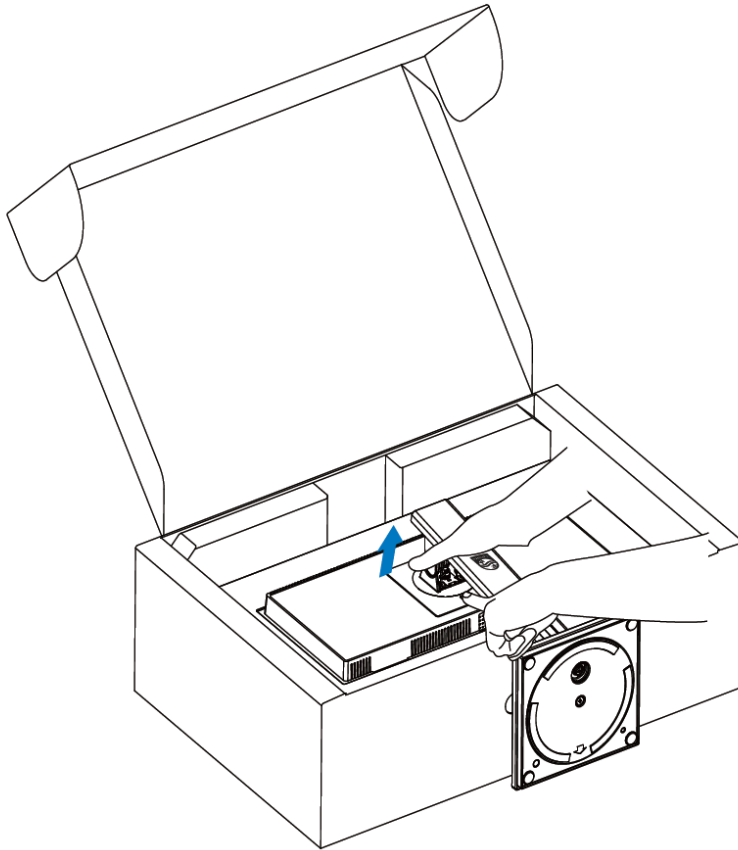


3. Remove the screws.

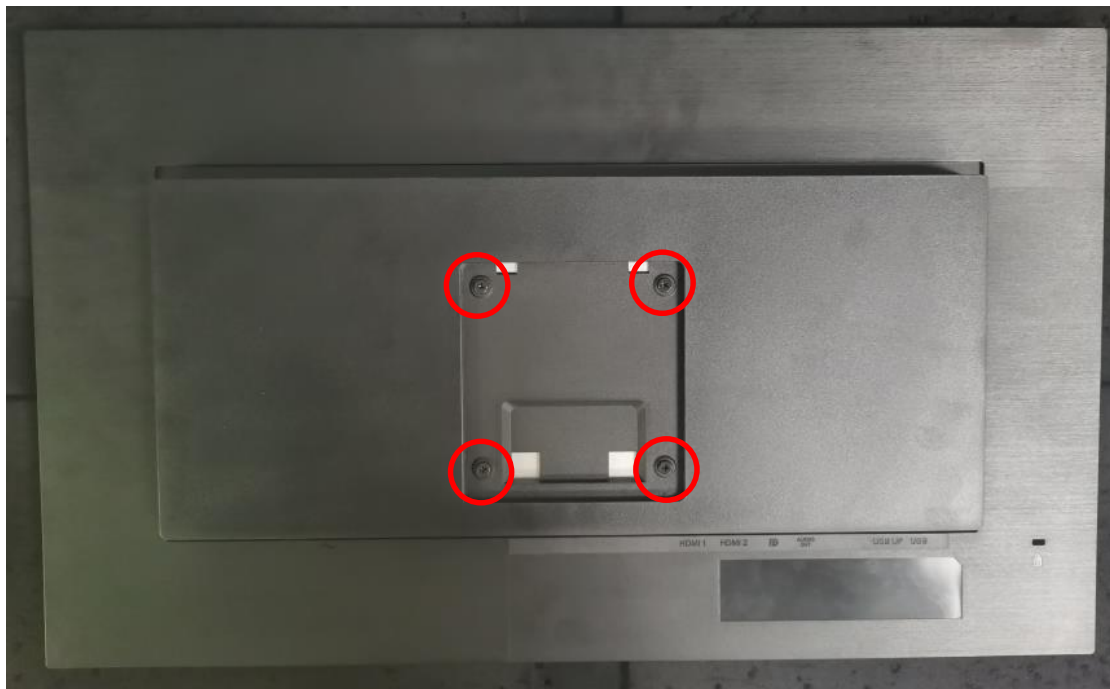


4. Use disassembly tool to open all the latches along the edge of the rear cover, then remove the rear cover.




5. Remove tapes and disconnect connectors.

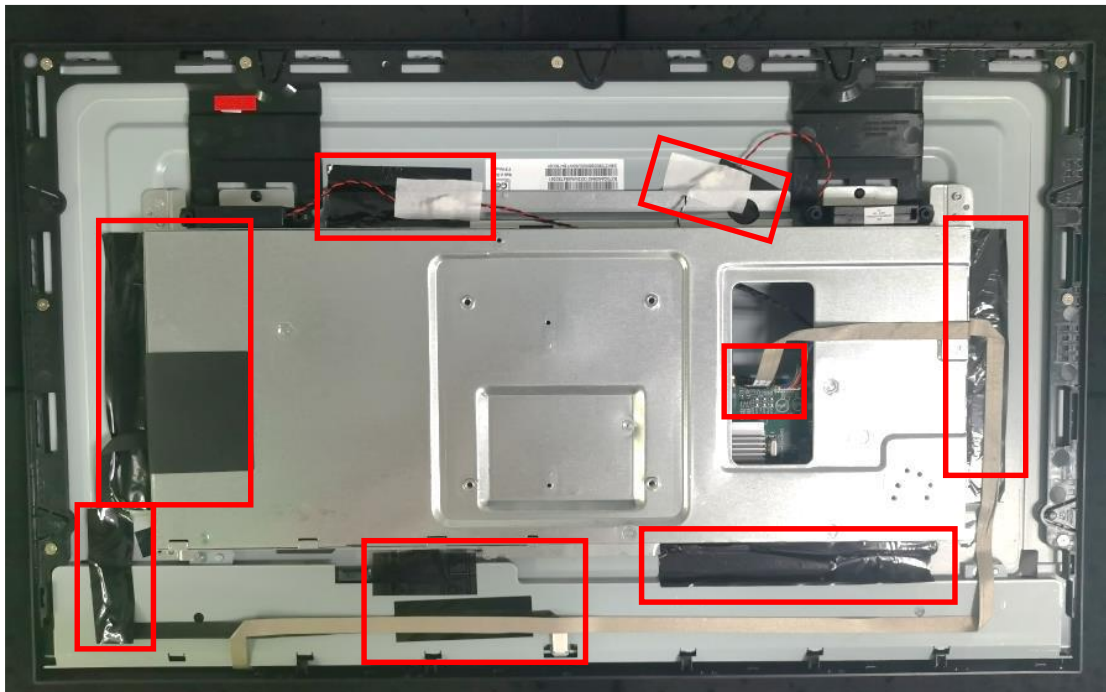

6. Remove tape and disconnect connectors.

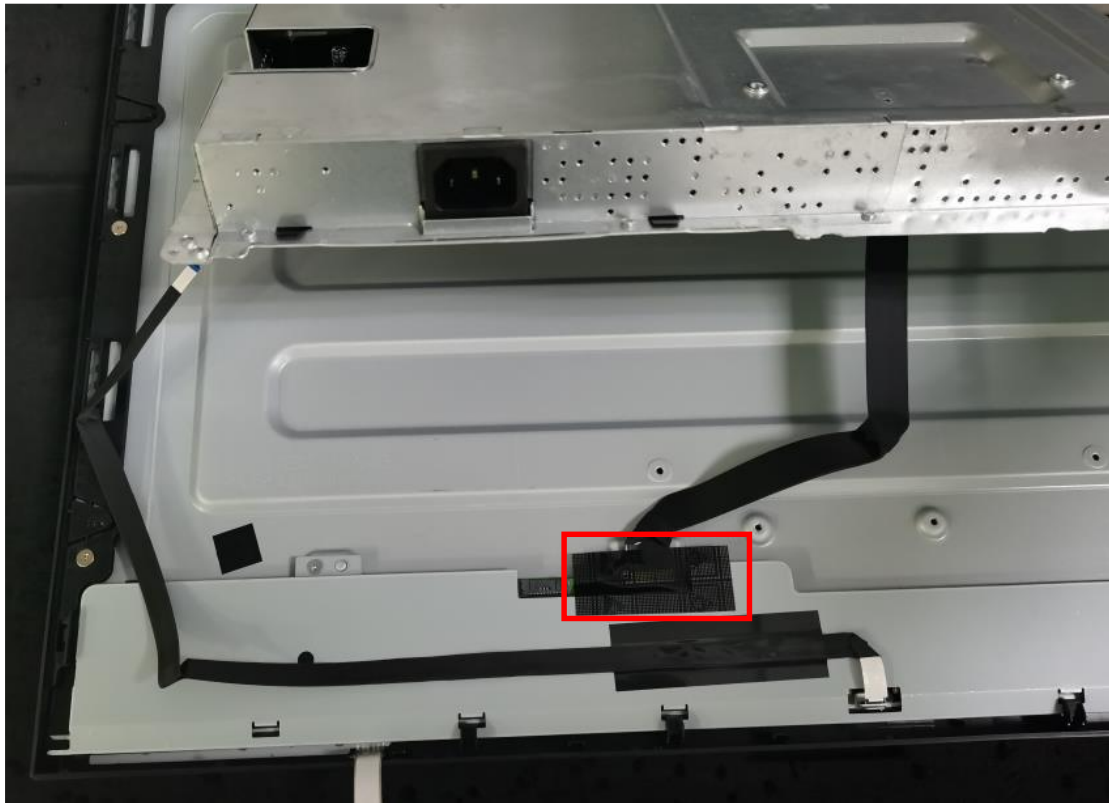


7. Remove Mylar.

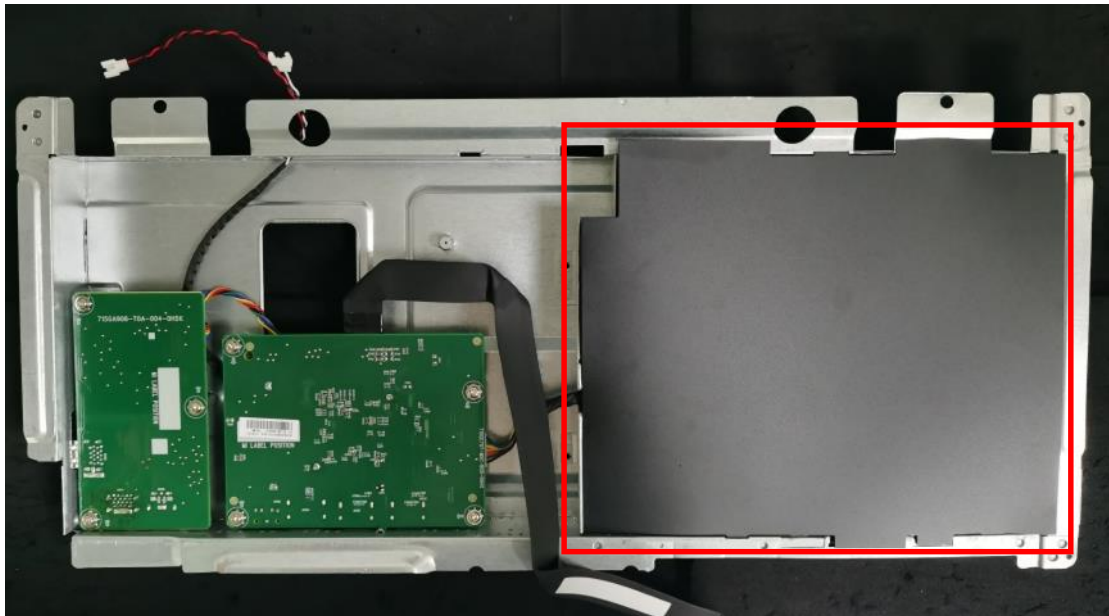




8. Remove screws to get main board, power board and USB board.

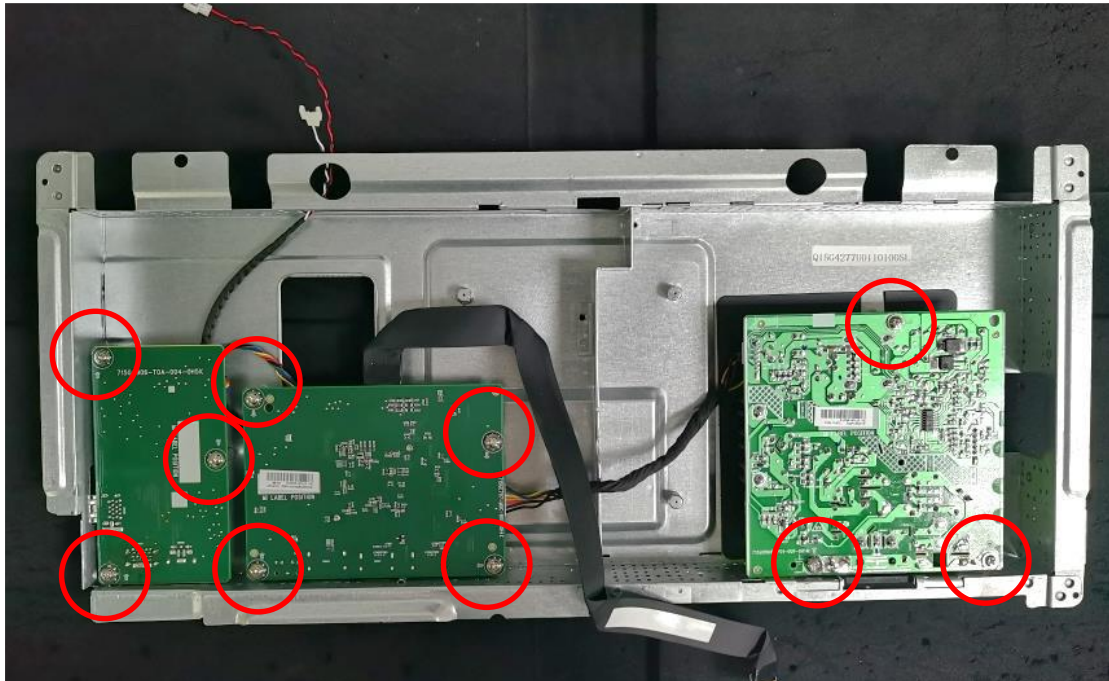

Main board



Power board

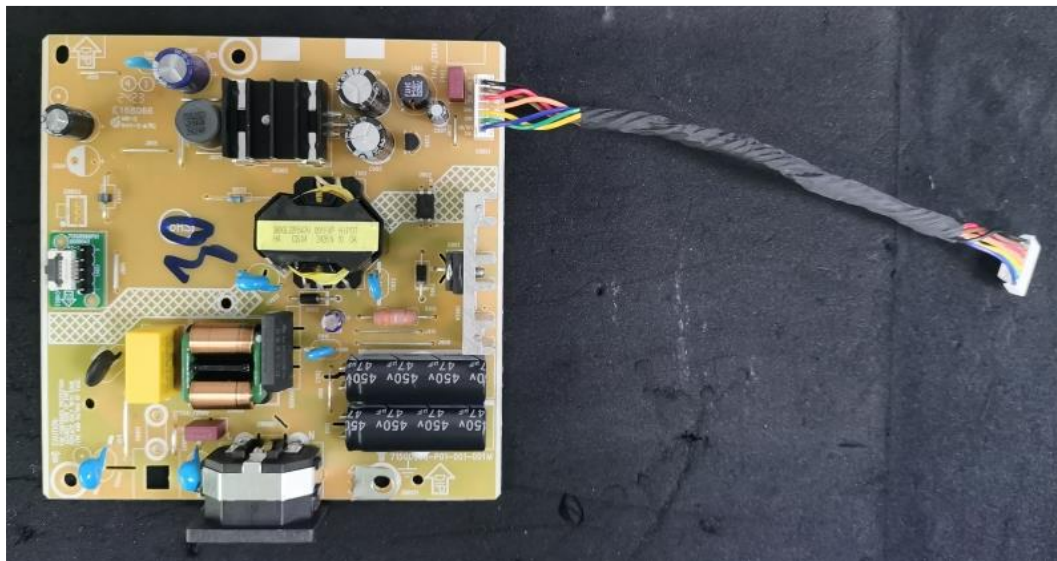

USB board



9. Remove screws to get middle frame and panel.

