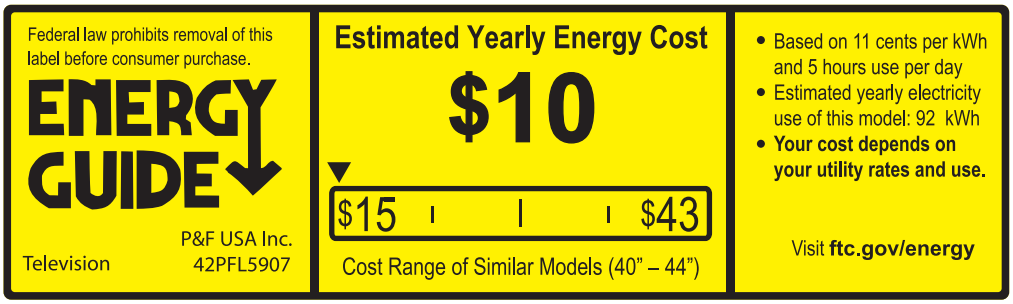

[NOTE]

Put an 'Energy Guide Label' on the front cabinet directly.
Do not put it on PE protect.