

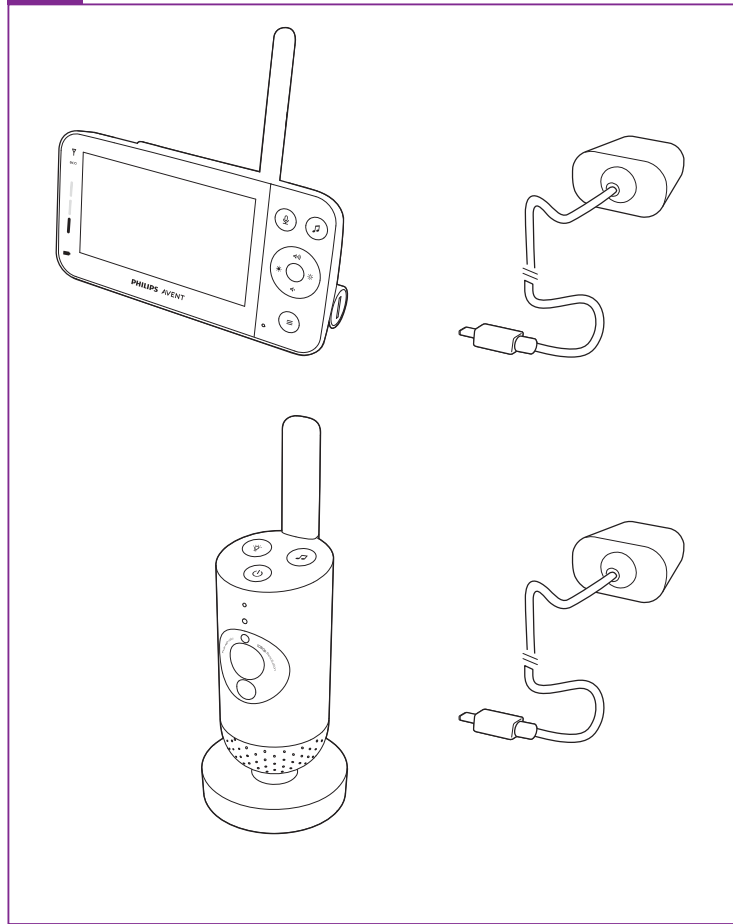
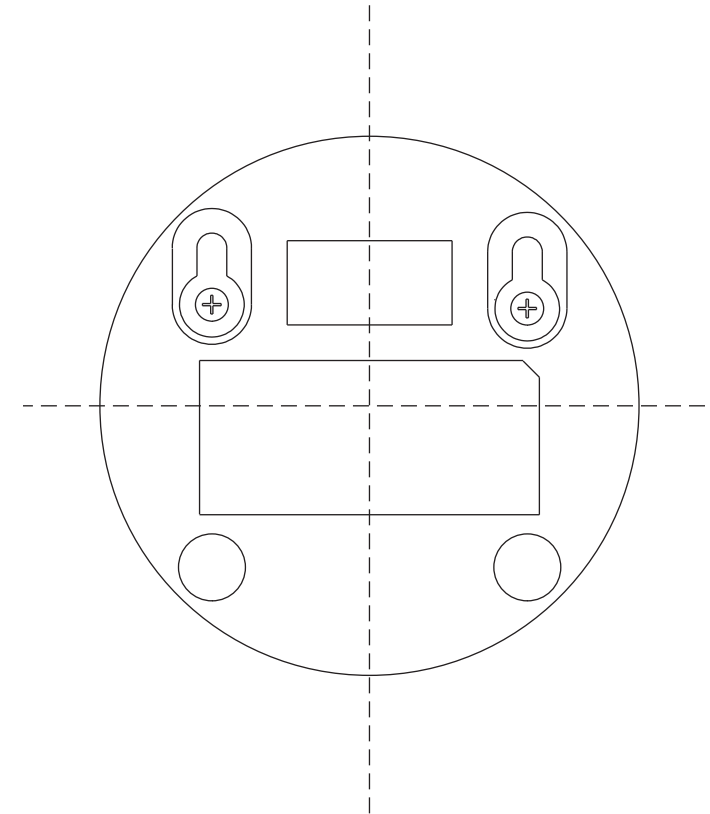
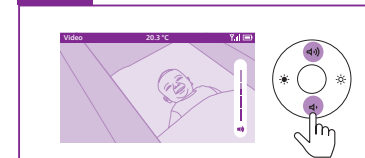
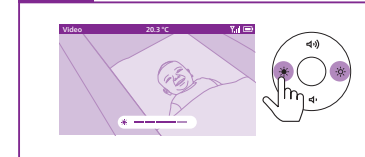
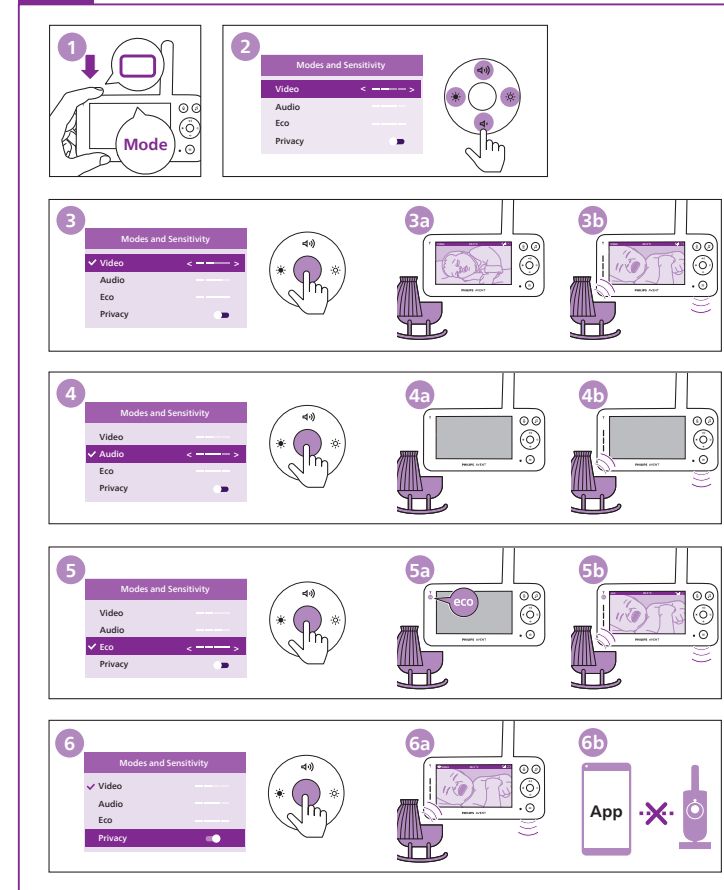
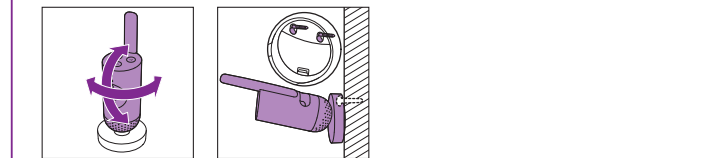
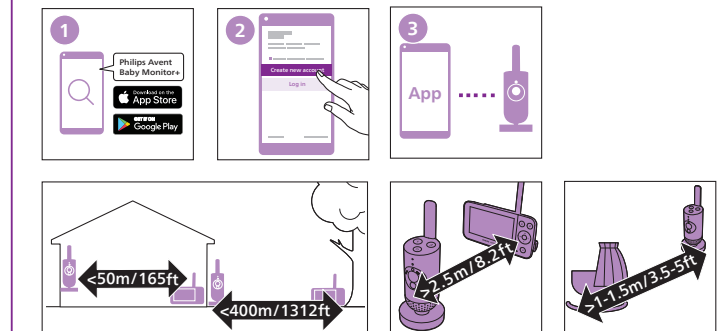


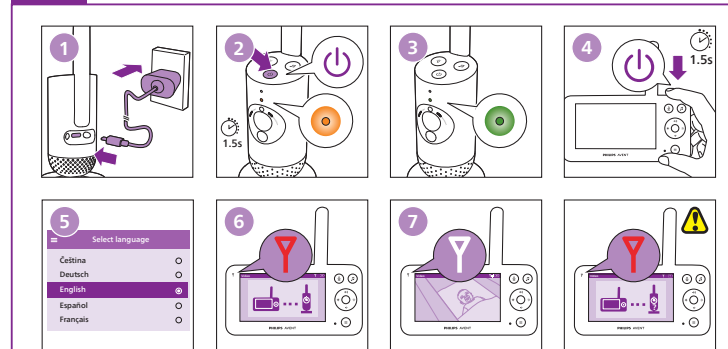

www.philips.com/support

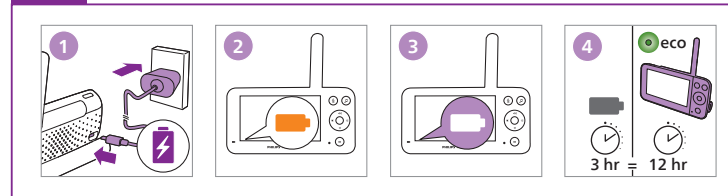

Music icon

1. Press the music icon on the baby unit.

2. Soothing sound menu: Play, Select sound, Volume (6/8), Timer (10 min).

3. Soothing sound menu: All lullabies, Bas Bas Black Sheep, Brahms Lullaby, Golden Summers, Hush Little Baby.

4. Soothing sound menu: Play, Select sound, Volume (< 5/8 >), Timer (10 min).

5. Soothing sound menu: Play, Select sound, Volume (5/8), Set timer (< 20 min >).

6. Soothing sound menu: Play, Select sound, Volume (5/8), Timer (20 min).

7. 20 min timer icon.

8. Baby unit display showing Soothing sound (5/8), Volume (5/8), and Timer (20 min).

9. Baby unit display showing 20 min timer.

Lightbulb icon

1. Press the lightbulb icon on the baby unit.

2. Menu: Nightlight, Zoom, Temperature alert, Connection, Settings.

3. Nightlight menu: Switch on, Brightness (low), Timer (5 min).

4. Nightlight icon.

5. Video menu: Nightlight (19:), Switch off, Brightness (low), Timer (5 min).

6. Nightlight menu: Switch off, Brightness (< low >), Timer (5 min).

7. Nightlight menu: Switch off, Brightness (high), Timer (< 20 min >).

8. Baby unit display showing Nightlight (19:), Switch off, Brightness (low), and Timer (5 min).

9. Baby unit display showing 20 min timer.

Person icon

1. Press the person icon on the baby unit.

2. Menu: Nightlight, Zoom, Temperature alert, Connection, Settings.

3. Settings menu: Language, Firmware, Licenses, App download.

3a. Select language menu: Cestina, Deutsch, English, Español, Français.

4a. Firmware menu: Baby unit firmware version: X.X.X, Parent unit firmware version: X.X.X, Your firmware is up to date.

4b. Firmware update menu: New firmware is available for the parent unit. Installation will start soon. It should take a few minutes.

5. Settings menu: Language, Firmware, Licenses, App download.

5a. Licenses menu: Written offer, Acknowledgments and License Text for any open source software used in this product. OPEN SOURCE SOFTWARE USED IN THE BABY UNIT.

Warning icon

1. Do not use the baby unit near water.

2. Do not use the baby unit near fire.

3. Do not use the baby unit with other electronic devices.

4. Do not use the baby unit with other electronic devices.

5. Do not use the baby unit with other electronic devices.

Microphone icon

1. Press the microphone icon on the baby unit.

2. Baby unit display showing microphone icon.

3. Baby unit display showing microphone icon.

Plus icon

1. Press the plus icon on the baby unit.

2. Menu: Nightlight, Zoom, Temperature alert, Connection, Settings.

3. Baby unit display showing 2x zoom icon.

Thermometer icon

1. Press the thermometer icon on the baby unit.

2. Menu: Nightlight, Zoom, Temperature alert, Connection, Settings.

3. Temperature alert menu: Switch on, High (20), Low (16), Set Unit (°C).

Wi-Fi icon

1. Press the Wi-Fi icon on the baby unit.

2. Menu: Nightlight, Zoom, Temperature alert, Connection, Settings.

3. Connection menu: Direct only, Direct + via WLAN.