



注册您的产品并在以下网站链接中了解详情
www.philips.com/welcome



本手册内容与实物可能存在差异, 请以实物为准。如产品有任何更新, 恕不另行通知。
© 2021 AquaShield
All rights reserved.
The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.

This product has been manufactured by and is sold under the responsibility of Guangdong AquaShield Health Technology Company Limited and Guangdong AquaShield Health Technology Company Limited is the warrantor in relation to this product.
Rev A MAY 21



说明书

产品功能

以市政自来水为原水, 经陶瓷滤芯处理可有效去除水中杂质、水藻、红虫等并有效抑制细菌滋生。


适用水质范围

市政自来水

主要技术参数

产品名称	飞利浦牌AWP300型 陶瓷滤芯
主要成份或部件	ABS滤芯底座
	硅藻土陶瓷滤芯
	密封圈
进水压力	0.1~0.4MPa

结构示意图

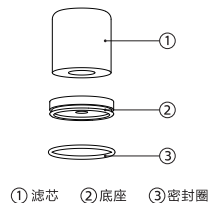

使用方法

打开滤芯包装, 取出滤芯, 撕掉滤芯保护膜。



将龙头净水器滤芯上盖逆时针旋出, 并将内部滤芯拔出。



将撕掉保护膜的新的滤芯装入龙头净水器壳体并按压到位, 将滤芯上盖顺时针旋入装配好(安装滤芯时请检查密封圈未损坏及丢失)。

打开前端龙头, 让自来水通过原水档5秒后再切换成净水档, 净水档过滤3分钟后方可使用。



注意事项

- 请确保进水温度为5~38℃, 温度过高或过低易损坏滤芯, 影响过滤功能。
- 请确保进水源为符合GB5749-2006的市政自来水, 否则易堵塞滤芯。
- 避免滤芯受到撞击后受损, 影响其正常使用。
- 滤芯使用应避免阳光直射及靠近热源, 否则易影响其使用寿命。
- 请确保进水压为0.1~0.4MPa, 水压过高易损坏产品。
- 根据不同地区水质以及使用情况, 需要定期更换滤芯。

维护保养


- 为避免滤芯很快堵塞, 每次使用之前, 请先使用原水档出水5秒, 再切换到净水档位。



- 每天第一次使用净水时, 请先在净水档位流水5秒后, 再行使用。



- 超过两天没有使用净水器, 在使用之前, 请先在净水档位流水20秒后, 再行使用。



- 超过两个星期没有使用净水器, 在使用之前, 请先在净水档位流水3分钟后, 再行使用;如果发现净化水存在异味, 请更换滤芯。



- 若净水档位流量太小或滤芯表面过脏(透过透明滤芯上盖观察), 可将滤芯拆卸下来用配备的砂纸进行打磨以清除其表面污垢。



产品售后服务指南

如果您需要了解更多信息或有任何疑问, 您可以在 www.philips.com 上咨询我们的在线支持或致电飞利浦客服热线(400 618 6222)。

装箱清单

产品型号	AWP300 (1芯装)	AWP300 (4芯装)
砂纸	x1	x1
说明书	x1	x1
合格证	x1	x1
滤芯	x1	x4

材质: 70g双胶纸, 尺寸: 40x80mm,
折页, 展开尺寸: 160x80mm