


PHILIPS


VESA Bracket

BS6B2234B

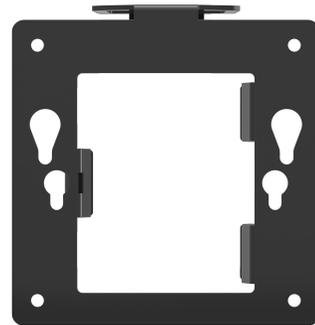

Quick Start

Register your product and get support at www.philips.com/welcome

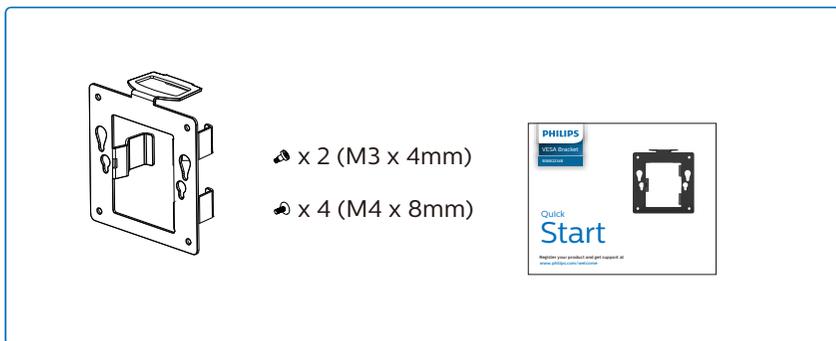

Version: M6BS6B2234Q2T




Q41G78D481316B

Compatible with Philips Height Adjustment Base of 221B6QPYE*, 221B7***E*, 221P6****, 231B7***E*, 240B7***E*, 241B6QPYE*, 241B7***E*, 241P6****, 242B7***E*, 242P7****, 272B7***E*, 272P7****


PC:

- 1 Align holes of VESA compliant device with those of bracket and screw up with the screws provided.
- 2 Clip the assembled VESA onto the bracket.

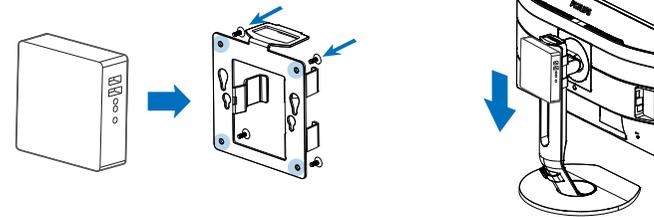

NUC:

- 1 Follow the arrows indicated on the the bracket, then slide the bracket on the stand until it's fixed.
- 2 Secure two screws to the rear cover of the NUC.

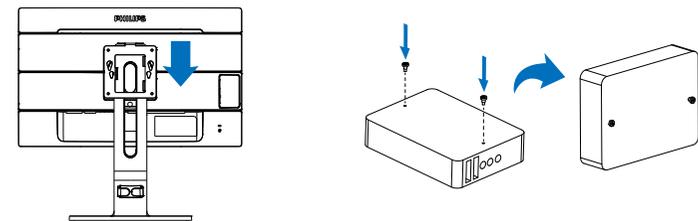

- 3 Slide the screws from up to down.

4

