



www.philips.com/welcome

ΕN	User manual	1
	Customer care and warranty	21
	Troubleshooting & FAQs	27



Table of Contents

1.	Imp 1.1 1.2 1.3	Safety precautions and maintenance1 Notational Descriptions2 Disposal of product and packing material
2.	Set 2.1 2.2 2.3 2.4	ting up the monitor4 Installation4 Operating the monitor5 MultiView9 Remove the Base Assembly for VESA Mounting11
3.	lma 3.1 3.2	ge Optimization
4.	Pov	verSensor™14
5.	м	L (Mobile High-Definition Link) 15
J.	ITIH	IL (Mobile Fign-Definition Link) 13
б .	Tec 6.1	hnical Specifications
	Tec 6.1 6.2	hnical Specifications
6.	Tec 6.1 6.2 Pov 8.1	hnical Specifications

1. Important

This electronic user's guide is intended for anyone who uses the Philips monitor. Take time to read this user's manual before you use your monitor. It contains important information and notes regarding operating your monitor.

The Philips guarantee applies provided the product is handled properly for its intended use, in accordance with its operating instructions and upon presentation of the original invoice or cash receipt, indicating the date of purchase, dealer's name and model and production number of the product.

1.1 Safety precautions and maintenance

Warnings

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your computer monitor.

Operation

- Please keep the monitor out of direct sunlight, very strong bright lights and away from any other heat source. Lengthy exposure to this type of environment may result in discoloration and damage to the monitor.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the monitor's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.
- If turning off the monitor by detaching the power cable or DC power cord, wait for 6 seconds before attaching the power cable or DC power cord for normal operation.

- Please use approved power cord provided by Philips at all times. If your power cord is missing, please contact with your local service center. (Please refer to Customer Care Consumer Information Center)
- Do not subject the monitor to severe vibration or high impact conditions during operation.
- Do not knock or drop the monitor during operation or transportation.

Maintenance

- To protect your monitor from possible damage, do not put excessive pressure on the monitor panel. When moving your monitor, grasp the frame to lift; do not lift the monitor by placing your hand or fingers on the monitor panel.
- Unplug the monitor if you are not going to use it for an extensive period of time.
- Unplug the monitor if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your monitor.
- To avoid the risk of shock or permanent damage to the set, do not expose the monitor to dust, rain, water, or excessive moisture environment.
- If your monitor gets wet, wipe it with dry cloth as soon as possible.
- If foreign substance or water gets in your monitor, please turn the power off immediately and disconnect the power cord. Then, remove the foreign substance or water, and send it to the maintenance center.
- Do not store or use the monitor in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your monitor and use it for a longer lifetime, please use the monitor in a location that falls within the following temperature and humidity ranges.

- Temperature: 0-40°C 32-104°F
- Humidity: 20-80% RH

Important information for Burn-in/Ghost image

- Always activate a moving screen saver program when you leave your monitor unattended. Always activate a periodic screen refresh application if your monitor will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen.
- "Burn-in", "after-imaging", or "ghost imaging" is a well-known phenomenon in LCD panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Service

- The casing cover should be opened only by qualified service personnel.
- If there is any need for any document for repair or integration, please contact with your local service center. (please refer to the chapter of "Consumer Information Center")
- For transportation information, please refer to "Technical Specifications".
- Do not leave your monitor in a car/trunk under direct sun light.

Note

Consult a service technician if the monitor does not operate normally, or you are not sure what procedure to take when the operating instructions given in this manual have been followed.

1.2 Notational Descriptions

The following subsections describe notational conventions used in this document.

Notes, Cautions and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold or italic type. These blocks contain notes, cautions or warnings. They are used as follows:

Solution Note

This icon indicates important information and tips that help you make better use of your computer system.

Caution

This icon indicates information that tells you how to avoid either potential damage to hardware or loss of data.

(1) Warning

This icon indicates the potential for bodily harm and tells you how to avoid the problem.

Some warnings may appear in alternate formats and may not be accompanied by an icon. In such cases, the specific presentation of the warning is mandated by the relevant regulatory authority.

1.3 Disposal of product and packing material

Waste Electrical and Electronic Equipment-WEEE



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please find out about the local regulations on how to dispose of your old monitor and packing from your sales representative.

Taking back/Recycling Information for Customers

Philips establishes technically and economically viable objectives to optimize the environmental performance of the organization's product, service and activities.

From the planning, design and production stages, Philips emphasizes the important of making products that can easily be recycled. At Philips, end-of-life management primarily entails participation in national take-back initiatives and recycling programs whenever possible, preferably in cooperation with competitors, which recycle all materials (products and related packaging material) in accordance with all Environmental Laws and taking back program with the contractor company.

Your display is manufactured with high quality materials and components which can be recycled and reused.


To learn more about our recycling program please visit:

http://www.philips.com/a-w/about/sustainability. html

2. Setting up the monitor

2.1 Installation

1 Package contents

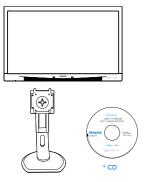











2 Install base stand

1. Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen.



- 2. Hold the stand with both hands.
 - Gently attach the stand to the VESA mount area until the latch locks the stand.
 - (2) Gently attach the base to the stand.

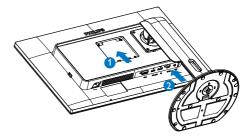


Power cable

* Dual-link DVI cable

* Different according to region.

2. Setting up the monitor


3 Connecting to your computer

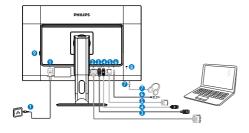

- 1 AC power input
- 2 DVI input
- 3 MHL-HDMI input
- Oisplay port input
- **5** VGA input
- 6 Audio input
- Earphone jack
- 8 Kensington anti-theft lock
- 9 Zero power Switch

2.2 Operating the monitor

1 Description of the control buttons

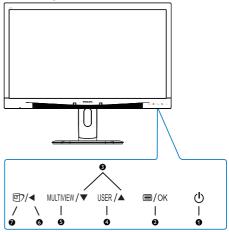

0	ወ	Switch monitor's power ON and OFF.
2	■/OK	Access the OSD menu. Confirm the OSD adjustment.
3		Adjust the OSD menu.
4	USER	User preference key. Customize your own preference function from OSD to become the "user key".
6	MULTIVIEW	PIP/PBP/Off/Swap
6		Return to previous OSD layer.
0	()	SmartImage hot key.There are 6 modes to select: Office, Photo, Movie, Game, Economy, Off.

2 Customize your own "USER" key


This hot key allows you to setup your favorite function key.

 Press button on the front bezel to enter OSD Menu Screen.

Color	Horizontal Vertical	Input Audio Source
Language	Transparency OSD Time out	Volume
OSD Settings	User	•
Setup		•
		•
•		

- 2. Press ▲ or ▼ button to select main menu [OSD Settings], then press OK button.
- 3. Press ▲ or ▼ button to select [User], then press OK button.
- Press ▲ or ▼ button to select your preferred function: [Input], [Audio Source], [Volume].
- 5. Press OK button to confirm your selection.

Now you can press the hotkey USER directly on the front bezel. Only your pre-selected function will appear for quick access.

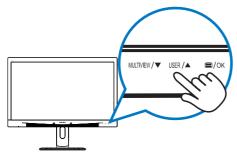

For example, if you selected [Audio Source] as the hotkey, press the USER button on the front bezel, the [Audio Source] menu appears.

Audio Source
Audio in
DisplayPort

Independent audio playback, regardless of video input

Your Philips monitor can play the audio source independently, regardless of which video input.

For example, you can play your MP3 player from the audio source connected to the [Audio In] port of this monitor, and still watch your video source connected from [MHL-HDMI], or [DisplayPort].

 Press button on the front bezel to enter OSD Menu Screen.

Power Sensor		• Audio in
Power sensor		MHL-HDMI
		 DisplayPort
	Audio Source	·
Picture		
Р РІР / РВР		
Audio		
.		

- 2. Press ▲ or ▼ button to select main menu [Audio], then press OK button.
- 3. Press ▲ or ▼ button to select [Audio Source], then press OK button.
- Press ▲ or ▼ button to select your preferred audio source: [DisplayPort], [MHL-HDMI] or [Audio In].
- 5. Press OK button to confirm your selection.

Note

- The next time you turn on this monitor, it will by default select the audio source you previously selected.
- In case you want to change it, you will have to go through the selection steps again to select your new preferred audio source as the default.

4 Description of the On Screen Display

What is On-Screen Display (OSD)?

On-Screen Display (OSD) is a feature in all Philips monitors. It allows an end user to adjust screen performance or select functions of the monitors directly through an on-screen instruction window. A user friendly on-screendisplay interface is shown as below:



Basic and simple instruction on the control keys

In the OSD shown above, you can press $\blacktriangle \lor$ buttons on the front bezel of the monitor to move the cursor, and press **OK** button to confirm the choice or change.

The OSD Menu

Below is an overall view of the structure of the On-Screen Display. You can use this as a reference when you want to work your way around the different adjustments later on.

Main menu	Sub menu		
PowerSensor	— On	0, 1, 2, 3, 4	
	Off		
- Input	VGA		
	— DVI		
	MHL-HDMI DisplayPort		
	- Displayi or c		
- Picture	Picture Format	Wide screen, 4:3, 16:9, 1:1	
	- Brightness	0~100	
	- Contrast	0~100	
	- Sharpness	0~100	
		- Off, Fast, Faster, Fastest	
		- On, Off	
	- Gamma		
	Over Scan	On, Off	
PIP / PBP	PIP / PBP Mode	- Off, PIP, PBP	
	PIP / PBP Input	— VGA, DVI, MHL-HDMI, DisplayPort	
	PIP Size	Small, Middle, Large	
	PIP Position	 Top-Right, Top-Left, Bottom-Right, Bottom-Left 	
	Swap	Bottom-Right, Bottom-Left	
- Audio	Volume	0~100	
		- On, Off	
	- Mute	- On, Off	
	Audio Source	- Audio in, MHL-HDMI, DisplayPort	
- Color	Color Temperature	— 5000K, 6500K, 7500K,	
	sRGB	8200K, 9300K, 11500K	
	User Define	Red: 0~100	
		Green: 0~100	
		Blue: 0~100	
- Language	— English, Deutsch, Esp Português, Português Čeština, Українська,	añol, Eλληνική, Français, Italiano, Maryar, Nede do Brasil, Polski, Pycckwiř, Svenska, Suomi, Tüi 简体中文, 繁體中文, 日本語, 한국어	rland rkçe,
- OSD Settings	- Horizontal	0~100	
	Vertical	0~100	
	- Transparency	Off, 1, 2, 3, 4	
	- OSD Time Out	5s, 10s, 20s, 30s, 60s	
	User User	Input, Audio Source, Volume	
Setup	Auto		
	Power LED	0, 1, 2, 3, 4	
	- H-Position	0~100	
		0~100	
	- Phase		
	- Clock		
	- Resolution Notification		
	DisplayPort	1.1, 1.2	
	Reset	- Yes, No	


5 Resolution notification

This monitor is designed for optimal performance at its native resolution, $2560 \times 1440 @ 60$ Hz. When the monitor is powered on at a different resolution, an alert is displayed on screen: Use $2560 \times 1440 @ 60$ Hz for best results.

Display of the native resolution alert can be switched off from Setup in the OSD (On Screen Display) menu.

6 Physical Function

Tilt

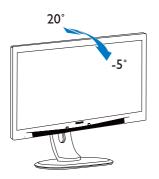


Swivel



Height adjustment



Pivot

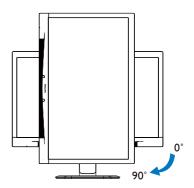

2.3 MultiView




1 What is it?

Multiview enables active dual connect and view so that you can work with multiple devices like PC and Notebook side-by-side simultaneously, making complex multi-tasking work a breeze.

2 Why do I need it?

With the ultra high resolution Philips MultiView display, you can experience a world of connectivity in a comfortable way in the office or at home. With this display, you can conveniently enjoy multiple content sources at one screen. For example: You may want to keep an eye on the live news video feed with audio in the small window, while working on your latest blog, or you may want to edit an Excel file from your Ultrabook, while logged into secured company intranet to access files from a desktop.

- 3 How to enable MultiView by hotkey?
- 1. Press the hotkey MULTIVIEW directly on the front bezel.

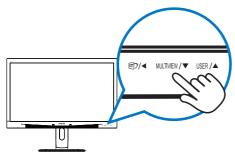

 The MultiView selection menu appears. Press ▲ or ▼ button to select.



3. Press OK button to confirm your selection and then exit automatically.

4 How to enable MultiView by OSD menu?

Besides pressing the hotkey MULTIVIEW directly on the front bezel, the MultiView function can also be selected in OSD menu.

1. Press 🖨 button on the front bezel to enter OSD Menu Screen.

	PIP/PBP Mode	Off	
Power Sensor	PIP/PBP Input	• PIP	
		 PBP 	
	PIP Position	•	
Picture	Swap	•	
		•	
PIP / PBP			
Р РГР / РВР			
Audio			
· V		•	
•			

- 2. Press ▲ or ▼ button to select main menu [PIP / PBP], then press OK button.
- 3. Press ▲ or ▼ button to select [PIP / PBP Mode], then press OK button.
- Press ▲ or ▼ button to select [PIP] or [PBP].
- Now you can move backward to set the [PIP / PBP Input], [PIP Size], [PIP Position]., or [Swap].
- 6. Press OK button to confirm your selection.
- 5 MultiView in OSD menu
- **PIP / PBP Mode**: There are two modes for MultiView: [**PIP**] and [**PBP**].

[PIP]: Picture in Picture

Open up a sub-window of another signal source.



When the sub source is not detected:



[PBP]: Picture by Picture

Open up a sub-window sideby-side of another signal source.



When the sub source is not detected:



Solution Note

The black strip shows on the top and the bottom of the screen for the correct aspect ratio when in the PBP mode.

 PIP / PBP Input: There are four different video input to choose as the sub display source: [VGA],[DVI], [MHL-HDMI], and [DisplayPort].

Please refer below table for compatibility of main/sub input source.

		SUB SOURCE POSSIBILITY (XI)			
Multi View		VGA	DP	DVI	MHL- HDMI
	VGA		•	•	•
MAIN	DP	٠		•	•
SOURCE	DVI	٠	•		•
(×I)	MHL- HDMI	•	•	•	

• **PIP Size**: When PIP is activated, there are three sub-window sizes to choose: [Small], [Middle], [Large].




• **PIP Position**: When PIP is activated, there are four sub-window positions to choose.







• **Swap:** The main picture source and the sub picture source swapped on the display.

Swap A and B source in [**PIP**] mode:



Swap A and B source in [PBP] mode:





2. Setting up the monitor

Off: Stop MultiView function.




Solution Note

When you do the SWAP function, the video and its audio source will swap at the same time. (Refer to page 6 "Independent audio playback, regardless of video input" for more detail.)


2.4 Remove the Base Assembly for VESA Mounting

Before you start disassembling the monitor base, please follow the instructions below to avoid any possible damage or injury.


1. Extend the monitor base to its maximum height.

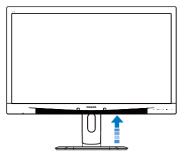

 Place the monitor face down on a smooth surface. Pay attention not to scratch or damage the screen. Then lift the monitor stand.

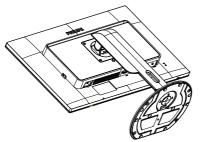


3. While keeping the release button pressed, tilt the base and slide it out.

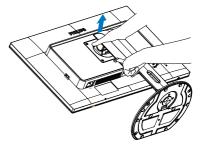

Solution Note

This monitor accepts a 100mm × 100mm VESA-Compliant mounting interface.

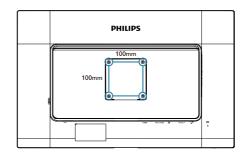

3. Image Optimization

3.1 SmartImage

1 What is it?

SmartImage provides presets that optimize display for different types of content, dynamically adjusting brightness, contrast, color and sharpness in real time. Whether you're working with text applications, displaying images or watching a video, Philips SmartImage delivers great optimized monitor performance.


2 Why do I need it?

You want a monitor that delivers optimized display all your favorite types of content, SmartImage software dynamically adjust brightness, contrast, color and sharpness in real time to enhance your monitor viewing experience.

3 How does it work?

SmartImage is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, color saturation and sharpness of images to enhance the contents being displayed - all in real time with the press of a single button.

4 How to enable SmartImage?

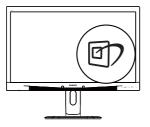

- 1. Press 🗇 to launch the SmartImage on screen display.
- Keep pressing ▲ ▼ to toggle among Office, Photo, Movie, Game, Economy and Off.

3. The SmartImage on screen display will remain on screen for 5 seconds, or you can also press OK button to confirm.

There are six modes to select: Office, Photo, Movie, Game, Economy and Off.

SmartImage
Office
Photo
Movie
Game
Economy
Off

- Office: Enhances text and dampens brightness to increase readability and reduce eye strain. This mode significantly enhances readability and productivity when you're working with spreadsheets, PDF files, scanned articles or other general office applications.
- Photo: This profile combines color saturation, dynamic contrast and sharpness enhancement to display photos and other images with outstanding clarity in vibrant colors - all without artifacts and faded colors.
- Movie: Ramped up luminance, deepened color saturation, dynamic contrast and razor sharpness displays every details in darker areas of your videos without color washout in brighter areas maintaining a dynamic natural values for the ultimate video display.
- Game: Turn on over drive circuit for best response time, reduce jaggy edges for fast moving objects on screen, enhance contrast ratio for bright and dark scheme, this profile delivers the best gaming experience for gamers.
- **Economy:** Under this profile, brightness, contrast are adjusted and backlighting finetuned for just right display of everyday

3. Image Optimization

office applications and lower power consumption.

• Off: No optimization by SmartImage.

3.2 SmartContrast

1 What is it?

Unique technology that dynamically analyzes displayed content and automatically optimizes a Monitor's contrast ratio for maximum visual clarity and viewing enjoyment, stepping up backlighting for clearer, crisper and brighter images or dimming backlighting for clear display of images on dark backgrounds.

2 Why do I need it?

You want the very best visual clarity and viewing comfort for every type of content. SmartContrast dynamically controls contrast and adjusts backlighting for clear, crisp, bright gaming and video images or displays clear, readable text for office work. By reducing your monitor's power consumption, you save on energy costs and extend the lifetime of your monitor.

3 How does it work?

When you activate SmartContrast, it will analyse the content you are displaying in real time to adjust colors and control backlight intensity. This function will dynamically enhance contrast for a great entertainment experience when viewing videos or playing games.

4. PowerSensor™

1 How does it work?

- PowerSensor works on principle of transmission and reception of harmless "infrared" signals in order to detect userpresence.
- When the user is in front of the monitor the monitor operates normally, at the predetermined settings that the user has set i.e. Brightness, Contrast, Color, etc.
- Assuming that the monitor was set to 100% of brightness for example, when the user leaves his seat and is no longer in front of the monitor; the monitor automatically reduces the power consumption up to 80%.

User not present

User present in front



Power consumption as illustrated above is for reference purpose only.

2 Setting


Default settings

PowerSensor is designed to detect the presence of the user located between 30 and 100 cm (12 and 40 inches) from the display and within five degrees left or right of the monitor.

Custom settings


If you prefer to be in a position outside the perimeters listed above, choose a higher strength signal for optimal detection efficiency: The higher the setting, the stronger the detection signal. For maximum PowerSensor efficiency and proper detection, please position yourself directly in front of your monitor.

- If you choose to position yourself more than 100 cm or 40 inches from the monitor use the maximum detection signal for distances up to 120 cm or 47 inches. (Setting 4)
- Since some dark colored clothing tends to absorb infrared signals even when the user is within 100 cm or 40 inches of the display, step up signal strength when wearing black or other dark clothes.





Landscape/Portrait mode (for selective models)



Above illustrations are for reference purpose only, may not reflect the exact display of this model.

How to adjust settings

If PowerSensor is not operating correctly inside or outside the default range, here's how to fine-tune detection:

- Customize the USER button to serve as PowerSensor hot key. Refer "Customize your own "USER" key section. (If your display is with "Sensor" hot key, go to next step.)
- Press the PowerSensor hot key.
- You will find the adjustment bar.
- Adjust the PowerSensor detection adjustment to Setting 4 and press OK.
- Test the new setup to see if PowerSensor properly detects you in your current position.
- PowerSensor function is designed to work in Landscape mode (horizontal position) only. After PowerSensor turn on it, it will automatically turn Off if the monitor is used in Portrait mode (90 degree/vertical position); it will automatically turn ON if monitor is returned to its default Landscape position.

Note

A manually selected PowerSensor mode will remain operational unless and until it is readjusted or the default mode is recalled. If you find that the PowerSensor is excessively sensitive to nearby motion for some reason, please adjust to a lower signal strength.

5. MHL (Mobile High-Definition Link)

1 What is it?

Mobile High Definition Link (MHL) is a mobile audio/video interface for directly connecting mobile phones and other portable devices to highdefinition displays.

An optional MHL cable allows you to simply connect your MHL capable mobile device to this large Philips MHL display, and watch your HD videos come to life with full digital sound.

Now not only you can enjoy your mobile games, photos, movies, or other apps on its big screen, you can simultaneously charge your mobile device so you never run out of power half way.


2 How do I use the MHL function?

To use the MHL function, you need an MHLCertified mobile device. To find a list of MHLcertified devices, visit the official MHL website (http://www.mhlconsortium.org)

You also need a optional MHL certified special cable in order to use this function.

3 How does it work? (how do I connect?)

Connect the optional MHL cable to the mini USB port on the mobile device side, and the [MHL-HDMI] marked port on the monitor side. You are now ready to view the images on your big screen display and operate all function on you the mobile device such as internet surfing, game playing, photo browsing...etc. if your monitor has speaker function, then you will be able to hear accompanying sound too. When the MHL cable is disconnected or the mobile device is turned off, the MHL function will be automatically disabled.

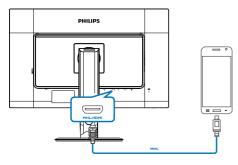

Note

- The port marked [MHL-HDMI] is the only port on the monitor that supports the MHL function when the MHL cable is used. Note that the MHL certified cable is different than a standard HDMI cable.
- A mobile device with MHL certification must be purchased separately.
- You may have to manually switch the monitor to MHL-HDMI mode in order to activate the monitor, if you have other devices already working and connected to available inputs.
- This Philips display is MHL certified. However, in case your MHL device does not connect or work correctly, check with your MHL device FAQ or vendor directly for direction. The policy of your device manufacturer may require you to purchase their brand specific MHL cable or adapter in order to work with other brand MHL devices. Note that this is not a fault of this Philips display.

6. Technical Specifications

Picture/Display				
Monitor Panel Type	TFT LCD			
Backlight	LED			
Panel Size	27"W (68.6 cm)			
Aspect Ratio	16:9			
Pixel Pitch	0.233 x 0.233 mm			
SmartContrast	20,000,000:1			
Response Time (typ.)	5 ms(GtG)			
SmartResponse	2 ms (GtG)			
Optimum Resolution	2560 × 1440 @ 60 H	Z		
Viewing Angle	170° (H) / 160° (V)(t			
Picture Enhancement	SmartImage	// / -		
Display Color	16.7M			
Vertical Refresh Rate	56 Hz - 76 Hz			
Horizontal Frequency	30 kHz - 83 kHz			
sRGB	YES			
Connectivity				
Signal Input/Output	DVI(Digtal),VGA(Ana	log), DisplayPort, MHL-I	HDMI	
Input Signal	Separate Sync, Sync c	n Green		
Audio In/Out	PC Audio-in, Headph	one Out		
Convenience				
Built-in Speakers	2 W x2			
	Image: Contempt of the second sec			
User Convenience	@?/◀ MULTIVIEW /▼	USER 🔺 🗐 / OK	ل	
User Convenience OSD Languages	English, German, Spar Portuguese, Brazil Por	USER / Image: US	n, Hungarian, Dutch, Swedish, Finnish,	
	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese,	
OSD Languages Other Convenience	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1	ish, Greek, French, Italiar tuguese, Polish, Russian,	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/CI, sRGB, Wind	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/CI, sRGB, Wind	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × ' DDC/CI, sRGB, Wind -5° / +20° -65° / +65°	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/Cl, sRGB, Wind -5° / +20° -65° / +65° 120 mm	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Power	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 x * DDC/CI, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90°	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Pivot Adjustment On Mode	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 x 1 DDC/CI, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Pivot Adjustment On Mode Sleep (Standby)	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/CI, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma < 0.5 W (typ.)	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Pivot Adjustment Power On Mode Sleep (Standby) Off	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/Cl, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma < 0.5 W (typ.) < 0.3 W (typ.)	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Pivot Adjustment On Mode Sleep (Standby)	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/CI, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma < 0.5 W (typ.)	ish, Greek, French, Italiar tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, raditional Chinese, ock	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Pivot Adjustment Power On Mode Sleep (Standby) Off On Mode (ECO Mode)	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 7 DDC/Cl, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma < 0.5 W (typ.) 22 W (typ.) 22 W (typ.)	ish, Greek, French, Italiar 'tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS ux.)	n, Hungarian, Dutch, Swedish, Finnish, Faditional Chinese, ick SX	
OSD Languages Other Convenience Plug & Play Compatibility Stand Tilt Swivel Height Adjustment Pivot Adjustment Power On Mode Sleep (Standby) Off On Mode (ECO Mode) Power	English, German, Spar Portuguese, Brazil Por Turkish, Czech, Ukran Japanese, Korean VESA mount (100 × 1 DDC/Cl, sRGB, Wind -5° / +20° -65° / +65° 120 mm 90° 47 W (typ.), 85 W (ma < 0.5 W (typ.) < 0.3 W (typ.) 22 W (typ.)	ish, Greek, French, Italiar 'tuguese, Polish, Russian, ian, Simplified Chinese, T 100 mm), Kensington Lc ows 10/8.1/8/7, Mac OS	n, Hungarian, Dutch, Swedish, Finnish, Traditional Chinese, ick SX	

6. Technical Specifications

Sleep (Standby)	< 0.5 W (typ.)	< 0.5 W (typ.)	< 0.5 W (typ.)	
Off	< 0.3 W (typ.)	< 0.3 W (typ.)	< 0.3 W (typ.)	
Heat Dissipation*	AC Input Voltage at 100 V AC, 50 Hz	AC Input Voltage at 115 V AC, 60 Hz	AC Input Voltage at 230 V AC, 50 Hz	
Normal Operation	160.07 BTU/hr (typ.)	160.41 BTU/hr (typ.)	160.75 BTU/hr (typ.)	
Sleep (Standby)	< 1.37 BTU/hr (typ.)	< 1.37 BTU/hr (typ.)	< 1.37 BTU/hr (typ.)	
Off	< 1.02 BTU/hr (typ.)	< 1.02 BTU/hr (typ.)	< 1.02 BTU/hr (typ.)	
Power LED Indicator	On mode: White, Stan	dby/Sleep mode:White	(blinking)	
Power Supply	Built-in, 100 - 240 VAC	C, 50-60 Hz		
PowerSensor	10W(typ)			
Dimension				
Product with stand (W×H×D)	639 x 540 x 244 mm			
Product without stand (WxHxD)	639 x 405 x 68 mm			
Product with packaging (W×H×D)	490 x 299 x 740 mm			
Weight				
Product with stand	6.72 kg			
Product without stand	4.4 kg			
Product with packaging	10.6kg			
Operating Condition				
Temperature range (operation)	0°C to 40 °C			
Relative humidity (operation)	20% to 80%			
Atmospheric pressure (operation)	700 to 1060hPa			
Temperature range (Non-operation)	-20°C to 60°C			
Relative humidity (Non-operation)	10% to 90%			
Atmospheric pressure (Non-operation)	500 to 1060hPa			
Environmental				
ROHS	YES			
Packaging	100 % recyclable			
Specific Substances				
Compliance and standards				
Regulatory Approvals CE Mark, FCC Class B, CU-EAC, TCO, TUV-GS, TUV-Ergo, ETL PSB, RCM, SEMKO PSB, RCM, SEMKO			S,TUV-Ergo, ETL, BSMI,	
Cabinet				
Color	Black/Silver			
Finish	Texture			

Note

- 1. This data is subject to change without notice. Go to <u>www.philips.com/support</u> to download the latest version of leaflet.
- 2. Smart response time is the optimum value from either GtG or GtG (BW) tests.

6.1 Resolution & Preset Modes

1 Maximum Resolution

2560 × 1440 @ 60 Hz (digital input)

2 Recommended Resolution

2560 × 1440 @ 60 Hz (digital input)

H. freq. (kHz)	Resolution	V. freq. (Hz)
31.47	720 × 400	70.09
31.47	640 × 480	59.94
35.00	640 × 480	66.67
37.86	640 × 480	72.81
37.5	640 × 480	75.00
37.88	800×600	60.32
46.88	800×600	75.00
48.36	1024 × 768	60.00
60.02	1024 × 768	75.03
44.77	1280 × 720	59.86
63.98	1280×1024	60.02
79.98	1280 × 1024	75.03
55.94	1440 × 900	59.89
70.64	1440 × 900	74.99
75.00	1600 × 1200	60.00
65.29	1680 × 1050	59.95
67.50	1920 × 1080	60.00
74.04	1920 × 1080	59.95
88.79	2560 × 1440	59.95

Solution Note

- Please notice that your display works best at native resolution of 2560 × 1440 @ 60Hz. For best display quality, please follow this resolution recommendation.
- While using DVI, a Dual-link DVI cable is required for maximum resolution 2560 × 1440.
- The highest supporting screen resolution on HDMI is 2560 × 1440, but it always depends on your capability of graphics card and BluRay/video players.

6.2 Crystalclear

This latest Philips display delivers Crystalclear, 2560x1440 images. Utilizing high performance panels with high density pixel count, 178/178 wide viewing angles, enabled by high bandwidth sources like Displayport, HDMI, or Dual link DVI, this new display will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, this Philips display will give you Crystalclear images.

7. Power Management

If you have VESA DPM compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If an input from a keyboard, mouse or other input device is detected, the monitor will 'wake up' automatically.The following table shows the power consumption and signaling of this automatic power saving feature:

Power Management Definition					
VESA Mode	Video	H-sync	V-sync	Power Used	LED Color
Active	ON	Yes	Yes	47 W (typ.), 85 (max.)	White
Sleep (Standby)	OFF	No	No	< 0.5 W (typ.)	White (blink)
Off	OFF	-	-	< 0.3 W (typ.)	OFF

The following setup is used to measure power consumption on this monitor:

- Native resolution: 2560 x 1440
- Contrast: 50%
- Brightness: 100%
- Color temperature: 6500k with full white pattern
- Audio Inactive (Off)


Note

This data is subject to change without notice.

8. Customer care and warranty

8.1 Philips' Flat Panel Monitors Pixel Defect Policy

Philips strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT Monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but Philips guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This notice explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT Monitor panel must exceed these acceptable levels. For example, no more than 0.0004% of the sub pixels on a monitor may be defective. Furthermore, Philips sets even higher quality standards for certain types or combinations of pixel defects that are more noticeable than others. This policy is valid worldwide.



Pixels and Sub pixels


A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. Many pixels together form an image. When all sub pixels of a pixel are lit, the three colored sub pixels together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel. Other combinations of lit and dark sub pixels appear as single pixels of other colors.

Types of Pixel Defects


Pixel and sub pixel defects appear on the screen in different ways. There are two categories of pixel defects and several types of sub pixel defects within each category.

Bright Dot Defects

Bright dot defects appear as pixels or sub pixels that are always lit or 'on'. That is, a bright dot is a sub-pixel that stands out on the screen when the monitor displays a dark pattern. There are the types of bright dot defects.



One lit red, green or blue sub pixel.

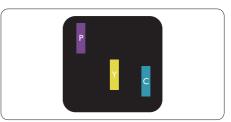

Two adjacent lit sub pixels:

- Red + Blue = Purple
- Red + Green = Yellow
- Green + Blue = Cyan (Light Blue)




Three adjacent lit sub pixels (one white pixel).

Note

A red or blue bright dot must be more than 50 percent brighter than neighboring dots while a green bright dot is 30 percent brighter than neighboring dots.


Black Dot Defects

Black dot defects appear as pixels or sub pixels that are always dark or 'off'. That is, a dark dot is a sub-pixel that stands out on the screen when the monitor displays a light pattern. These are the types of black dot defects.

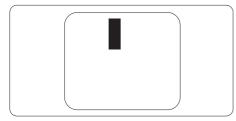

Proximity of Pixel Defects

Because pixel and sub pixels defects of the same type that are near to one another may be more noticeable, Philips also specifies tolerances for the proximity of pixel defects.

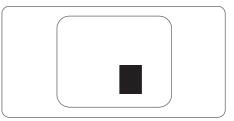

Pixel Defect Tolerances

In order to qualify for repair or replacement due to pixel defects during the warranty period, a TFT Monitor panel in a Philips flat panel monitor must have pixel or sub pixel defects exceeding the tolerances listed in the following tables.

BRIGHT DOT DEFECTS	ACCEPTABLE LEVEL
1 lit subpixel	3
2 adjacent lit subpixels	1
3 adjacent lit subpixels (one white pixel)	0
Distance between two bright dot defects*	>15mm
Total bright dot defects of all types	3
BLACK DOT DEFECTS	ACCEPTABLE LEVEL
1 dark subpixel	5 or fewer
2 adjacent dark subpixels	2 or fewer
3 adjacent dark subpixels	0
Distance between two black dot defects*	>15mm
Total black dot defects of all types	5 or fewer
TOTAL DOT DEFECTS	ACCEPTABLE LEVEL
Total bright or black dot defects of all types	5 or fewer

- 1. 1 or 2 adjacent sub pixel defects = 1 dot defect
- 2. This monitor is ISO9241-307 compliant (ISO9241-307: Ergonomic requirement , analysis and compliance test methods for electronic visual displays).
- 3. ISO9241-307 is the successor of formerly known ISO13406 standard, which is withdrawn by the International Organisation for Standardisation (ISO) per: 2008-11-13.

8.2 Customer Care & Warranty

For warranty coverage information and additional support requirements valid for your region, please visit www.philips.com/support website for details or contact your local Philips Customer Care Center. For extended warranty, if you would like to extend your general warranty period, an Out of Warranty service package is offered via our Certified Service Center.

If you wish to make use of this service, please be sure to purchase the service within 30 calendar days of your original purchase date. During the extended warranty period, the service includes pickup, repair and return service, however the user will be responsible for all costs accrued.

If the Certified Service Partner cannot perform the required repairs under the offered extended warranty package, we will find alternative solutions for you, if possible, up to the extended warranty period you have purchased.

Please contact our Philips Customer Service Representative or local contact center (by Consumer care number) for more details.

_				-	
•	Local Standard	•	Extended Warranty Period	•	Total Warranty Period
	Warranty Period				
•	Depend on	•	+ 1 Year	•	Local Standard warranty period +1
	different Regions				
		•	+ 2 Years	•	Local Standard warranty period +2
		•	+ 3 Years	•	Local Standard warranty period +3

Philips Customer Care Center number listed below.

**Proof of original purchase and extended warranty purchase required.

Contact Information for WESTERN EUROPE region:

Country	CSP	Hotline Number	Price	Opening Hours
Austria	RTS	+43 0810 000206	€ 0.07	Mon to Fri : 9am - 6pm
Belgium	Ecare	+32 078 250851	€ 0.06	Mon to Fri : 9am - 6pm
Cyprus	Alman	800 92 256	Free of charge	Mon to Fri : 9am - 6pm
Denmark	Infocare	+45 3525 8761	Local call tariff	Mon to Fri : 9am - 6pm
Finland	Infocare	+358 09 2290 1908	Local call tariff	Mon to Fri : 9am - 6pm
France	Mainteq	+33 082161 1658	€ 0.09	Mon to Fri : 9am - 6pm
Germany	RTS	+49 01803 386 853	€ 0.09	Mon to Fri : 9am - 6pm
Greece	Alman	+30 00800 3122 1223	Free of charge	Mon to Fri : 9am - 6pm
Ireland	Celestica	+353 01 601 1161	Local call tariff	Mon to Fri : 8am - 5pm
Italy	Anovo Italy	+39 840 320 041	€ 0.08	Mon to Fri : 9am - 6pm
Luxembourg	Ecare	+352 26 84 30 00	Local call tariff	Mon to Fri : 9am - 6pm
Netherlands	Ecare	+31 0900 0400 063	€ 0.10	Mon to Fri : 9am - 6pm
Norway	Infocare	+47 2270 8250	Local call tariff	Mon to Fri : 9am - 6pm
Poland	MSI	+48 0223491505	Local call tariff	Mon to Fri : 9am - 6pm

Portugal	Mainteq	800 780 902	Free of charge	Mon to Fri : 8am - 5pm
Spain	Mainteq	+34 902 888 785	€ 0.10	Mon to Fri : 9am - 6pm
Sweden	Infocare	+46 08 632 0016	Local call tariff	Mon to Fri : 9am - 6pm
Switzerland	ANOVO CH	+41 02 2310 2116	Local call tariff	Mon to Fri : 9am - 6pm
United Kingdom	Celestica	+44 0207 949 0069	Local call tariff	Mon to Fri : 8am - 5pm

Contact Information for China:

Country	Call center	Consumer care number
China	PCCW Limited	4008 800 008

Contact Information for NORTH AMERICA :

Country	Call center	Consumer care number
U.S.A.	EPI-e-center	(877) 835-1838
Canada	EPI-e-center	(800)479-6696

Contact Information for CENTRAL AND EASTERN EUROPE region:

Country	Call center	CSP	Consumer care number
Belarus	NA	IBA	+375 17 217 3386 +375 17 217 3389
Bulgaria	NA	LAN Service	+359 2 960 2360
Croatia	NA	MR Service Ltd	+385 (01) 640 1111
Czech Rep.	NA	Asupport	420 272 188 300
Estonia	NA	FUJITSU	+372 6519900(General) +372 6519972(workshop)
Georgia	NA	Esabi	+995 322 91 34 71
Hungary	NA	Profi Service	+36 1 814 8080(General) +36 1814 8565(For AOC&Philips only)
Kazakhstan	NA	Classic Service I.I.c.	+7 727 3097515
Latvia	NA	ServiceNet LV	+371 67460399 +371 27260399
Lithuania	NA	UAB Servicenet	+370 37 400160(general) +370 7400088 (for Philips)
Macedonia	NA	AMC	+389 2 3125097
Moldova	NA	Comel	+37322224035
Romania	NA	Skin	+40 21 2101969
Russia	NA	CPS	+7 (495) 645 6746
Serbia&Montenegro	NA	Kim Tec d.o.o.	+381 11 20 70 684
Slovakia	NA	Datalan Service	+421 2 49207155
Slovenia	NA	PC H.and	+386 1 530 08 24
the republic of Belarus	NA	ServiceBy	+ 375 17 284 0203
Turkey	NA	Tecpro	+90 212 444 4 832
Ukraine	NA	Topaz	+38044 525 64 95
Ukraine	NA	Comel	+380 5627444225

Contact Information for LATIN AMERICA region:

Country	Call center	Consumer care number
Brazil	Vermont	0800-7254101
Argentina		0800 3330 856

Contact Information for APMEA region:

Country	ASP	Consumer care number	Opening hours
Australia	AGOS NETWORK PTY LTD	1300 360 386	Mon.~Fri. 9:00am-5:30pm
New Zealand	Visual Group Ltd.	0800 657447	Mon.~Fri. 8:30am-5:30pm
Hong Kong Macau	Company: Smart Pixels Technology Ltd.	Hong Kong: Tel: +852 2619 9639 Macau:Tel: (853)-0800-987	Mon.~Fri. 9:00am-6:00pm Sat. 9:00am-1:00pm
India	REDINGTON INDIA LTD	Tel: 1 800 425 6396 SMS: PHILIPS to 56677	Mon.~Fri. 9:00am-5:30pm
Indonesia	PT. CORMIC SERVISINDO PERKASA	+62-21-4080-9086 (Customer Hotline) +62-8888-01-9086 (Customer Hotline)	Mon.~Thu. 08:30-12:00; 13:00-17:30 Fri. 08:30-11:30; 13:00-17:30
Korea	Alphascan Displays, Inc	1661-5003	Mon.~Fri. 9:00am-5:30pm Sat. 9:00am-1:00pm
Malaysia	R-Logic Sdn Bhd	+603 5102 3336	Mon.~Fri. 8:15am-5:00pm Sat. 8:30am-12:30am
Pakistan	TVONICS Pakistan	+92-213-6030100	Sun.~Thu. 10:00am-6:00pm
Singapore	Philips Electronics Singapore Pte Ltd (Philips Consumer Care Center)	(65) 6882 3966	Mon.~Fri. 9:00am-6:00pm Sat. 9:00am-1:00pm
Taiwan	FETEC.CO	0800-231-099	Mon.~Fri. 09:00 - 18:00
Thailand	Axis Computer System Co., Ltd.	(662) 934-5498	Mon.~Fri. 8:30am~05:30pm
South Africa	Computer Repair Technologies	011 262 3586	Mon.~Fri. 8:00am~05:00pm
Israel	Eastronics LTD	1-800-567000	Sun.~Thu. 08:00-18:00
Vietnam	FPT Service Informatic Company Ltd Ho Chi Minh City Branch	+84 8 38248007 Ho Chi Minh City +84 5113.562666 Danang City +84 5113.562666 Can tho Province	Mon.~Fri. 8:00-12:00, 13:30- 17:30,Sat. 8:00-12:00
Philippines	EA Global Supply Chain Solutions ,Inc.	(02) 655-7777; 6359456	Mon.~Fri. 8:30am~5:30pm
Armenia Azerbaijan Georgia Kyrgyzstan Tajikistan	Firebird service centre	+97 14 8837911	Sun.~Thu. 09:00 - 18:00
Uzbekistan	Soniko Plus Private Enterprise Ltd	+99871 2784650	Mon.~Fri. 09:00 - 18:00
Turkmenistan	Technostar Service Centre	+(99312) 460733, 460957	Mon.~Fri. 09:00 - 18:00
Japan	フィリップスモニター ・サポ <i>ー</i> トセンター	0120-060-530	Mon.~Fri. 10:00 - 17:00

9. Troubleshooting & FAQs

9.1 Troubleshooting

This page deals with problems that can be corrected by a user. If the problem still persists after you have tried these solutions, contact Philips customer service representative.

1 Common Problems

No Picture (Power LED not lit)

- Make sure the power cord is plugged into the power outlet and into the back of the monitor.
- First, ensure that the power button on the front of the monitor is in the OFF position, then press it to the ON position.

No Picture (Power LED is White)

- Make sure the computer is turned on.
- Make sure the signal cable is properly connected to your computer.
- Make sure the monitor cable has no bent pins on the connect side. If yes, repair or replace the cable.
- The Energy Saving feature may be activated

Screen says



- Make sure the monitor cable is properly connected to your computer. (Also refer to the Quick Start Guide).
- Check to see if the monitor cable has bent pins.
- Make sure the computer is turned on.

AUTO button doesn't function

• The auto function is applicable only in VGA-Analog mode. If the result is not satisfactory, you can do manual adjustments via the OSD menu.

Note

The Auto Function is not applicable in DVI-Digital mode as it is not necessary.

Visible signs of smoke or sparks

- Do not perform any troubleshooting steps
- Disconnect the monitor from mains power source immediately for safety
- Contact with Philips customer service representative immediately.

2 Imaging Problems

Image is not centered

- Adjust the image position using the "Auto" function in OSD Main Controls.
- Adjust the image position using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image vibrates on the screen

• Check that the signal cable is properly securely connected to the graphics board or PC.

Vertical flicker appears



- Adjust the image using the "Auto" function in OSD Main Controls.
- Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Horizontal flicker appears

×	ř

- Adjust the image using the "Auto" function in OSD Main Controls.
- Eliminate the vertical bars using the Phase/ Clock of Setup in OSD Main Controls. It is valid only in VGA mode.

Image appears blurred, indistinct or too dark

• Adjust the contrast and brightness on On-Screen Display.

An "after-image", "burn-in" or "ghost image" remains after the power has been turned off.

- Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burnin", "after-imaging", or "ghost imaging" is a well-known phenomenon in monitor panel technology. In most cases, the "burned in" or "after-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.
- Always activate a moving screen saver program when you leave your monitor unattended.
- Always activate a periodic screen refresh application if your monitor will display unchanging static content.
- Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty.

Image appears distorted. Text is fuzzy or blurred.

• Set the PC's display resolution to the same mode as monitor's recommended screen native resolution.

Green, red, blue, dark, and white dots appears on the screen

 The remaining dots are normal characteristic of the liquid crystal used in today's technology, Please refer the pixel policy for more detail.

The "power on" light is too strong and is disturbing

 You can adjust "power on" light using the power LED Setup in OSD main Controls.

3 Audio problem

No sound

- Check if audio cable is connected to PC and monitor correctly.
- Ensure audio is not muted. Press OSD "Menu", select "Audio" then "Mute". Check it on "Off" position.
- Press "Volume" in OSD main control to adjust the volume.

4 USB problem

USB peripherals are not working

- Check if USB upstream cable is connected to your monitor correctly.
- Turn your monitor OFF and ON once again. You may need to install/reinstall USB drivers in your PC and ensure hub is active.
- Reconnect your USB peripherals.

For further assistance, refer to the Consumer Information Centers list and contact Philips customer service representative.

9.2 General FAQs

Q1: When I install my monitor what should I do if the screen shows 'Cannot display this video mode'?

Ans.: Recommended resolution for this monitor: 2560 × 1440 @ 60 Hz.

- Unplug all cables, then connect your PC to the monitor that you used previously.
- In the Windows Start Menu, select Settings/ Control Panel. In the Control Panel Window, select the Display icon. Inside the Display Control Panel, select the 'Settings' tab. Under the setting tab, in box labelled 'desktop area', move the sidebar to 2560 × 1440 pixels.
- Open 'Advanced Properties' and set the Refresh Rate to 60 Hz, then click OK.
- Restart your computer and repeat step 2 and 3 to verify that your PC is set at 2560 × 1440 @ 60 Hz.

9. Troubleshooting & FAQs

- Shut down your computer, disconnect your old monitor and reconnect your Philips monitor.
- Turn on your monitor and then turn on your PC.

Q2: What is the recommended refresh rate for monitor?

Ans.: Recommended refresh rate in monitors is 60 Hz, In case of any disturbance on screen, you can set it up to 75 Hz to see if that removes the disturbance.

Q3: What are the .inf and .icm files on the user manual? How do I install the drivers (.inf and .icm)?

Ans.: These are the driver files for your monitor. Follow the instructions in your user manual to install the drivers. Your computer may ask you for monitor drivers (.inf and .icm files) or a driver disk when you first install your monitor.

Q4: How do I adjust the resolution?

Ans.: Your video card/graphic driver and monitor together determine the available resolutions.You can select the desired resolution under Windows® Control Panel with the "Display properties".

Q5: What if I get lost when I am making monitor adjustments via OSD?

Ans.: Simply press the 🗐 button, then select [Reset to recall all the original factory settings.

Q6: Is the monitor screen resistant to scratches?

Ans.: In general it is recommended that the panel surface is not subjected to excessive shocks and is protected from sharp or blunt objects. When handling the monitor, make sure that there is no pressure or force applied to the panel surface side. This may affect your warranty conditions.

Q7: How should I clean the monitor surface?

Ans.: For normal cleaning, use a clean, soft cloth. For extensive cleaning, please use isopropyl alcohol. Do not use other solvents such as ethyl alcohol, ethanol, acetone, hexane, etc.

Q8: Can I change the color setting of my monitor?

- Ans.: Yes, you can change your color setting through OSD control as the following procedures:
- Press button to show the OSD (On Screen Display) menu
- Press ▼ button to select the option [Color] then press OK button to enter color setting, there are three settings as below.
 - 1. Color Temperature: The six settings are 5000K, 6500K, 7500K, 8200K, 9300K and 11500K. With settings in the 5000K range the panel appears "warm, with a red-white color tone", while a 11500K temperature yields "cool, bluewhite toning".
 - 2. sRGB:This is a standard setting for ensuring correct exchange of colors between different device (e.g. digital cameras, monitors, printers, scanners, etc).
 - User Define: The user can choose his/ her preference color setting by adjusting red, green blue color.

Note

A measurement of the color of light radiated by an object while it is being heated. This measurement is expressed in terms of absolute scale, (degrees Kelvin). Lower Kevin temperatures such as 2004K are red; higher temperatures such as 9300K are blue. Neutral temperature is white, at 6504K.

- Q9: Can I connect my monitor to any PC, workstation or Mac?
- Ans.: Yes. All Philips monitors are fully compatible with standard PCs, Macs and workstations. You may need a cable adapter to connect the monitor to your Mac system. Please contact your Philips sales representative for more information.

Q10: Are Philips monitors Plug-and-Play?

- Ans.: Yes, the monitors are Plug-and-Play compatible with Windows 10/Windows 8.1/Windows 8/Windows 7, Mac OSX.
- Q11: What is Image Sticking, or Image Burnin, or After Image, or Ghost Image in monitor panels?
- Ans.: Uninterrupted display of still or static images over an extended period may cause "burn in", also known as "after-imaging" or "ghost imaging", on your screen. "Burn-in", "afterimaging", or "ghost imaging" is a wellknown phenomenon in monitor panel technology. In most cases, the "burned in" or "atter-imaging" or "ghost imaging" will disappear gradually over a period of time after the power has been switched off.

Always activate a moving screen saver program when you leave your monitor unattended.

Always activate a periodic screen refresh application if your monitor will display unchanging static content.

Warning

Failure to activate a screen saver, or a periodic screen refresh application may result in severe "burn-in" or "after-image" or "ghost image" symptoms that will not disappear and cannot be repaired. The damage mentioned above is not covered under your warranty. Q12: Why is my Display not showing sharp text, and is displaying jagged characters?

Ans.: Your monitor works best at its native resolution of 2560 × 1440 @ 60 Hz. For best display, please use this resolution.

9.3 Multiview FAQs

Q1: Why I cannot activate PIP or PBP when the sources are DVI and MHL-HDMI?

Ans.: Please refer to below table for the main source and its supporting sub source.

**		SUB SOURCE POSSIBILITY (XI)			
Multi View		VGA	DP	DVI	MHL- HDMI
	VGA		•	•	•
MAIN	DP	•		•	•
SOURCE	DVI	•	•		•
(×l)	MHL- HDMI	•	•	•	

Q2: Can I enlarge the PIP sub window ?

- Ans.: Yes, there are 3 sizes to select: [Small], [Middle], [Large]. You can press to enter OSD menu. Select your preferred [PIP Size] option from the [PIP / PBP] main menu.
- Q3: How to listen to Audio, independent of video?

Please note that the next time you turn on your monitor, the monitor will by default select the audio source you chose last time. In case you want to change it again, you need to go through the above steps to select your new preferred audio source, which then will become the "default" mode.

Audio Source			
Audio in			
MHL-HDMI			
DisplayPort			



© 2016 Koninklijke Philips N.V. All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

Specifications are subject to change without notice.

Version: M4272SE2T