

# Read this First!


Quick Start Guide & FAQs

# First time cleaning





















\* Dispense water till the water tank is empty.

### **User interface**



#### On/Off Button

Press to activate the appliance. Long press for 3 seconds to deactivate the appliance.



#### Safety Lock

When hot water ≥40°C is chosen, press to unlock before pressing the dispense button. Press to lock the appliance.



#### **Dispense Button**

Press to start or stop dispensing. Long press for 3 seconds to continuously dispense 1L of water






Lights up when it is time to descale. Long press for 3 seconds to start the descaling process. During descaling, press Dispense Button to pause, and press Descale or Dispense Button to restart.



**V \*\* V Water Temperature Selection** 





#### **Cooling Indicator**

Lights flashing when the water is being cooled. Lights up constantly when the cooling is done.



#### Water Shortage Indicator



### Filter Lifetime Indicator

#### Switch off the cooling system



(Fig. 1) Long press both buttons for 3 seconds to turn off/turn on the cooling system. After the cooling system is turned off, select cold water temperature to dispense ambient water.

# The lifetime of the filter cartridge



Model	Suggested Replacement Cycle		
AWP230	After 100 liters or every 30 days, whichever comes first.		

Filter lifetime indicator flashes: the filter is about to reach the end of life

Filter lifetime indicator lights up constantly: the filter reaches the end of life.






#### Filter Lifetime Reset

Long press both buttons for 3 seconds to reset the filter lifetime.


# How to switch the appliance on/off?

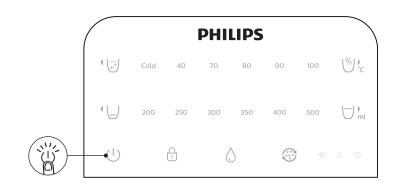

- Press () button to activate the appliance.


### How to fill the internal water tank?

(and start the cooling process)

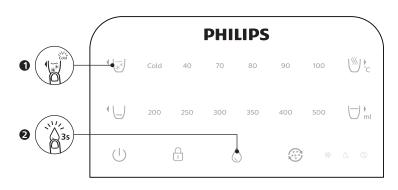

- Press the Water Temperature Selection button until "Cold" is selected.
- Press the ♦ button for 3 seconds to continuously dispense 1L of water.


## How to dispense water?

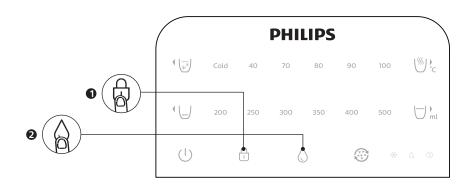

- When hot water ≥40°C is chosen, press the button to unlock.
- Press the ♦ button to start or stop dispensing.


### How to switch off the cooling system?

(will stop noise produced by cooling fans)

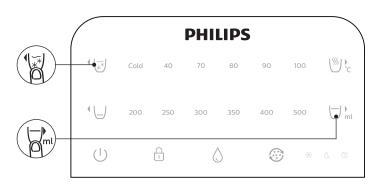

- Long press both buttons ₩ 🗁 📶 for 3 seconds to turn off/turn on the cooling system.
- With the cooling system off, and temperature on setting "cold", the appliance will dispense water of ambient temperature, instead of chilled water.

### How to reset the filter lifetime?

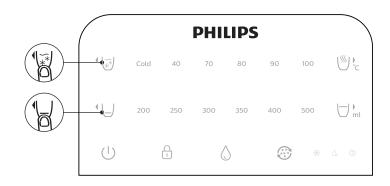

■ Long press both buttons 🤟 🖵 for 3 seconds to reset the filter lifetime.



# Register your product and learn more via the website link below: www.philips.com/water

Specifications are subject to change without notice

© 2023 AquaShield

All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

Rev A JUL 23

