


1




2



140 mm (5.51")

## Wall mounting instructions

### Drill holes on wall at hole positions marked.\*

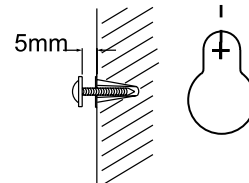

#### Note for mounting

To secure the mounting on wall, concrete wall is required.

#### Use screws to mount the device on the wall

1. Use this sheet as a template. Mark the position where you want to hang the device on the wall (as shown above) and then drill two 6mm diameter holes.
2. Secure the 2 dowels and 2 screws (both supplied) in the holes respectively. Leave a gap of 5 mm between the head of the screw and the wall.
3. Hang the device on the fastening screws.