



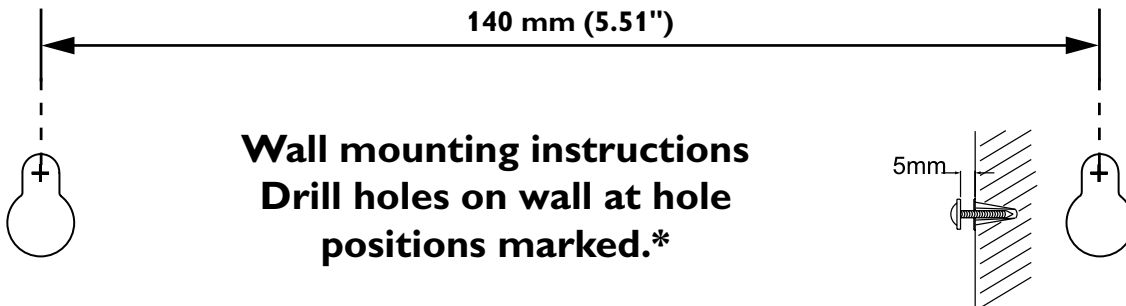

140 mm (5.51")



Wall mounting instructions
Drill holes on wall at hole
positions marked.*

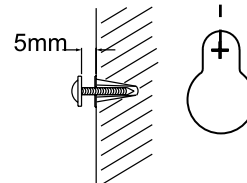

ES

Nota para el montaje

Para garantizar un montaje seguro, la pared debe ser de hormigón.

Utilice tornillos para montar el dispositivo en la pared

- 1 Utilice esta página como plantilla. Marque la posición en la que desea colgar el dispositivo en la pared (como se muestra en la imagen anterior) y perforo dos orificios de 6 mm de diámetro.
- 2 Fije los 2 tacos y 2 tornillos (ambos incluidos) respectivamente en los agujeros. Deje un espacio de 5 mm entre la cabeza del tornillo y la pared.
- 3 Cuelgue el dispositivo en los tornillos de sujeción.

Instrucciones de montaje en pared

Perfore agujeros en la pared en la posición deseada.*

EN

Note for mounting

To secure the mounting on wall, concrete wall is required.

Use screws to mount the device on the wall

- 1 Use this sheet as a template. Mark the position where you want to hang the device on the wall (as shown above) and then drill two 6mm diameter holes.
- 2 Secure the 2 dowels and 2 screws (both supplied) in the holes respectively. Leave a gap of 5 mm between the head of the screw and the wall.
- 3 Hang the device on the fastening screws.