


Connect to your PC

Connect Philips Wireless Music Station to your PC if you want to do the following:

- **Access** music files stored on your PC from Philips Music Station's **UPnP** source

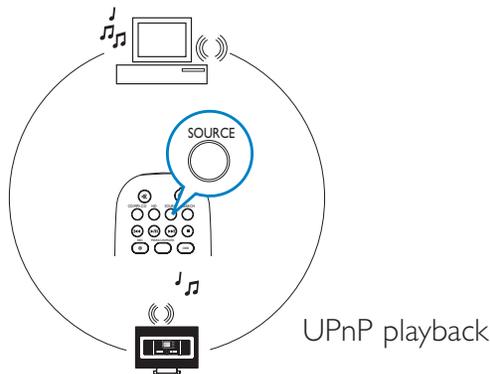

- **Upgrade** firmware of Philips Music Station




To connect to Philips Music Station, your minimum PC requirements must be:

- Windows 2000/XP (Home or Professional)
- Pentium III 500MHz processor or higher
- 256MB RAM
- CD-ROM Drive
- Ethernet Adaptor (for wired connection)/ Wireless Network Adaptor 802.11 b/g (for wireless connection)
- Free hard disk space of 500MB
- Windows Media Player® 9.0 or later installed

A₁


Set up a wired connection

Connect the Station to PC directly with the supplied (orange) Ethernet cable

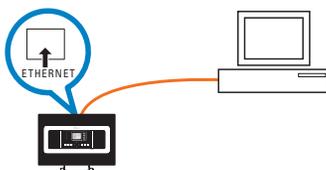

OR

Connect the Station directly to Access Point with the supplied (orange) Ethernet cable

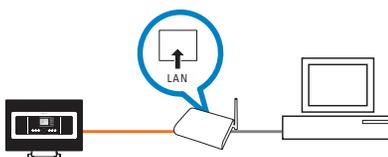

Tips:


- Make sure that Ethernet port on your PC is 'Enabled' to make WADM connection.



Set up a wireless connection

Do you have a wireless Access Point?


YES

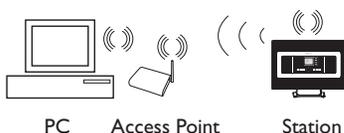

On Station :

- Press the MENU button
- Select Settings>Network > Wireless > (Select desired network) > (Input the encryption key by using the 1 way remote control) > Automatic > Apply Settings > Yes

NO

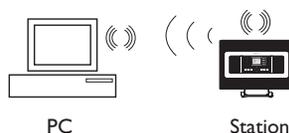

a. On Station :

- Press **SOURCE** to enter UPnP mode
- Press **MENU**, select Information > Wireless > SSID > (write down SSID code)
- Press **MENU**, select Information > Wireless > WEB Key > (write down WEB key)

b. On PC :

- Select Start > Control Panel > Network Connections > Enable Wireless Network Connections > View Available Wireless Networks > Select the network that matches Station's SSID > Input retrieved Station's WEP key

Tips:

- Check that PC's wireless network adaptor is enabled.
- Locate the Station closer to your wireless Access Point.
- Make sure that DHCP is enabled on your wireless Access Point. If not available, choose Static and key in IP configuration

B1

Install and launch WADM

- 1 Insert PC Suite CD into PC
- 2 Select desired language and accept license terms
- 3 Select 'WADM' and select 'Next' to start installation
- 4 To launch WADM, double click the desktop icon 📁
A list of found Center/ Station appears
- 5 Select desired Station, and then click **Connect now**



Tips:

- Log onto your PC with administrator's privileges enabled.
- If Station's IP configuration is not in the default range (Subnet mask: 255.255.0.0; IP address: 172.31.x.x). Select **Connection Wizard** > **Custom Mode**. Input Station's current IP configuration as prompted. Press the MENU button and select **Information** > **Ethernet** to check IP configuration.
- For Windows® XP SP2 users, make sure your Windows Firewall has been turned off by clicking **Start** > **Control Panel** > **Security Center** > **Windows Firewall** > **Off** (Visit www.microsoft.com for more details).
- If some of the WADM functions cannot be used, it might be because your anti-virus software blocked them. It is recommended to turn off your anti-virus software temporarily.
- When WADM is running, Internet access may be disabled. Close WADM to restore access.
- If your PC operation system is Windows Vista, please right click on WADM, select **Properties** --> **Compatibility**, and make sure the check-box under "Compatibility mode" and "Privilege level" is marked, then click OK. Otherwise your WADM may not able to be launched.



Install and launch WADM

If desired Station is not found :

- Wired connection: Select **Connection Wizard** > **Express mode**> **Next** to build new connection

Note: If you selected **Connection Wizard** > **Custom mode**, it will select Wireless network adaptor automatically by default if the PC has both wired and wireless adapter. Please select Wired network adaptor manually.

- Wireless connection: Check that wireless Access Point is broadcasting preferred wireless network SSID AND that PC's wireless network adaptor is working



Use WADM



In the sub-menu of Device configuration, you can see System information, manage the Network settings, upgrade Firmware, and to view the device's connection with external network.

For details on how to upgrade firmware, see User Manual:

Firmware upgrade



Use UPnP


- 1 Check you have installed Philips Media Manager (PMM) on PC
- 2 To launch PMM, double click the desktop icon  if it is created



- 3 The first time you launch **PMM**, click **Add Music > Add Files or Folders** to specify music folders on your PC

Station:

- 4 Press **SOURCE**, and then select preferred music server

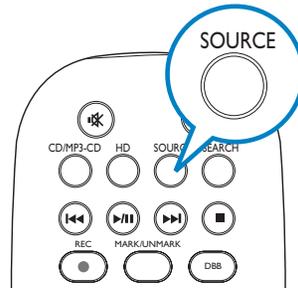

Tips:

- UPnP device may not necessarily be a PC but any content serving device.
- If UPnP device is not detected after 5 minutes, powering it off and on again might re-establish a faster connection.

Need help?

Online help: www.philips.com/support

Contact line: I 800 531 0039

Country	Helpdesk	Tariff / min	Keep ready
österreich	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Seriennummer
Belgique	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
Danmark	3525 8761	Local tariff	Forbrugeren's indkøbsdato, type/model-og serienummer
Suomi	09 2290 1908	Local tariff	Ostojäätävä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Deutschland	0180 5 007 532	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Ελλάδα	0 0800 3122 1223	Free	Την ημερομηνία αγοράς και Τον ακριβή κωδικό μοντέλου και Τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italia	199 404 042	€0.21	La data di acquisto, numero di modello e numero di serie
Luxembourg	26 84 30 00	Local tariff	La data d'achat, la référence et le numéro de série du produit
Nederland	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norge	2270 8250	Local tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Local tariff	A data de compra, número do modelo e número de série
España	902 888 785	€0.15	Fecha de compra e número del modelo e número de serie
Sweden	08 632 0016	Local tariff	Inköpsdatum, modellnummer och serienummer
Schweiz	02 2310 2116		Das Kaufdatum und Modellnummer und Seriennummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number



Be responsible
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

© Royal Philips Electronics N.V. 2006

All rights reserved.

www.philips.com

3141 075 22051

Eng