Quick Start Guide





Step A Connect

Step B Setup

Step C Enjoy

What's in the Box?

You should find these items upon opening the box.



Remote control



User Manual Quick Start Guide










Step A Connect

1

Connect the AC power adaptor to the DC350 and the wall socket.

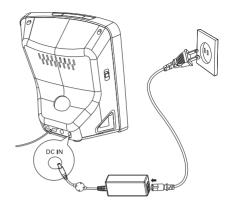

Step B Setup

Set clock and date

1

Press and hold **SET TIME** for 2 seconds.

The hour digits are displayed and begin to blink.

2

Press ⋈</>
Ito set the hour.

3

Press **SET TIME** to confirm.

→ The minute digits are displayed and begin to blink.

4

Repeat steps 2-3 to set minute, year, month and day.

5

Press repeatedly to select 12 hour or 24 hour format.

6

Press SET TIME to confirm.





Play from iPod/iPhone

0

With the connectors facing each other, place the iPod/iPhone in the dock.




Turn the tilt adjustment control to adjust the angle at which the iPod/iPhone tilts.

→ When the DC350 is connected to power, the docked iPod/iPhone begins to charge.



Press iPod/iPhone to select iPod/iPhone source.

→ The connected iPod/iPhone plays automatically.

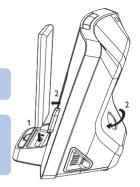

Listen to radio



Press TUNER to select FM.



In the tuner mode, press and hold **PROG** for more than 2 seconds to activate automatic program mode.

- → [AUTO] (auto) is displayed.
- All available stations are programmed in the order of waveband reception strength.
- The first programmed radio station is broadcast automatically.



Press PRESET +/- to select a preset number.



Step C Enjoy

Use Bluetooth devices

Note:

The operational range between this DC350 and a bluetooth device is approximate 10 meters (30 feet).

Connect a device for the first time



Press BLUETOOTH to select the Bluetooth source.

2

For an iPhone, load it in the dock for automatic re-connection setup.



Press and hold PAIRING (for more than 3 seconds

- → The Bluetooth indicator blinks.
- 4

On the device, set up the Bluetooth connection:

- a. Enable Bluetooth to search for other Bluetooth devices, (Refer to the device user manual on how to enable the function,)
- b. When "PHILIPS DC350" is recognized and displayed, select it to start to connect.
- c. When prompted for a password, enter "0000".

5

Wait until the Bluetooth indicator turns on.

→ The connection is complete.

Receive a phone call

Note:

You can receive phone calls through this DC350 with devices that support the HFP or HSP profile.

1

Connect the Bluetooth device.

Step C Enjoy

2

When a call is received, you hear the incoming call alert tone, press **PAIRING** to accept the call.

- → To reject the call, press .
- 3

Speak into the MIC located on the front panel.

→ To select to hear the audio from the device or from the DC350, press PAIRING €.



Press

to end the call.

Listen to music

Note:

- You can listen to audio through this DC350 from devices that support A2DP or AVRCP.
- As iPhone doesn't support Bluetooth audio streaming, DC350 doesn't play audio files from iPhone through Bluetooth connection.



Connect the Bluetooth device.



On the Bluetooth device, start play.

→ You hear the music through this DC350.

Tip:

Refer to the supplied user manual for more details.





© Royal Philips Electronics N.V. 2008 All rights reserved.