

Get product support at
www.philips.com/support

DLP2606U/97



User manual

PHILIPS




2017 © Gibson Innovations Limited.
All rights reserved.
This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product. The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.



UM_DLP2606/97
WK1815_V1

1

Operation sketch map

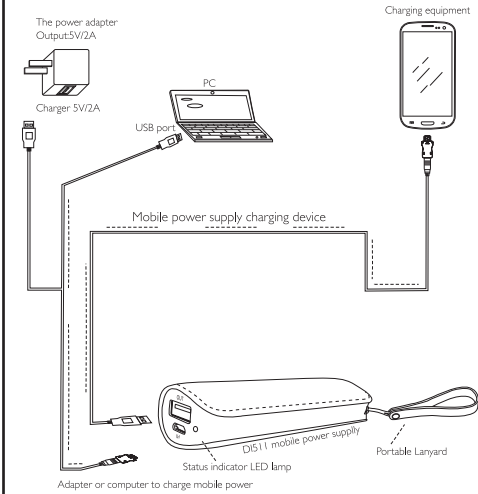

(Reminder: Please click here to use the icon to match the relevant parameters when using the adapter.)

2

Product Description

1. This product is built 3.7V / 2600mAh high-capacity high-quality lithium-ion batteries.
2. Using a mobile power white LED lights display work state.
3. No mechanical switch, Plug the phone will automatically start the output to charge the device.
4. This product is compact, unique shape, nice, fine craftsmanship, PC shell surface with rubber paint technology, advanced paint touch technology, beautiful appearance, comfortable feel.

Power Bank Functional Description

1. Configure a status indicator:
2. Automatic recognition output, without having to switch plug and play; less than set off current to charge external devices automatically shut off the output into power-saving sleep state;
3. The state of charge: access charger; white LED light flashes to indicate charging; long bright white LED light when fully charged, unplug the charging cable after 30S delay LED lights automatically turn off.
4. Discharge status: Plug the phone automatically charges, long bright white LED lights; when the battery is low, then the white LED will flash, indicating low battery, unplug the phone when 30S after the mobile power will automatically enter low power consumption sleep standby.

3

Common Problems and Solutions

Due to a variety of different models of mobile phone charging circuit design, how to use the product other "data line" on the part of the phone when charging may not be compatible with some models, the use of the converter can be used with a thread.

1. Check whether the appropriate power adapter, cables, connectors are normal, suggested the use of a qualified brand power adapter to charge.
2. The use of mobile power charge is low, please re-charge it, is not compatible with mobile power charging device voltage and voltage, please check before use. Charged equipment and connection method is not correct, the connection port is normal.
3. Mobile power mobile power to charge or not to charge when the device is not connecting thread is a good contact.
4. Internal mobile power line failure, please contact your local dealer service department.

Warm Tips

1. When left unused for a long time, please charge for this product at least once every six months.
2. During use, the device will be a slight fever; does not exceed 60 °C is normal, not a malfunction.
3. Keep the product dry and do not use chemical cleaners scrub.
4. Please take care of the environment, scrap recycling specified location, do not discard.

Important Tips

1. Do not let children or do not have the person using the device solely contact this equipment, this equipment unless those responsible for their safety, under the guidance or supervision.
2. Do not bump, puncture or disassemble wading, damp, extrusion equipment.
3. Do not apply DC power output device in the output parameters do not meet the requirements of the equipment, or short metal chips, may cause a malfunction or fire.