

Cartridge with Aquaporin Inside™ and remineraliser#.

Filtration performance tested to last for 2,000 liters purification. (replacement recommended after 12 months usage)



ADD583/79

Aug24 mid-life product upgrade

Biomimetic Reverse Osmosis Membrane

Removes 110* harmful substances

The biomimetic membrane incorporates aquaporin proteins to filter water faster and more energy-efficient.

Replacement cartridge for Philips RO Mineral Water Stations ADD6920BK/79, ADD6921DG/79 and ADD6922DG/79.

Filters over 110 contaminants*

- Chlorine (>99.5%)
- Bacteria (99.9999%)
- Viruses (99.999%)
- Bentazone (>99.6%)
- 2,4,6-Trichlorophenol TCP (99.9%)
- PFOA (>99.0%)
- PFOS (>98.9%)
- Hardness
- Lead (Pb)
- Pesticide
- Total Dissolved Solids (TDS)

The mentioned filtration performance is tested to

last for at least 2000 liters of water purification.

Adds minerals#

At the end of the filtration process water gets exposed to minerals (Ca2+, Mg2+, K+, Na+), impacting the pH level of the purified water.

The light-acidic purified water will turn alkaline.

This remineralisation effect is measured to last for 1000 liters of water purification.




Aguaporin Inside™ Reverse Osmosis Filter Cartridge

Reverse Osmosis with Aquaporin Inside™ 6-layer integrated filter with Remineralisation technology, 2000L purifying capacity, Last up to 1 year

Highlights

6-layer All-in-One Filter

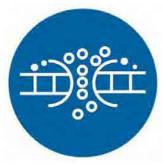

Multi-stage purification system:

- 1 Polypropylene
- 2 Activated Carbon
- 3 Polypropylene
- 4 RO membrane with Aquaporin Inside™
- 5 Activated Carbon
- 6 Adding Minerals

The filtration system can effectively remove 110 kinds of harmful substances down to 0.0001 micron*. Providing you cleaner and fresher tasting water.

Mineralization technology



Purified water lack minerals after filtering through the RO membrane.

The best way to reach your mineral intake goals is through a balanced diet that includes necessary nutrients.

To improve the taste of RO water, the remineralization technology in the ADD583 filter cartridge enhances the purified water with mineral.

Specifications

Filter specifications

4DD583/79

- · Main filter media: RO
- Filtration capacity: 2000L

General specifications

- gross weight: 1.1 kg
- net weight: 0.8 kg
- Filter quantity: 1-pack
- Packaging Dimension (L*W*H): 125*125*39 mm

Main parameters

- Applicable water temperature: 5-38 °C
- Rated water flow: 0.2 l/min



Aquaporin Inside™ **Reverse Osmosis technology**



Harnessing the power of nature. The biomimetic Reverse Osmosis membrane incorporates aquaporin proteins to replicate natures own water filtration process and filters water faster and better than ever before. Aquaporin Inside™ Reverse Osmosis filtration technology is developed by Aquaporin A/S (Denmark) in collaboration with NASA and ESA for aerospace activities. This partnership highlights the level of technical innovation, performance and durability.

Filtration efficiency



The Philips Quick Twist multi stage RO filter with Aquaporin Inside™ technology is extremely efficient: only 1 volume waste water is created when 3 volumes purified water are produced (drain ratio 3:1).

Traditional RO systems produce 12 volumes of waste water for 3 volumes of purified water (drain ration 1:4). Great when water sources are scarce!



Issue date 2024-10-31

© 2024 Koninklijke Philips N.V. All Rights reserved.

EAN: 48 95244 60678 3

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

* * Tested by 3rd party testing agency under laboratory conditions.

The contaminants or other substances reduced by this water filter are not necessarily in all users' water



This system has been tested by 3rd party testing agencies, such as SGS and laboratory accredited by CNAS, under laboratory conditions, according to test methods nominated by Philips for reduction of the substances listed below.



Filtration performance data Philips ADD583/79 Reverse Osmosis Filter Cartridge used in the Philips Reverse Osmosis Water Stations ADD6920, ADD6921 and ADD6922, powered by Aquaporin Inside*

Filter Model	Filter capacity	Recommended filter lifetime	Flow rate	Filration precision
ADD583/79	2000L	12 months	0.2L/min	Down to 0.0001 micron

Number	Test item(s)	Unit(s)	Test re Influent spiked water	esult(s) Efluent filtrated water	Removal rate(s)(%)	
1	MS2 coliphage	pfu/mL	1.7×10 ⁵	<1	99.999	
2	Total coliforms	CUF/100mL	1,4x10 ⁶	<1	99.9999	
3	Ammonia nitrogen (as N)	mg/L	2.501	<0.025	>99.0	
4	Sulphide	mg/L	2.00	<0.02	>99.0	
5 6	Formaldehyde Chloramine	mg/L mg/L	9.00	<0.05 <0.01	>99.4 >99.6	
7	Anion synthetic detergent	mg/L	2.500	<0.01	>99.0	
8	Boron (B)	mg/L	4.996	<0.002	>99.9	
9	Barium (Ba)	mg/L	7.086	<0.005	>99.9	
10	Beryllium (Be)	mg/L	0.218	<0.002	>99.0	
11	Molybdenum (Mo)	mg/L	1.89	<0.02	>98.9	
12	Nickel (Ni)	mg/L	2.02	<0.02	>99.0	
13	Sodium (Na)	mg/L	1423.9	95.5	93.3	
14 15	Antimony (Sb)	mg/L	0.103	<0.001	>99.0	
16	Silver (Ag) Cyanogen chloride	mg/L mg/L	1.06 0.50	<0.05 <0.01	>95.2 >98.0	
17	Dichloroacetic acid(DCAA)	mg/L	1.33	<0.01	>99.2	
18	Trichloroacetic acid(TCAA)	mg/L	1.35	<0.01	>99.2	
19	Chloral	mg/L	0.1	<0.01	>99.90	
20	2,4,6-Trichlorophenol	mg/L	1.2100	<0.0005	>99.9	
21	Dissociate chlorine residue	mg/L	2.00	<0.01	>99.5	
22	Chlorine dioxide	mg/L	2.00	<0.02	>99.0	
23	Ampicillin	ug/L	9.432	<0.005	>99.9	
24	Amoxicillin	ug/L	9.739	<0.005	>99.9	
25 26	Tetracycline Chlorotetracycline	ug/L	3.258 4.131	<0.005 <0.005	>99.8 >99.8	
26	Oxytetracycline	ug/L ug/L	4.131	<0.005 <0.005	>99.8 >99.8	
28	Sulfadiazine	ug/L	4.496	<0.005	>99.8	
29	Sulfamethazine	ug/L	5.313	<0.005	>99.9	
30	Roxithromycin	ug/L	4.265	<0.005	>99.8	
31	Norfloxacin	ug/L	5.982	<0.005	>99.9	
32	Bis(2-ethylhexyl) phthalate	mg/L	0.040	<0.002	>95.0	
33	Atrazine	mg/L	0.243	<0.001	>99.5	
34	Lindane (γ-BHC)	mg/L	0.1580	<0.0005	>99.6	
35 36	Benzene hexachloride(BHC) Trichloroethene	mg/L	0.4380 0.5241	<0.0010 <0.0001	>99.7 >99.9	
37	Dibromochloromethane	mg/L mg/L	1.4067	<0.0001	>99.9	
38	Bromodichloromethane	mg/L	0.8721	<0.0001	>99.9	
39	1,2-Dichloroethane	mg/L	0.4779	<0.0001	>99.9	
40	Methylene chloride	mg/L	0.4688	0.0047	99.0	
41	1,1,1-Trichloroethane	mg/L	41.7090	<0.0001	>99.9	
42	Bromoform	mg/L	1.2582	<0.0001	>99.9	
43	1,1-Dichloroethene	mg/L	0.4740	<0.0005	>99.8	
44	Cis-1,2-dichloroethene	mg/L	0.3366	<0.0005	>99.8	
45 46	Trans-1,2-dichloroethene 1,2-Dichlorobenzene	mg/L mg/L	0.3758 2.7191	<0.0001 <0.0001	>99.9 >99.9	
47	1,4-Dichlorobenzene	mg/L	0.5085	<0.0001	>99.9	
48	Total Trichlorobenzene	mg/L	0.2160	<0.0003	>99.8	
49	Hexachlorobutadiene	mg/L	0.0079	<0.0001	>98.7	
50	Acrylamide	mg/L	0.0136	<0.0005	>96.4	
51	Tetrachloroethene	mg/L	0.3622	<0.0001	>99.9	
52	Epichlorohydrin	mg/L	0.0170	<0.0004	>97.6	
53	Benzo(a)pyrene	mg/L	0.00050	<0.0001	>98.0	
54 55	Vinyl chloride Chlorobenzene	mg/L	0.5237 0.1463	<0.0005 <0.0001	>99.9 >99.9	
56	Total trihalomethanes (TTHMs)	mg/L mg/L	4.0482	<0.0001	>99.9	
57	2,4-D	mg/L	1.130	<0.004	>99.9	
58	DDT	mg/L	0.019	<0.001	>95.7	
59	Malathion	mg/L	1.176	<0.001	>99.9	
60	Parathion	mg/L	0.048	<0.001	>97.9	
61	Parathion methyl	mg/L	0.044	<0.001	>97.7	
62	Dimethoate	mg/L	0.357	<0.001	>99.7	
63	Pentachlorophenol	mg/L	0.2350	<0.0005	>99.7	
64 65	Chlorothalonil Heptachlor	mg/L	0.627 0.021	<0.001 <0.001	>98.4 >95.2	
66	Hexachlorobenzene	mg/L mg/L	0.021	<0.001	>95.2 >98.8	
67	Dichlorvos	mg/L	0.088	<0.001	>98.8 >94.1	
68	chlorpyrifos	mg/L	0.158	<0.001	>99.3	
69	Bentazone	mg/L	0.308	<0.001	>99.6	
70	Carbofuran	mg/L	0.148	<0.001	>99.3	
71	Deltamethrin	mg/L	0.232	<0.001	>95.6	
72	Chlorite	mg/L	3.84	<0.01	>99.7	
73	Bromate	mg/L	1.03	<0.01	>99.0	
74	Chlorate	mg/L	3.89	<0.01	>99.7	
75 76	Ethylbenzene	mg/L	0.7581 6.4823	<0.0001 <0.0003	>99.9 >99.9	
76 77	Xylene Toluene	mg/L mg/L	9.4823	<0.0003 <0.0001	>99.9 >99.9	
78	Benzene	mg/L	0.8881	<0.0001	>99.9	
79	Styrene	mg/L	2.2338	<0.0001	>99.9	
80	Staphylococcus aureus	CUF/100mL	1.2×10 ⁶	<1	>99.9999	



This system has been tested by 3rd party testing agencies, such as SGS and laboratory accredited by CNAS, under laboratory conditions, according to test methods nominated by Philips for reduction of the substances listed below.



Filtration performance data Philips ADD583/79 Reverse Osmosis Filter Cartridge used in the Philips Reverse Osmosis Water Stations ADD6920, ADD6921 and ADD6922, powered by Aquaporin Inside**

Continued.

	Testitem(s)	Test result
81	Chroma	Pass
82	Turbidity	Pass
83	Odor sum	Pass
84	Substance visible to the naked eye	Pass
85	Volatile phenols (phenols)	Pass
86	Oxygen consumption (CODMn method, measured in O2)	Pass
87	Total dissolved solids	Pass
88	Total hardness (CaCO3)	Pass
89	Cyanide	Pass
90	Chromium (Hexavalent)	Pass
91	Lead(Pb)	Pass
92	Cadmium(Cd)	Pass
93	Aluminum(Al)	Pass
94	Iron(Fe)	Pass
95	Manganese(Mn)	Pass
96	Copper(Cu)	Pass
97	Zinc(Zn)	Pass
98	Arsenic(As)	Pass
99	Mercury(Hg)	Pass
100	Selenium(Se)	Pass
101	Fluoride	Pass
102	Chloride	Pass
103	Nitrate (In N)	Pass
104	Sulfate	Pass
105	Trichloromethane	Pass
106	Carbon Tetrachloride	Pass
107	Free Residual Chlorine	Pass
108	Total Colony Count	Pass
109	Thermophilic Coliform	Pass
110	Burkholderia	Pass

Performance testing results continued - source SGS report: XMF-23-007480-03

Number	Test item(s)	Unit(s)	Test re	Removal rate(s)(%)		
	rest item(s)	01111(3) =	Influent spiked water	Efluent filtrated water	Removal rate(3)(70)	
111	Micro Plastics (0.5μm)	count/mL	78904000	1407	99.9	
112	DEET	mg/kg	2.79	<0.01	>99.6	
113	Ibuprofen	μg/L	12.76	<0.10	>99.2	
114	Isopropylamine	mg/L	1.32	<0.0005	>99.9	
115	Bisphenol A	mg/L	0.013	<0.01	>92.3	
116	PFOA	μg/L	1.09	<0.001	>99.0	
117	PFOS	μg/L	0.91	<0.01	>98.9	
118	Fluoride	mg/L	11.65	0.34	>97.1	

Mineraliser test results - source SGS report : XMF-24-0003624-01		Test result start-up		Test result	Test result after 500 L		Test result after 1000 L	
Test item(s)	Unit(s)	Influent water	Effluent water	Influent water	Effluent water	Influent water	Effluent water	
Magnesium (Mg)	mg/L	< 0.0009	0.0581	< 0.0009	0.0247	<0.0009	0.0254	
Potassium (K)	mg/L	0.0073	0.0336	< 0.0030	0.0124	0.0424	0.0891	
Calcium (Ca)	mg/L	< 0.0200	3.1104	< 0.0200	2.3661	0.0662	1.7442	
Sodium (Na)	mg/L	0.2405	0.3158	0.2326	0.2473	0.3811	0.5483	
pН		5.85	9.11	6.10	8.92	6.10	6.74	

- All measured contaminants reduced by this filter are listed.
- Not all contaminants listed may be present in your water.
- Filter does not remove all contaminants that may be present in tap water.
- $\bullet \ \ \text{Testing was performed under standard laboratory conditions, actual performance may vary.}$
- Removal rate (%) = (Influent spiked water test result Effluent filtrated water test result) / Influent spiked water test result × 100%.

Philips Reverse Osmosis Countertop Water Stations powered by the ADD583/79 Filtert Cartridge with AquaPorin Inside™








Register your product and learn more via the website link: www.philips.com/water Specifications are subject to change without prior notice © 2024 AquaShield All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

ADD6920BK/79

ADD6921DG/79

ADD6922DG/79

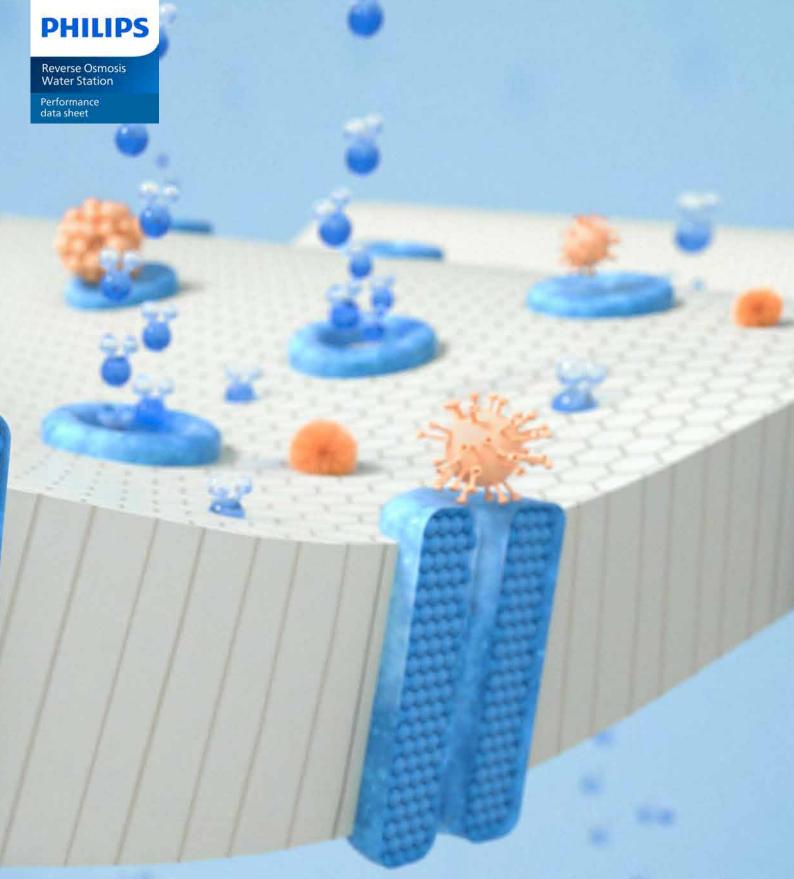

Aquaporin InsideTM reverse osmosis filtration technology incorporates aquaporin proteins to replicate nature's own water filtration process for more energy-efficient filtration than ever before.

Aquaporin proteins are placed in the cell membrane for transporting water – and only water – in and out of the cell. It was discovered by Dr.Peter Agre in 1988, and it brought him the Nobel Award in Chemistry in 2003. Due to its highly selective and long-lasting features, this technology was also developed with NASA for in-space drinking water applications.