



PHILIPS

27B2G5601

Disassembly Instruction



LCD Monitor

27B2G5601



WARNING

This disassembly information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this disassembly information by anyone else could result in serious injury or death.

Content Index

General Safety Instructions1

1. General Guidelines1

2. Important Notice.....1

3. How to Read this Instruction.....3

Exploded view diagram with list of items5

Disassembly SOP6



General Safety Instructions

1. General Guidelines

When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.

After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.

After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

- 1) Leakage Current Cold Check
- 2) Leakage Current Hot Check
- 3) Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive

2. Important Notice

2-1. Follow the regulations and warnings

Most important thing is to list up the potential hazard or risk for the service personnel to open the units and disassemble the units. For example, we need to describe properly how to avoid the possibility to get electrical shock from the live power supply or charged electrical parts (even the power is off).

2-2. Be careful to the electrical shock

To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture. This TV must not be exposed to dripping or splashing water, and objects filled with liquid, such as vases, must not be placed on top of or above the TV.

2-3. Electro static discharge (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

2-4. About lead free solder (PbF)

This product is manufactured using lead-free solder as a part of a movement within the consumer products industry at large to be environmentally responsible. Lead-free solder must be used in the servicing and repairing of this product.

2-5. Use the genewing parts (specified parts)

Special parts which have purposes of fire retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.



2-6 Safety Check after Repairment

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the positions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.

CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe.

Do not test high voltage by "drawing an arc".

3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
5. Do not apply AC power to this instrument and/or an
6. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.

Always remove the test receiver ground lead last. Capacitors may result in an explosion hazard.

7. Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

8. Insulation resistance between the cord plug terminals and the external exposure metal should be more than Mohm by using the 500V insulation resistance meter.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor- equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.



2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as Yanti-staticY can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it.

(Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).

7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted Qoor can generate static electricity sufficient to damage an ES device.)

2-7. Ordering Spare Parts

Please include the following informations when you order parts. (Particularly the Version letter)

1. Model number, Serial number and Software Version

The model number and Serial number can be found on the back of each product and the Software Version can be found at the Spare Parts List.

2. Spare Part No. and Description

You can find them in the Spare Parts List

2-8. Photo used in this manual

The illustration and photos used in this Manual may not base on the final design of products, which may differ from your products in some way.

3. How to Read this Instruction

Using Icons:

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Note:

A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.

Caution:

A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, loose data, get an unexpected result or has to restart(part of) a procedure.



Warning:

A “warning” is used when there is danger of personal injury.

Reference:

A “reference” guides the reader to other places in this binder or in this manual, where he/ she will find additional information on a specific topic.




PHILIPS

27B2G5601

Exploded view diagram with list of items

Model: PHP 27B2G5601

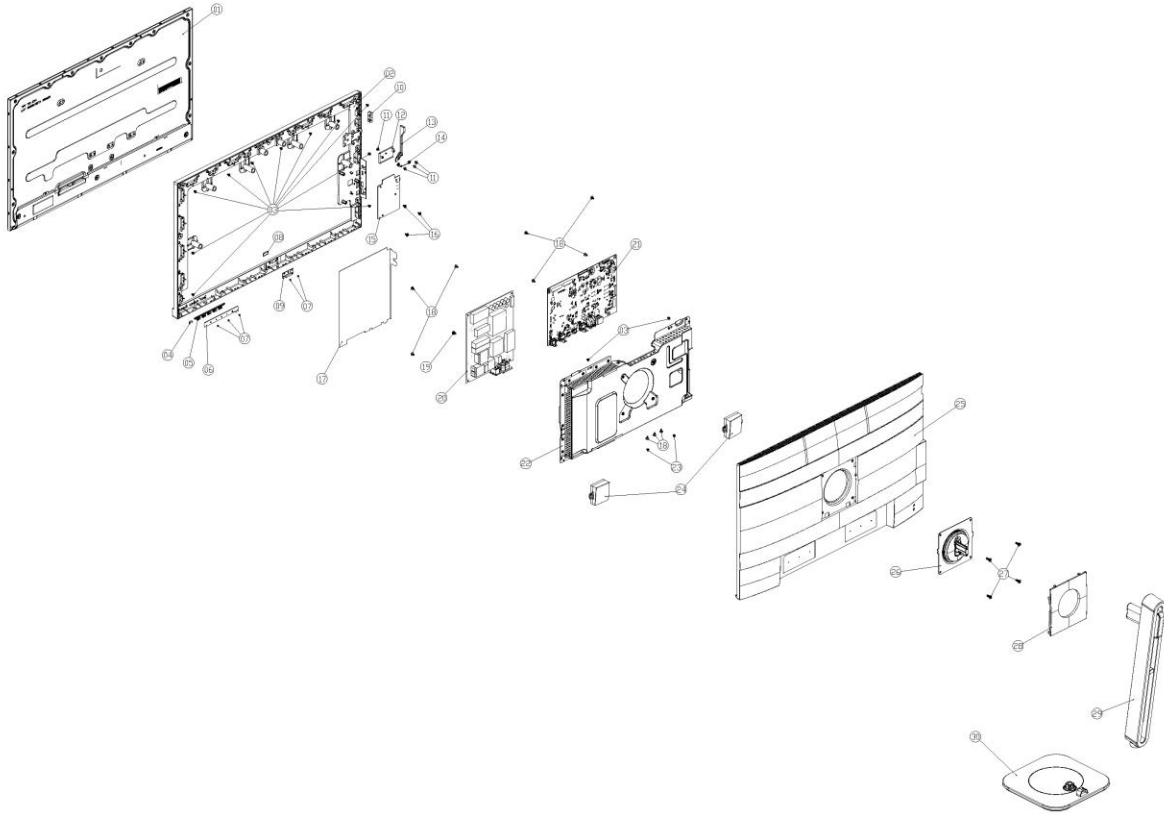

SEQ	DESC	PN	QTY	DESC
30	BASE	Q37G181901101B	1	底座
29	STAND	Q37G181901101S	1	支架
28	VESA COVER	F34G4290-1101A	1	VESA装饰盖
27	Screw	0M1G2940-10-47-CR3	4	VESA+RC+Main Frame
26	VESA	Q37G181901101V	1	
25	Rear Cover	F34G4289-1101A	1	T=1.7mm, ABS, 黑色
24	Speaker	NA	2	喇叭
23	Screw	0M1G3030-4-47-CR3	2	Main Frame+Panel
22	Main Frame	F15G1189101301	1	铁盘
21	Main Board	NA	1	主板
20	Power Board	NA	1	电源板
19	Screw	0M1G3840-8120	1	M4,L=8mm, PB接地螺丝
18	Screw	0D1G1030-6120	10	M3,L=6mm, PB+Main Frame, MB+Main Frame
17	Mylar	F52G1801MNT300	1	PC
16	Screw	0Q1G1030-6120	3	USB Bard+Middle Frame
15	USB Board	NA	1	USB侧板
14	Spring	Q19G10010520000ACR	1	弹簧
13	Headphone Hook	Q20G658010100000FS	1	耳机挂钩把手
12	BKT	Q15G574610100000GD	1	耳机挂钩BKT
11	Screw	0M1G3530-4120	4	耳机挂钩+Middle Frame
10	Rubber	Q12G71601900000AYI	1	硅胶垫
9	ToF Sensor Board	NA	1	
8	ToF Sensor Lens	F52G1801MNT306	1	PC
7	Screw	Q01G6019-2	5	M2,L=2mm,Key Board+Middle Frame Sensor Board+Middle Frame
6	Key Board	NA	1	按键板
5	Key Button	F33G0123-1101A	1	ABS,黑色
4	LED LENS	A33G2293-2-1C010	1	灯罩, T=1.3mm, PC, 透明
3	Screw	0M1G3030-4120	13	M3,L=4mm, Middle Frame+Panel, Main Frame+Panel
2	Middle Frame	F34G4288-2101A	1	T=1.5mm,ABS,黑色
1	Panel	NA	1	QHD



Disassembly SOP

1. Suggest Tools

Here are some tools that can be used for the LCD monitor's service and repair.

Philips-head Screwdriver

Use a Philips-head screwdriver to fasten/remove the K- or B-typed screws



P/N: N/A

Gloves

To protect LCD Panel and your hand



P/N: (L) N/A (M) N/A

C/D Disassembly Tool

Use C/D Disassembly Tool to open cosmetic cover and avoid scratch.



P/N: N/A

Spacer Screwdriver





Use a spacer screwdriver to fasten/remove spacer screws or hex screws.




P/N: N/A



2. Disassembly Procedures

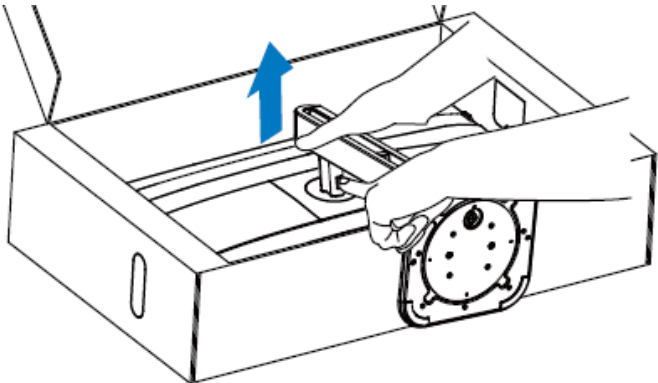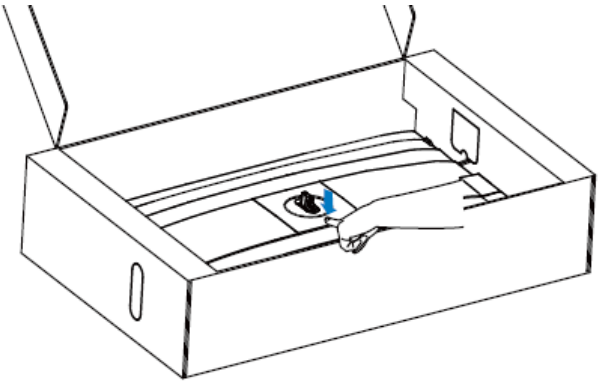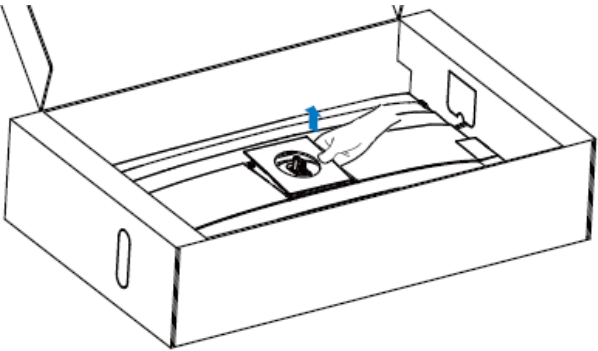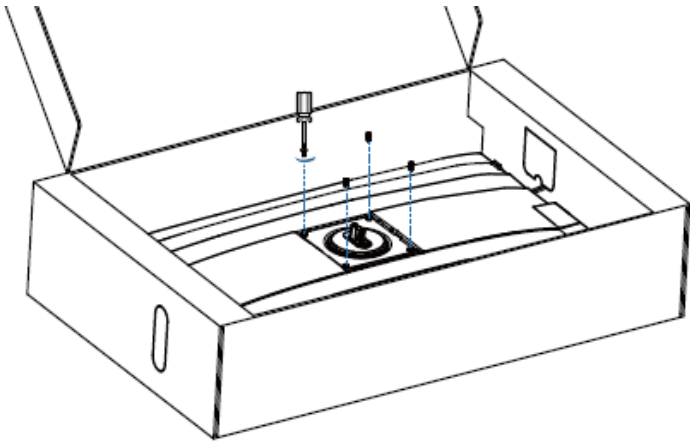
Step	Figure	Description
Remove stand assembly		● Press the release button to slide out the stand assy. ● Remove vesa cover. ● Release screws to take out vesa.
		
		
		

**Remove back
cover**

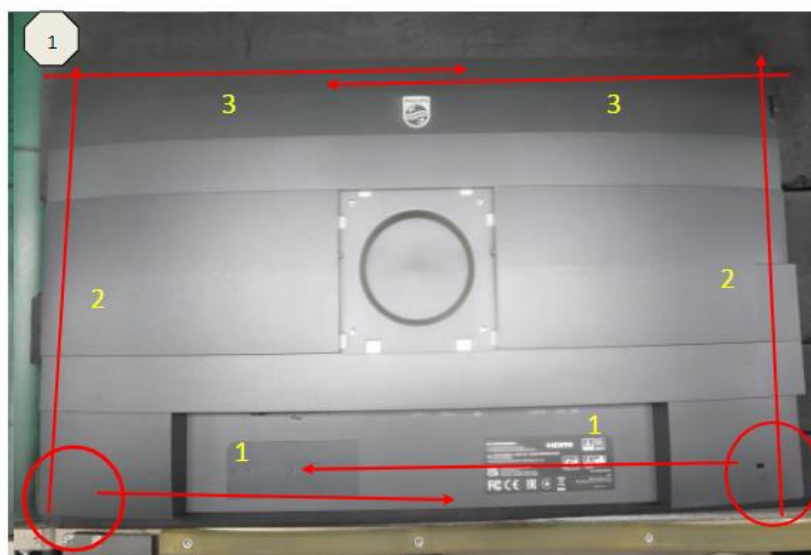


- Use the tool to open all the latches.
- Disconnect cable.

Remove main
frame



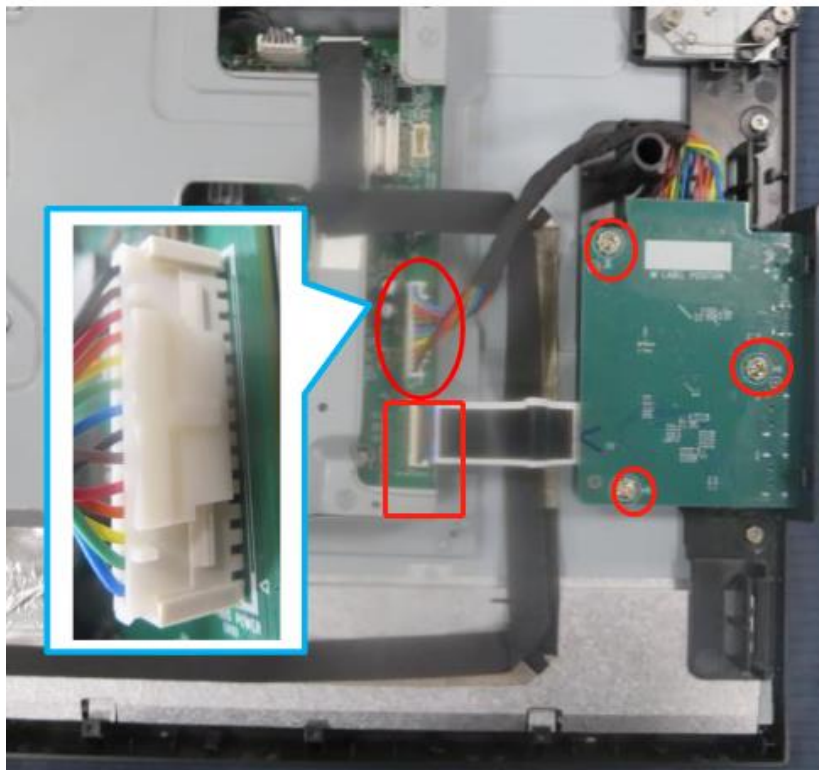




- Tear out all the tapes and mylar.
- Release screws and disconnect all the cables.
- Lift up mainframe to disconnect cable.



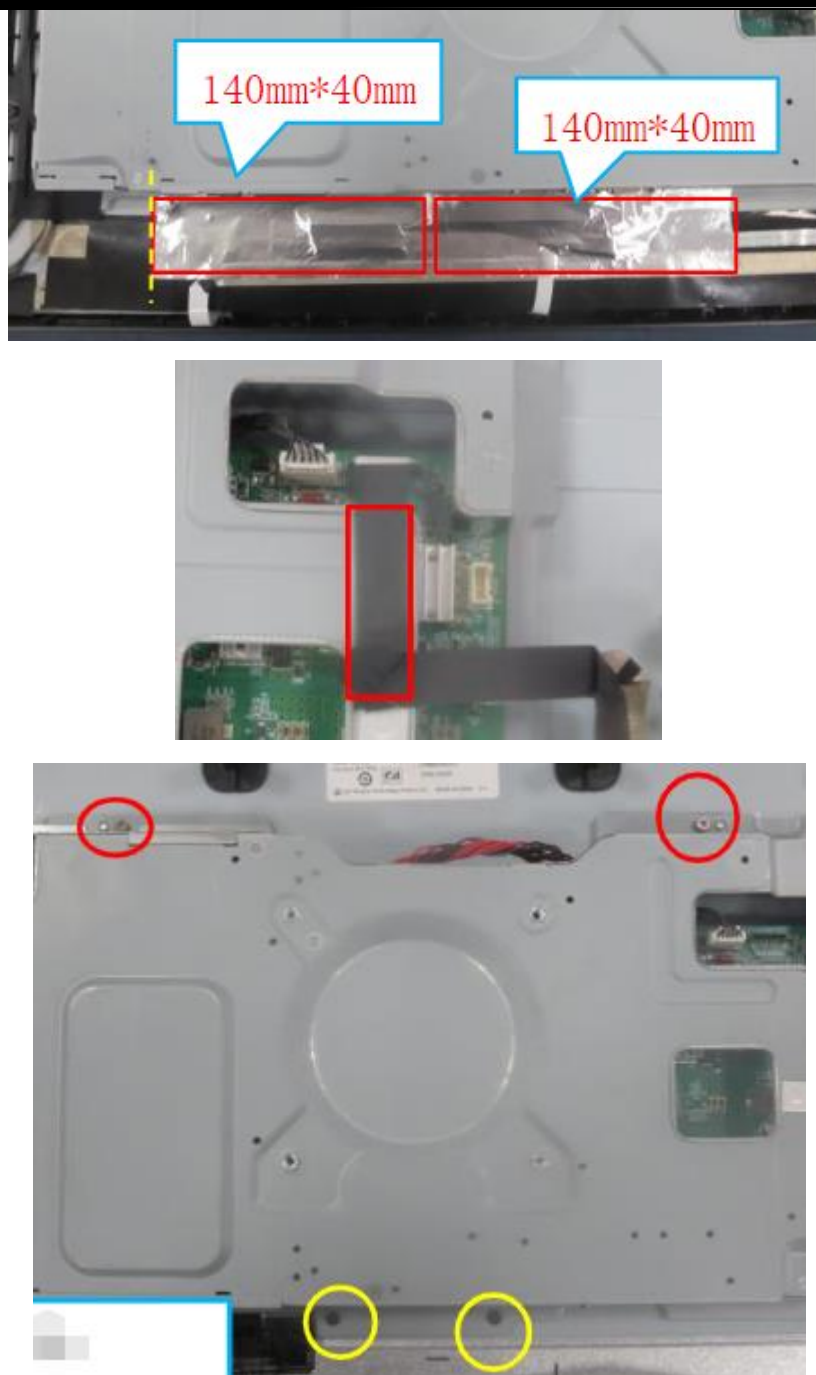


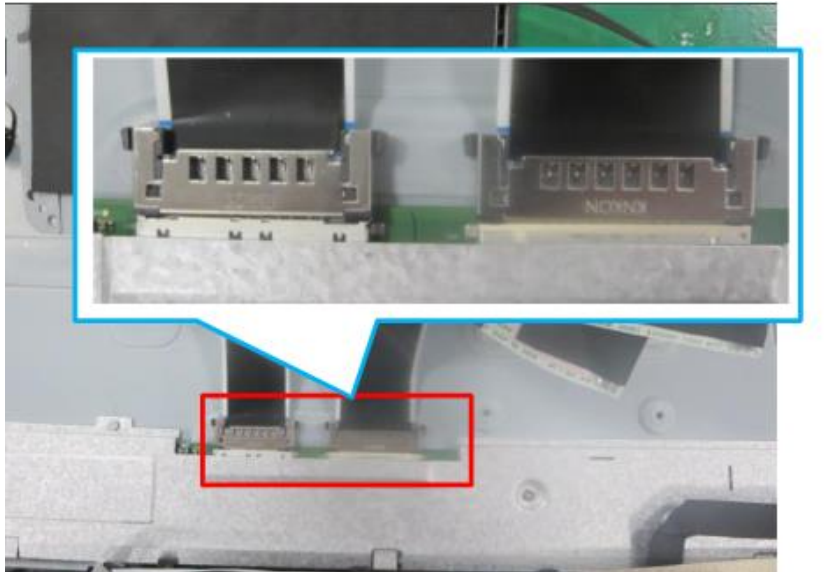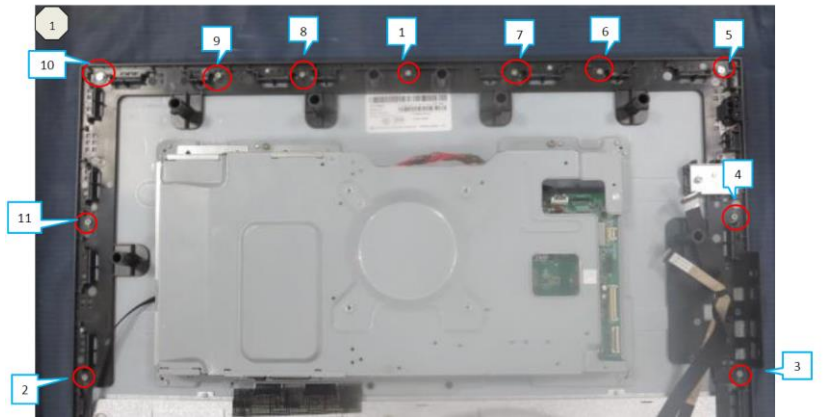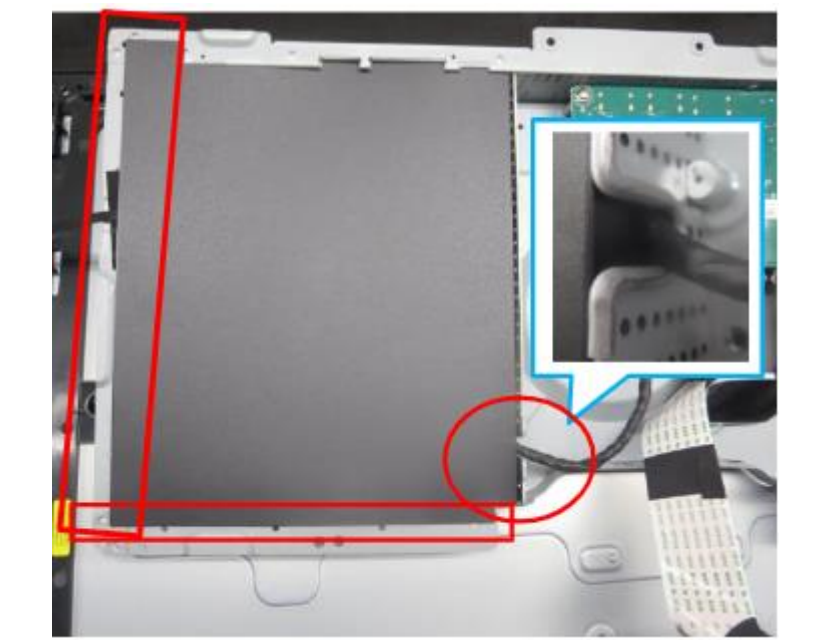


		
Remove middle frame		● Release all the screws.
Separate boards from main frame		● Take out mylar ● Release screws to take out switch board ● Keep sponge in place.

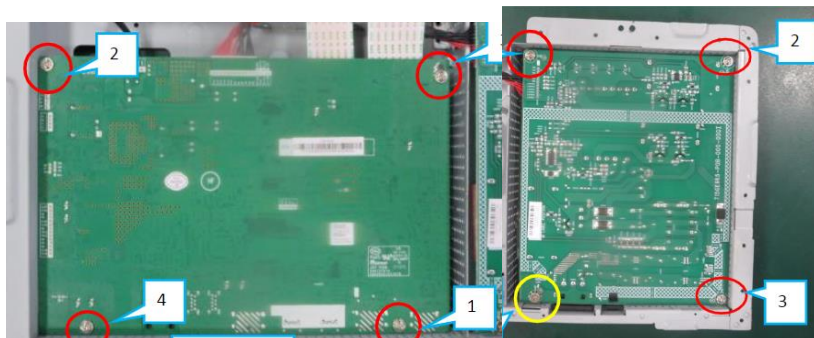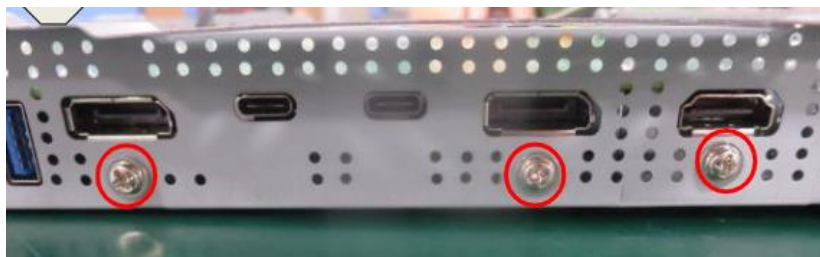


Remove sensor
and key board

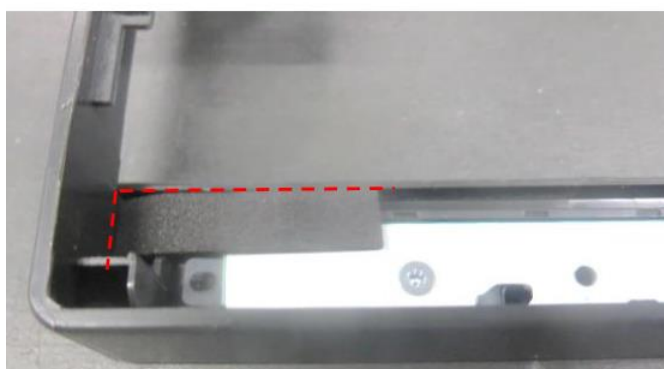

- Take out sponge
- Release screws to take out key board.
- Release screw to take out sensor board.
- Keep earphone hang in place.

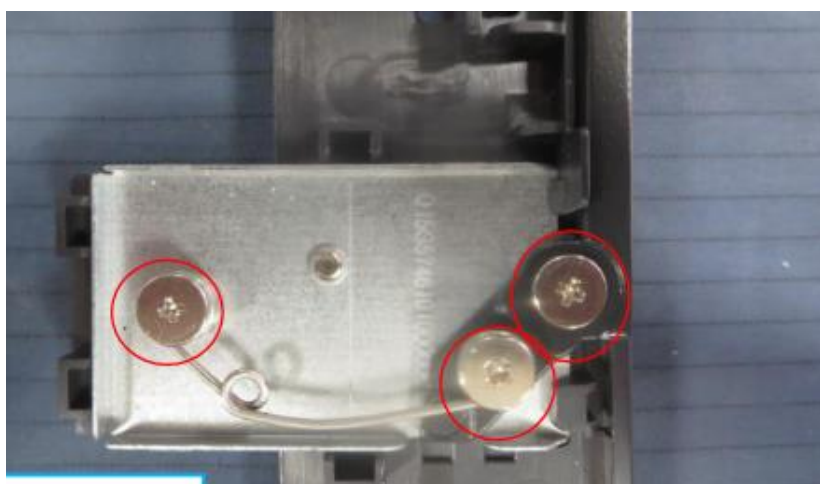

Remove speakers

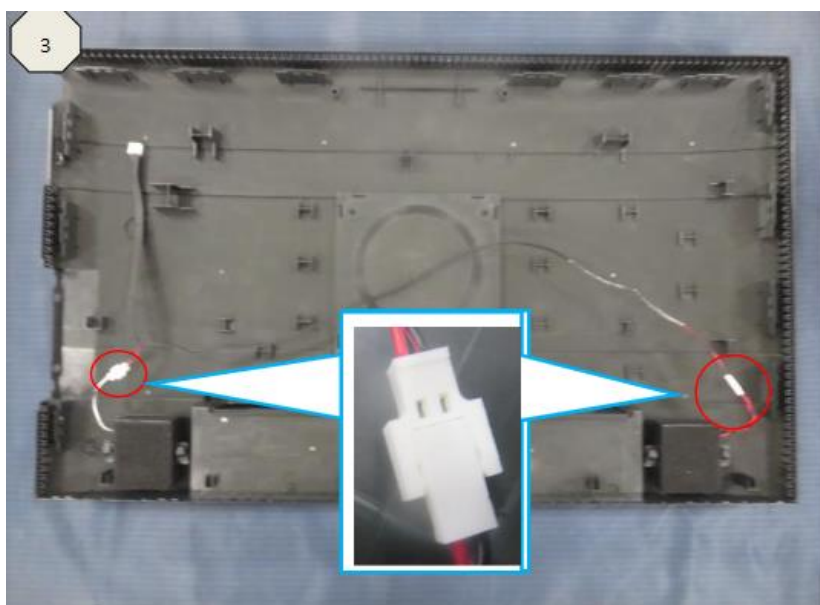

- Disconnect cables.
- Take out speakers.



PHILIPS

27B2G5601

