

Professional Display Solutions

L Line

41BDL7424L



User Manual (English)

www.philips.com/welcome

Table Of Contents

1.	Safety	Instructions	
2.	Prepa 2.1. 2.2. 2.3. 2.4.	rations Unpacking Package Contents Holding the cabinet Installation Notes	
3.	Produ 3.1. 3.2. 3.3. 3.4. 3.5.	ct overview Front view Rear view Side view Top view Bottom view	
4.	Prepa 4.1. 4.2.	ration Testing the cabinet Removing the opening	15
5.	Instal	ation	
6.	Conn 6.1. 6.2.	ection Connecting the signal a Mounting scheme	and power cables22
7.	Instal	ing the modules	24
8.	Dehu 8.1. 8.2. 8.3. 8.4. 8.5. 8.6.	midification function Installing the program. Firmware upgrade and Configuring dehumidif Activating Dehumidific Cancelling Dehumidific Notes	verification
9.	Using	the LED display control	ler34
Арр	Appe Appe Appe Acces Appe Appe Appe	s ndix A. Appendix A. Wa ndix B. Appendix B. Tro ndix C. Dew point VS. R ndix D. Optional Comp sories ndix E. Technical Specif ndix F. Magnet tension ndix G. Power/Data cat ndix H. Mounting scher	arranty Statement 35 publeshooting 37 celative Humidity 38 onents/ fications


1. Safety Instructions

Read this first

The latest User's Manual, Quick Start Guide and FAQ are available for download from the Philips website.

Warning & Symbols

Refer to the following graphic symbols to alert you to important information:



- Cautions: notices describing actions that may damage your product.
- Warnings: instructions that must be followed. Failure to observe may damage your product.

Safety guidelines

Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Safety precautions and maintenance



 \wedge

WARNING: Use of controls, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

Read and follow these instructions when connecting and using your display:

Operation:

- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Keep the display away from oil, otherwise the plastic cover may be damaged.
- It is recommended to set the display up in the well-ventilated place.
- Ultra-violet ray filter is necessary of outdoor operation.
- If the product will be used in extreme conditions such as high temperature, humidity, display patterns or operation time etc... It is strongly recommended to contact Philips for Application engineering advice. Otherwise, its reliability and function may not be guaranteed. Extreme conditions are commonly found at Airports, Transit Stations, Banks, Stock market, and Controlling systems.
- Remove any object that could fall into ventilation holes or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Ensure the use of an approved power cord provided by Philips at all times. If your power cord is missing, please contact your local service center.
- Do not subject the display to severe vibration or high impact conditions during operation.
- Do not knock or drop the display during operation or transportation.
- The eye bolt is for usage in short-time maintenance and installation. We suggest not to use the eye bolt for more than 1 hour. Prolong usage is prohibited. Please keep a clear safety area under the display while using the eye bolt.

Maintenance:

- To protect your display from possible damage, do not put excessive pressure on the LED display. When moving your display, grasp the frame to lift; do not lift the display by placing your hand or fingers on the LED display.
- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water, and send the unit to the maintenance center.
- Do not store or use the display in locations exposed to heat, direct sunlight or extreme cold.
- In order to maintain the best performance of your display and ensure a longer lifetime, we strongly recommend using the display in a location that falls within the following temperature and humidity ranges.

Environmental absolute ratings

Item	Min.	Max.	Unit
Storage temperature	-20	50	°C
Operation temperature	-20	45	°C
Storage humidity	10	85	% RH
Operating humidity	10	80	% RH

- LED display temperature need to be 25 degrees Celsius at all time for better luminance performance.
- Only the lifetime of the display stated in this specification is guaranteed if the display is used under the proper operation conditions.

IMPORTANT: Always activate a moving screen saver program when you leave your display unattended. Always activate a periodic screen refresh application if the unit will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause inconsistent display performance

Service:

- The cabinet and LED modules should be installed or removed only by qualified service personnel.
- If there is any need for repair or integration, please contact your local service center.
- Do not leave your display under direct sunlight.



If your display does not operate normally, having followed the instructions set out in this document, please contact a technician or your local service center.

Stability Hazard.

The device may fall, causing serious personal injury or death. To prevent injury, this device must be securely attached to the floor/ wall in accordance with the installation instructions.

IEC/EN 62368: A product may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or installation methods recommended by the manufacturer of the product set.
- ALWAYS use furniture that can safely support the product.
- ALWAYS ensure the product is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the product or its controls.
- ALWAYS route cords and cables connected to your product so they cannot be tripped over, pulled or grabbed.
- NEVER place a product in an unstable location.
- NEVER place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support.
- NEVER place the product on cloth or other materials that may be located between the product and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the product or furniture on which the product is placed.

If the existing product is going to be retained and relocated, the same considerations as above should be applied.

Read and follow these instructions when connecting and using your display:

- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen many be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the display does not operate normally when you have followed the instructions in this manual.
- The cabinet and LED modules should be installed or removed only by qualified service personnel.
- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Do not block the ventilation holes on the cabinet.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When turning off the display by detaching the power cable or DC power cord, wait for 6 seconds before reattaching the power cable or DC power cord for normal operation..
- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

EU Declaration of Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), RoHS directive (2011/65/EU).

This product has been tested and found to comply with the harmonized standards for Information Technology Equipment, these harmonized standards published under Directives of Official Journal of the European Union.

ESD Warnings

When user close to the monitor may cause the equipment discharge and reboot to the display of main menu while USB media is playing.

Warning:

This equipment is compliant with Class A of EN55032/CISPR 32. In a residential environment this equipment may cause radio interference.

Federal Communications Commission (FCC) Notice (U.S. Only)



NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only an RF shielded cable that was supplied with the display when connecting this display to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Envision Peripherals Inc. 490 N McCarthy Blvd, Suite #120 Milpitas, CA 95035 USA

Polish Center for Testing and Certification Notice

The equipment should draw power from a socket with an attached protection circuit (a three-prong socket). All equipment that works together (computer, display, printer, and so on) should have the same power supply source.

The phasing conductor of the room's electrical installation should have a reserve short-circuit protection device in the form of a fuse with a nominal value no larger than 16 amperes (A).

To completely switch off the equipment, the power supply cable must be removed from the power supply socket, which should be located near the equipment and easily accessible.

A protection mark "B" confirms that the equipment is in compliance with the protection usage requirements of standards PN-93/ T-42107 and PN-89/E-06251.

Wymagania Polskiego Centrum Badań i Certyfikacji

Urządzenie powinno być zasilane z gniazda z przyłączonym obwodem ochronnym (gniazdo z kołkiem). Współpracujące ze sobą urządzenia (komputer, monitor, drukarka) powinny być zasilane z tego samego źródła.

Instalacja elektryczna pomieszczenia powinna zawierać w przewodzie fazowym rezerwową ochronę przed zwarciami, w postaci bezpiecznika o wartości znamionowej nie większej niż 16A (amperów).

W celu całkowitego wyłączenia urządzenia z sieci zasilania, należy wyjąć wtyczkę kabla zasilającego z gniazdka, które powinno znajdować się w pobliżu urządzenia i być łatwo dostępne.

Znak bezpieczeństwa "B" potwierdza zgodność urządzenia z wymaganiami bezpieczeństwa użytkowania zawartymi w PN-93/T-42107 i PN-89/E-06251.


Pozostałe instrukcje bezpieczeństwa


- Nie należy używać wtyczek adapterowych lub usuwać kołka obwodu ochronnego z wtyczki. Jeżeli konieczne jest użycie przedłużacza to należy użyć przedłużacza 3-żyłowego z prawidłowo połączonym przewodem ochronnym.
- System komputerowy należy zabezpieczyć przed nagłymi, chwilowymi wzrostami lub spadkami napięcia, używając eliminatora przepięć, urządzenia dopasowującego lub bezzakłóceniowego źródła zasilania.
- Należy upewnić się, aby nic nie leżało na kablach systemu komputerowego, oraz aby kable nie były umieszczone w miejscu, gdzie można byłoby na nie nadeptywać lub potykać się o nie.
- Nie należy rozlewać napojów ani innych płynów na system komputerowy.
- Nie należy wpychać żadnych przedmiotów do otworów systemu komputerowego, gdyż może to spowodować pożar lub porażenie prądem, poprzez zwarcie elementów wewnętrznych.
- System komputerowy powinien znajdować się z dala od grzejników i źródeł ciepła. Ponadto, nie należy blokować otworów wentylacyjnych. Należy unikać kładzenia lużnych papierów pod komputer oraz umieszczania komputera w ciasnym miejscu bez możliwości cyrkulacji powietrza wokół niego.

Electric, Magnetic and Electromagnetic Fields ("EMF")

- 1. We manufacture and sell many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.
- 2. One of our leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- 3. We are committed to develop, produce and market products that cause no adverse health effects.
- 4. We confirm that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- 5. We play an active role in the development of international EMF and safety standards, enabling us to anticipate further developments in standardization for early integration in its products.

Information for U.K. only

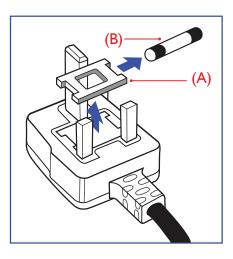

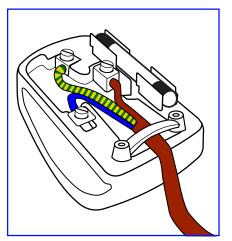

WARNING - THIS APPLIANCE MUST BE EARTHED.

Important:

This apparatus is supplied with an approved moulded 13A plug. To change a fuse in this type of plug proceed as follows:+

- 1. Remove fuse cover and fuse.
- 2. Fit new fuse which should be a BS 1362 5A,A.S.T.A. or BSI approved type.
- 3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate 3-pin plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

NOTE: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N")

BROWN - "LIVE" ("L")

GREEN & YELLOW - "EARTH" ("E")

- 1. The GREEN & YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol or coloured GREEN or GREEN & YELLOW.
- 2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
- 3. The BROWN wire must be connected to the terminal which marked with the letter "L" or coloured RED.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the three wires.

North Europe (Nordic Countries) Information

Placering/Ventilation

VARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIASTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

China RoHS

根据中国大陆《电器电子产品有害物质限制使用管理办法》,以下部分列出了本产品中可能包含的有害 物质的名称和含量。

			有害	物质		
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
铁框	0	0	0	0	0	0
发光二极管	Х	0	0	0	0	0
电路板组件*	Х	0	0	0	0	0
电源线	Х	0	0	0	0	0
其他线材	Х	0	0	0	0	0

本表格依据SJ/T 11364 的规定编制。

*: 电路板组件包括印刷电路板及其构成的零部件,如电阻、电容、集成电路、连接器等。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

上表中打 "X" 的部件, 应功能需要, 部分有害物质含量超出GB/T 26572规定的限量要求, 但符合欧盟 RoHS法规要求 (属于豁免部分)。

备注: 上表仅做为范例, 实际标示时应依照各产品的实际部件及所含有害物质进行标示。



环保使用期限

此标识指期限(十年),电子电气产品中含有的有害物质在正常使用的条件下不会发生外泄或突变,电 子电气产品用户使用该电子电气产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

《废弃电器电子产品回收处理管理条例》提示性说明

为了更好地关爱及保护地球,当用户不再需要此产品或产品寿命终止时,请遵守国家废弃电器电子产品 回收处理相关法律法规,将其交给当地具有国家认可的回收处理资质的厂商进行回收处理,不当利用或 者处置可能会对环境和人类健康造成影响。

警告

此为 A 级产品。在生活环境中,该产品可能会造成无线电干扰。在这种情况下,可能需要用户对 干扰采取切实可行的措施。

			限用物質及	其化學符號		
單元	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr⁺ ⁶)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
鐵框	0	0	0	0	0	0
發光二極管	_	0	0	0	0	0
電路板組件	_	0	0	0	0	0
電源線	_	0	0	0	0	0
其他線材	_	0	0	0	0	0
備考1. ℃″係指	該項限用物質	之百分比含量	未超出百分比	含量基準值。		

備考2. "一"係指該項限用物質為排除項目。

警語: 使用過度恐傷害視力。

注意事項:

(1) 使用30分鐘請休息10分鐘。

(2) 未滿2歲幼兒不看螢幕,2歲以上每天看螢幕不要超過1小時。

警告使用者:

此為甲類資訊技術設備,於居住環境中使用時,可能會造成射頻擾動,在此種情況下,使用者會被 要求採取某些適當的對策。

Turkey RoHS:

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur

Ukraine RoHS:

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057

End-of-Life Disposal

Your new Public Information Display contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.

Please find out about the local regulations on how to dispose of your old display from your local Philips dealer.

(For customers in Canada and U.S.A.)

This product may contain lead and/or mercury. Dispose of in accordance to local-state and federal regulations. For additional information on recycling contact www.eia.org (Consumer Education Initiative)

Waste Electrical and Electronic Equipment-WEEE

Attention users in European Union private households



This marking on the product or on its packaging illustrates that, under European Directive 2012/19/EU governing used electrical and electronic appliances, this product may not be disposed of with normal household waste. You are responsible for disposal of this equipment through a designated waste electrical and electronic equipment collection. To determine the locations for dropping off such waste electrical and electronic, contact your local government office, the waste disposal organization that serves your household or the store at which you purchased the product.

Attention users in United States:

Please dispose of according to all Local, State and Federal Laws. For the disposal or recycling information, contact: www. mygreenelectronics.com or www.eiae.org.

End of Life Directives-Recycling



Your new Public Information Display contains several materials that can be recycled for new users.

Please dispose of according to all Local, State, and Federal laws.

Restriction on Hazardous Substances statement (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1). Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

E-Waste Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit <u>http://www.india.philips.com/about/sustainability/recycling/index.page</u> and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 1800-425-6396 (Monday to Saturday, 9 a.m. to 5:30 pm)

E-mail: india.callcentre@tpv-tech.com

Batteries



For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation.

Please contact your local authority for details on the collection and recycling schemes.

For Switzerland: The used battery is to be returned to the selling point.

For other non-EU countries: Please contact your local authority for correct method of disposal of the used battery. According to EU directive 2006/66/EC, the battery can't be disposed improperly. The battery shall be separated to collect by local service.



Após o uso, as pilhas e/ou baterias deverão ser entregues ao estabelecimento comercial ou rede de assistência técnica autorizada.

Information for EAC	EAC
Month and year of manufacturing	please refer information in Rating label.
Name and location of manufacturer	ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия
Importer and information	Наименование организации: ООО "Профтехника" Адрес: 3-й Проезд Марьиной рощи, 40/1 офис 1. Москва, 127018, Россия Контактное лицо: Наталья Астафьева, +7 495 640 20 20 nat@profdisplays.ru

Cleaning

If the LED display/cabinet becomes dusty, use an air blower which can produce air flow to blow away dust. Cautions when cleaning the display:

 \triangle Do not use a wet cloth to clean the LED display.

 \triangle Do not allow water or other liquid to enter the LED display.

△ Do not use tool that generate large amount of static electricity, such as a bristle brush.

The front of the LED display has been specially treated. Do not touch the surface of the LED display with fingernails or any hard object, otherwise the LED elements may fall off.

Storage

If you are not going to use it for an extensive period of time, unplug the display and keep the product in a dry and well-ventilated location.

2. Preparations


2.1. Unpacking

🔥 Warning:

To prevent damage to the LED panel, wear anti-static gloves before installing/touching the display.

After unpacking, do not place the display vertically on the floor, an accident such as fall may be caused.


- 1. Use a pair of scissors to cut sealing tape on the cardboard box.
- 2. Carefully take the cabinet and accessories out of the cardboard box.
- 3. After opening the cardboard box, ensure that the contents are complete and in good condition.

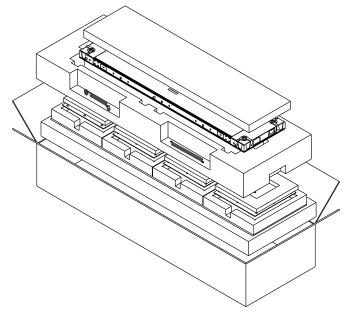

2.2. Package Contents

Please verify that you received the following items with your package content:

- LED display
- Quick start guide
- Power cable (daisy chain)
- LAN cable (RJ45, CAT-5)

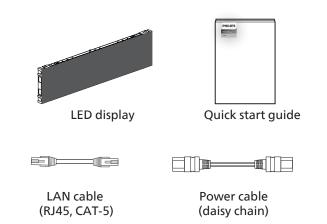

* Display design and accessories may differ from those illustrated above.


NOTES:

- For all other regions, apply a power cord that conforms to the AC voltage of the power socket and has been approved by and complies with the safety regulations of the particular country.
- You might like to save the package box and packing material for shipping the display.

2.3. Holding the cabinet

🔥 Warning:

To prevent damage to the LED, do NOT touch the edge of each LED module when holding the cabinet by hand. Refer to the illustration below for the recommended manner of holding a cabinet.

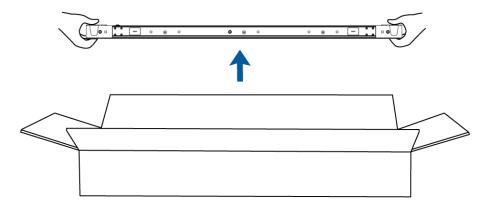


2.4. Installation Notes


- Only use the power cable provided with this product. If an extension cord is required, please consult your service agent.
- The product should be installed on a flat surface, or the product may tip over. Leave a space between the rear of the product and the wall for proper ventilation. Do not install the product in a kitchen, bathroom or a place exposed to moisture, failure to do so may shorten the life of the internal parts.
- Do not install the product where it is 5000m and higher in altitude. Failure to do so may result in malfunctions.

Product overview 3.


3.1. **Front view**

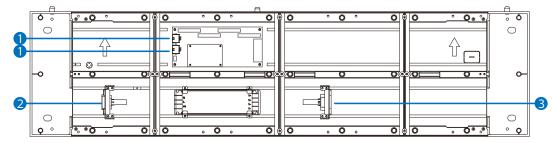

3.2. Rear view

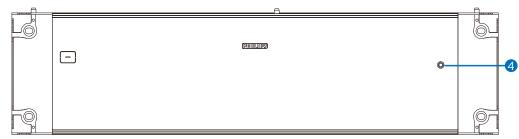

3.3. Side view



Right side

Top view 3.4.



3.5. **Bottom view**


		0	0 0 0	0 0	• - • • •
No.	Component	No.	Component]
	Data connector (s)	3	Power Out connector]
2	Power In connector	4	CHECK button		

A The Data connector () is an RJ45 connector, but it cannot be connected with a network switch or common computer networking device as it is not compatible.

4. Preparation


4.1. Testing the cabinet

- 1. Power on the product by connecting the power cable from the cabinet to the power outlet.
- 2. Press the CHECK button on the back of each cabinet to check if the product can operate normally.
- 3. Check whether each color is displayed normally on the screen from the front side of the display.

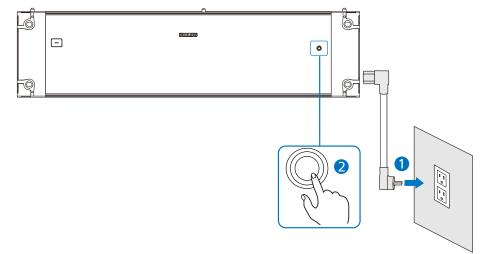

To test the cabinet, a power cable that connects from the cabinet to the power outlet is required (but not provided).

4.2. Removing the opening

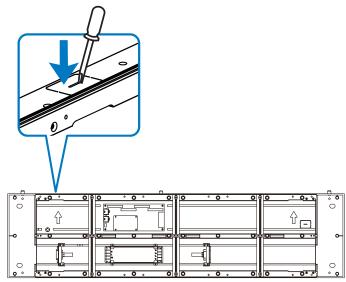


Ø Before breaking the opening, determine the number of displays to install and the installation layout to form a large video wall array.


5. Installation

▲ Precautions when handling the cabinets:

- Do not drop or apply shock/vibration to the product. Strong impacts may damage the component inside.
- Only a qualified service technician should perform installation.
- Only use approved cabinets.
- Be careful not to damage the corners of the cabinet.
- Install the display in a well-ventilated area.
- After removing the protective brackets, do not place the display with the LED facing down, the LED display may become damaged.
- Always wear anti-static gloves when touching the display.
- Provide air conditioning around the LED display to allow heat dissipation away from the display.
- To maintain proper ventilation, keep clear space from the mounted displays to the wall. (Refer to the diagram below for the
 recommended distance between the LED display and wall). Installing the product in poorly ventilated spaces may damage the
 LED.

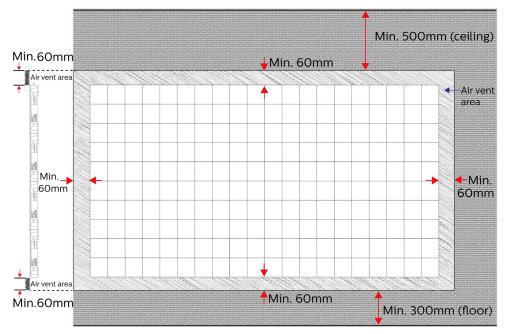


A wall mount kit (in some regions sold separately or available from third party vendors) allows you to mount the LED display on the wall. For detailed information on installing the wall mount, see the instructions provided with the wall mount. Wall mounting can only be performed from the front side of cabinets.

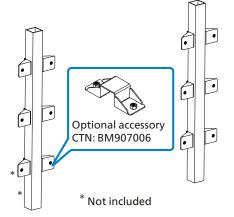

The mounting interface should be strong enough to bear the weight of the display. Ensure that your wall mount bracket has the mounting holes accurately drilled at proper position.


Step 1.

Start your installation from the bottom row. Insert the connecting plate with screw bolt into the mounting hole on the bracket. Rotate the hex key clockwise until the screw bolts are firmly fastened.

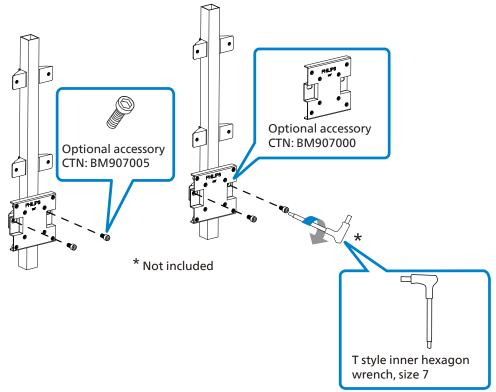


Step 2.

Move up to install the next row. Install the connecting plates on the bracket. Rotate the hex key clockwise until the screw bolts are inserted. Do not tighten the screw bolts yet, as this will cause unevenness of the connecting plates.

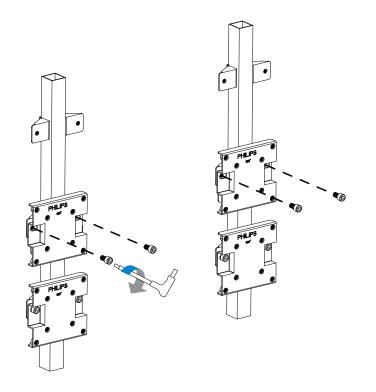


Step 3.

Align the cabinet with the connecting plate and secure the cabinet to the holes on the connecting plate. Rotate the hex key clockwise until the screw bolts are inserted. Do not over tighten the screw bolts yet as you may need to adjust the connecting plates again.

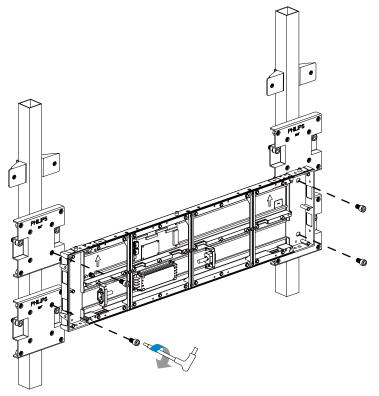


Step 4.

Tighten the screw bolts (1). Move up to install the next row. Install the connecting plates on the bracket. Rotate the hex key clockwise until the screw bolts are inserted (2). Do not tighten the screw bolts yet, as this will cause unevenness of the connecting plates.

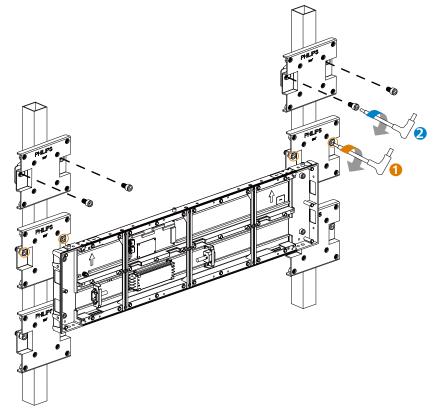


Step 5.

When mounting two cabinets one on top of the other, hold the cabinet at both side edges and slide it down vertically. If the cabinet seems to be tilting to one side, adjust it until the display becomes level.

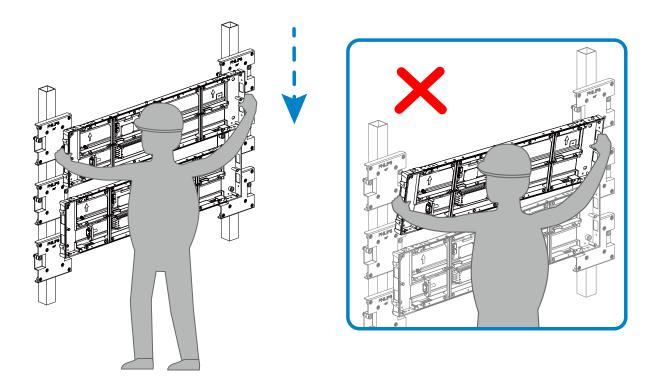


Step 6.

Align the second cabinet with the connecting plate and secure the cabinet to the holes on the connecting plate. Rotate the hex key clockwise until the screw bolts are inserted. Do not over tighten the screw bolts yet as you may need to adjust the connecting plates again.

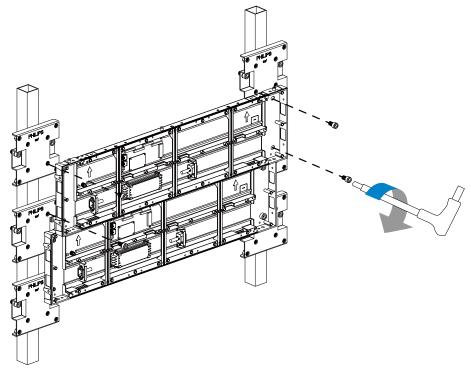

Step 7.

Tighten the screw bolts (1). Repeat the above steps until all cabinets are mounted onto the bracket. Adjust the flatness of the LED display (if necessary). Firmly tighten the screw bolts to secure the cabinets to the mounting bracket (2).

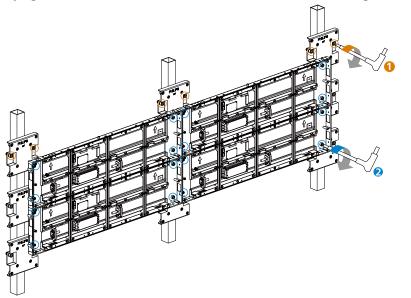

Step 8. (for combination of xxBDL7424L and xxBDL7524L)

For installation of two types of cabinets with different side angles, appropriate clearance between two cabinets must be considered. Follow the installation steps below.


Tighten the screw bolts (1). Repeat the above steps until all cabinets are mounted onto the bracket.

Use the feeler gauges to ensure accurate gap is reserved between the cascaded cabinets. Insert 2 pieces of 0.5mm feeler gauge into the gap between two parts as illustrated below (2).

The feeler gauges are not provided with the product.

Adjust the flatness of the LED display (if necessary). Firmly tighten the screw bolts to secure the cabinets to the mounting bracket (3).

After installation is complete, pull out the feeler gauges.

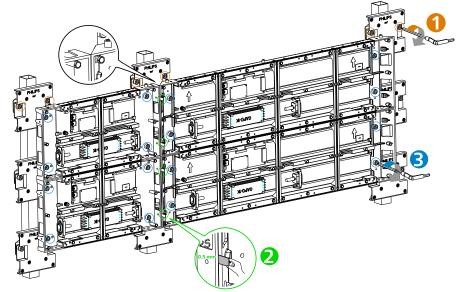

Guideline for minimum distance between LED to (shop) glass window:

Local situations can differentiate a lot, below is a guideline for such installations;


Minimum distance LED to window for 7000-series, P2.4 pixel pitch:

Minimum distance: 1 CM.

Conditions: 1. Calibration should be ON.

2. Ambient temperature should not exceed 45 degrees Celsius.


If the ambient temperature between glass window and LED display exceeds 45 degrees Celsius, then active cooling is required or more distance from glass window is required for more airflow to cool down temperature below 45 degrees Celsius. This guideline will work for most shopping malls and indoor usage where **no direct sunlight** is applicable.

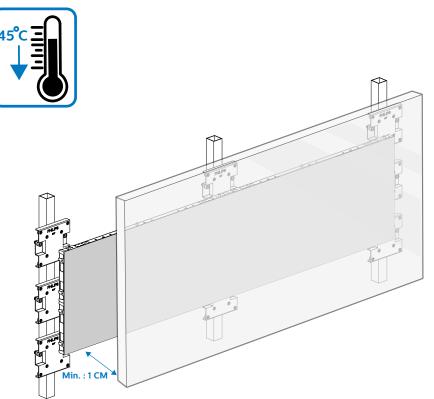

The lifetime of the LED's will be much affected by the usage scenario. We recommend for longer life time to optimize the brightness and to use the product less than 24/7 to decrease the effect of brightness decay.

6. Connection

6.1. Connecting the signal and power cables

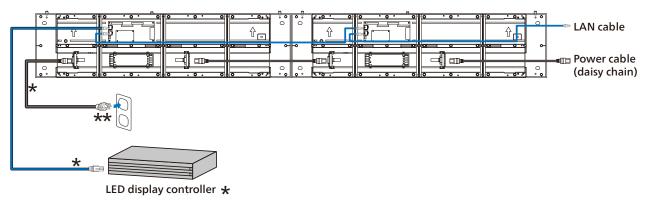

* Optional accessories

** Power plug types vary by country/region.

▲ Cautions

Connection is allowed up to 4 cabinets when the 110 VAC power supply is used.

Connection is allowed up to 8 cabinets when the 220 VAC power supply is used.

Max. daisy chain cable current rating: 10 Amp (please take this into account when you combine different cabinets)

Turn off the power of all devices first before connecting cables.

- 1. Connect the power cable from the "Power Out" port of the first cabinet to the "Power In" port of the second cabinet.
- 2. Connect the signal cable from the Data port of the first cabinet to Data port of the second cabinet for video signal transmission. Connect the power cable from the "**Power In**" port of the first cabinet to the power outlet.
- 3. Connect one end of the data cable of the first cabinet to the LED display controller.
- 4. Repeating steps 2-3 enables the daisy chain connection.

▲ Caution

Plug the power plug into the electric outlet only when the cables are properly wired.

🖉 Notes:


In some larger installations, you may need to do the wiring for RJ45 and power cables via the backside where opening is unavailable. In such situation this can be solved by using 1 cabinet with 45 degree corner cut (75xx series) to have an opening towards the backside for cables/wiring.

6.2. Mounting scheme

The variety of cabinet sizes and layout configurations allows you to build any LED video wall array as needed.

Before mounting, determine the number and size of displays to install, then identify the alignment pins on the top of the cabinets. As the position of the alignment pin differs by models, you may need to adjust the alignment pin if necessary.

To make such adjustment, use a hexagon wrench (not provided) to remove the alignment pin and insert it into the new alignment screw thread hole.

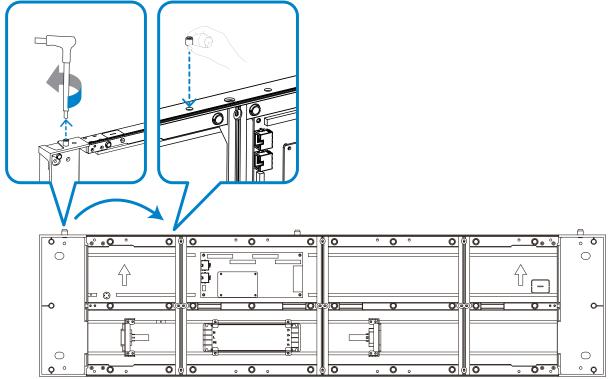


🖉 Notes:

The tool used in this step is Inner hexagon wrench, size 4.

7. Installing the modules


When installing the modules, refer to the instruction and installation order specified below. Note that screen output may not be displayed properly if instructions are not followed.

Every cabinet has a serial number supplied and this serial number is located on the label that is affixed to the interior of the cabinet. Whereas one label can be found inside each module indicating the serial number of the module. This label provides important information to uniquely identify every single module, as it allows you to easily locate the correct module that connects to the cabinet. When installing the module onto the cabinet, make sure the serial number on the module label matches that of the cabinet label.

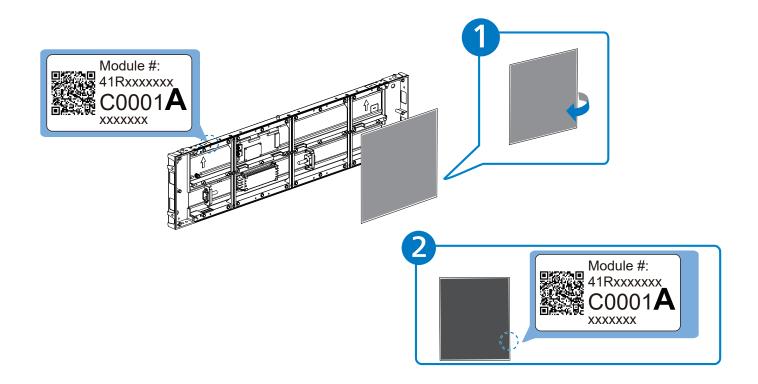

The 16th digit of the serial number corresponds to the position code of the module. Follow the ascending alphabetical order to install the module to correct position. Refer to the diagram 2 below on the proper order of installing the modules.

To install the module to the hub board, the flat cable that connects between them has to be properly wired. One end of the flat cable is already attached to the hub board, use the other end to connect it to the module. Before connection, make sure that the arrow sign on the module is pointing up. Connect the flat cable to the connector on the module until it clicks into place. To prevent reversed connection when connecting the cable, locate the star sign on the module first. Ensure that the star sign and the red stripe on the cable match up (refer to the diagram 3 below.)

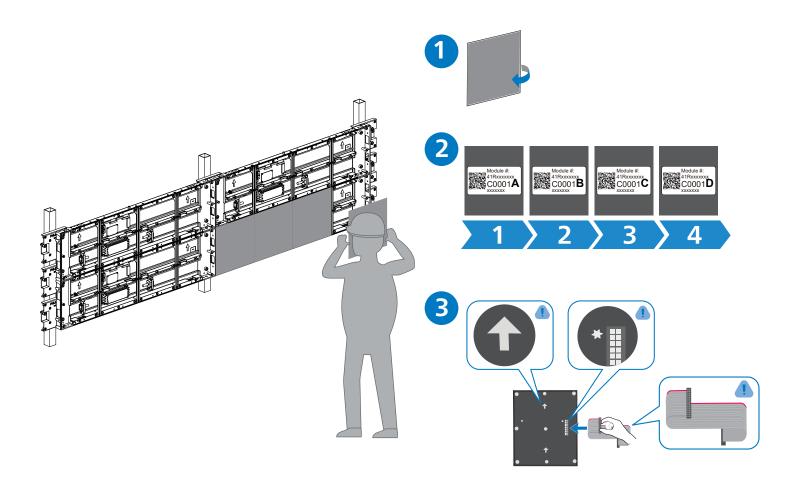

8. Dehumidification function

Purpose of dehumidification in LED display

Internal parts and elements tend to corrode during storage when the LED display is left unused for a long period of time in a humid environment. In particular when moisture gets into the diode, it may cause blurred screen or defective LED. As a result, the dehumidification has an important role to play in the performance and lifespan of LED display.

Principles of dehumidification

Configuring LED display controller settings allows the display to change the brightness level from low to high during boot up process. Likewise, the heat generated in the fade up process can take moisture out of the LED display. A stepwise fade up process can avoid impulse current caused by damp diode when booting up the display.

8.1. Installing the program

Dehumidification function is a custom-built procedure designed for use with specific LED display controller firmware.

- 1. Get the program "Nova LCT V5.4.2 Plus" from your local distributor and download it to your computer.
- 2. Install the program "Nova LCT V5.4.2 Plus".
- 3. Connect the USB cable to your PC and run "Nova LCT V5.4.2 Plus" that you installed.

8.2. Firmware upgrade and verification

Select the User tab.

1. Select Advanced Synchronous System User Login(A). See Figure 1-1.

🚺 NovaLCT V5.4.	2 plus								-	×
System(S) Set	tings (C)	Tools(T)	Plug-in (P)) Us	ser(U)	Language(L)	Help(H)			
	1 100		•		Advar	nced Synchrono	us System I	JserLogin(A)		
	- .				Dem	onstration Login	I(E)			
Cloud Monitoring	Brightne	ss Scre	en Control	M	Media	a Player Login(T)			
-Local System Infor	mation									
Control System Monitor Information			Other Dev	rice	0		View Detail:	s of Device		
					<u>9</u>					
	•							۲		
L										
Service Status: Ser	rvice versior	n:3.1.1								

Figure 1-1

2. Enter the password and click Login. The default password is admin or 666. See Figure 1-2.

💇 NovaLCT V5.4.2 plus		- 🗆 X
System(S) Settings (C) Too	ıls(T) Plug-in (P) User(U) Language(L) Hel‡	p(H)
Cloud Monitoring	Screen Control Monitoring Multi-function Card	Test Tool
Local System Information		
	User Login X	
Control System 1		etails of Device
Monitor Information	Password ****	
F		
	Login Cancel	
-		
Service Status: Service version:3.1	.1	

Figure 1-2

3. Enter the password admin or 666888 in the main menu. See Figure 1-3.

System(S) Setti	ngs (C) Tools(T)	Plug-in (P) U	Jser(U) Lan	guage(L) Help			e.
Cloud Monitoring	Screen Configura	tion Brightness	Calibration	Screen Control	Monitoring	Multi-functio	on Card
Local System Inform	nation						
Control System	1	Other Device	0	View D	etails of Device	<u>e</u>	
Monitor Information							
9			兒				
			•				

Figure 1-3

4. A dialog box will then appear as shown in Figure 1-4. Select the Communication port for operation. Click Reconnect if you need to reconnect the LED display controller.

	NovaLCT V5.4.2 /stem(S) Settir	ngs (C) Tools(1			guage(L) Help	(H)		
al System Information gram loadingthe current communication port has device accessed he program is loading Select operation communication port Current operation communication port Current operation communication port Current operation communication port Current operation communication port Select the program Program name Ver. Program version Ver Program path SelectAdd-ins MCU of sending card Sending card Receiving FPGA of sending card Hardware Program Version Information) Plug-in (P) (Jser(U) Lan				
al System Information gram loadingthe current communication port has device accessed he program is loading Select operation communication port Current operation communication port Current operation communication port Current operation communication port Current operation communication port Select the program Program name Ver. Program version Ver Program path SelectAdd-ins MCU of sending card Sending card Receiving FPGA of sending card Hardware Program Version Information	oud Monitoring	Screen Configur	ation Brightness	Calibration	Screen Control	Monitoring	Multi-functio	n Card
he program is loading Select operation communication port Current operation communication port Com3 Device count 1 Select the program Program name Ver. Program name Ver. Program version Ver Program path Browse Receiving card prog SelectAdd-ins SelectAdd-ins SelectAdd-ins SelectAdd-ins SelectAdd-ins Hardware Program Version Information	al System Inform	nation	-					
Select operation communication port Current operation communication port Current operation communication port CoM3 Device count 1 Select the program Program name Ver. Program name Ver. Program version Ver Program path Browse Receiving card prog SelectAdd-ins SelectAdd-ins SelectAdd-ins SelectAdd-ins SelectAdd-ins Hardware Program Version Information	gram loading	the current com	nunication port ha	s device acces	sed			
Current operation communication port COM3 Device count 1 Select the program Program name Ver. Program version Ver Program path Browse Receiving card prog Select Add-ins Browse Receiving card prog MCU of sending card Select MCU FPGA of receivin Update Hardware Program Version Information Environ Environ Environ		-						
communication port COM3 Device count 1 Select the program Program name Ver. Program version Ver Program path Browse Receiving card prog Select Add-ins MCU of sending card FPGA of Card MCU FPGA of receiving. Update Reconneu Hardware Program Version Information		ion —						
Program name Ver. Program version Ver Program path SelectAdd-ins MCU of sending card Receiving FPGA of card MCU Reconner Hardware Program Version Information			ЭМЗ		~	Device count	1	
Program version Ver Program path Browse Receiving card prog SelectAdd-ins MCU of sending card FPGA of Card MCU FPGA of receivin MCU of sending card Card MCU receivin Update Hardware Program Version Information Enderstand Enderstand	Select the progr	am						
Program path Browse Receiving card prog Select Add-ins MCU of Sending card Sending card Card MCU PGA of Card MCU Perceivin Update Reconner Hardware Program Version Information	Program name	Ver.						
SelectAdd-ins MCU of sending card FPGA of Card MCU FPGA of receivin Update Reconnet Hardware Program Version Information Image: Card MCU	Program versio	in Ver						
Select Add-ins MCU of sending card FPGA of Card MCU FPGA of receivin Update Reconnet	Program path					Browse	Receiving	card prog
MCU of Sending card Sending card Card MCU FPGA of FPGA of Sending card						-		
	sending car	d 🖵 sending	card Card	in ing			Update	Reconne
	Sending car	d Sending	card Card	MCU	receivin	R		
	Sending car	d Sending	card Card	MCU	receivin	🔹 🗆 R		
	Sending car	d Sending	card Card	MCU	receivin	÷ R		
	Sending car	d Sending	card Card	MCU	receivin	P R		
	Sending car	d Sending	card Card	MCU	receivin	÷ R		
	Sending car	d Sending	card Card	MCU	receivin	R		
	Sending car	d Sending	card Card	MCU	receivin	÷ R		
	Sending car	d Sending	card Card	MCU	receivin	R		
Information Console	Sending car	d Sending	card Card	MCU	receivin	P.		
nformation Console	Sending car	d Sending	card Card	MCU	receivin	R		
	Sending car	d Sending	card Card	MCU	receivin			Refrest
Information Console	Sending car	d Sending	card Card	MCU	receivin	€ R		Refrest

Figure 1-4

5. Inform your supplier the model of the LED display controller you are using, a corresponding firmware will then be provided to you. Click **Browse** to search the firmware file provided by your supplier. See Figure 1-5.

🛿 NovaLCT V5.4.2 plus – 🗆 🗙
System(S) Settings (C) Tools(T) Plug-in (P) User(U) Language(L) Help(H)
Cloud Monitoring Screen Configuration Brightness Calibration Screen Control Monitoring Multi-function Card
Local System Information
rogram loadingthe current communication port has device accessed — 🛛 🗙
Program loading Select the communication port for operation
Communication part
for the current operati COM3 COM3 Device q 1
Program updating
Program Pat C:Userstknnnnn/Desktop/firmware/DATA_MCTRL300_V4.7.4.1 add dry mode
Program Pat C:Usersijknnnnni/Desktopitirmware/DATA_MCTRL300_V4.7.4.1 add dry mode
Advanced
Advanced
Extend the operation item
Read-back of recei
read back of ecel.
Hardware Program Version Information
● Refres ○ Refres Sendi 1 💠 Outp 1 🐥 Recei 1 🖨 🗌 Refres
Information Console
Clear

Figure 1-5

6. Click Update to start updating. See Figure 1-6.

Novalut v 3.4.2 p	nus					\sim
system(S) Setting	gs (C) Tools(T)	Plug-in (P) User(U)) Language(L) He	elp(H)		
oud Monitoring	Screen Configuration	Brightness Calil	bration Screen Contr	ol Monitoring	Multi-function Car	d
gram loadingth	ne current communic	ation port has devic	e accessed		- 0	>
rogram loading Select the comm Communication for the current op		ation	~ I	Device q 1	Recont	iect
Program updating	9					
Program Pat	C:\Users\jknnnnn\De	sktop\firmvvare\DATA_M	CTRL300_V4.7.4.1 add dr	y mode	Browse	
Advanced					Update	
Extend the operat	ion item					-
Read-back of rece						
erdware Program • Refres O R	Version Information Refres Sendi 1	Outp 1	Recei 1	🗧 🗌 Refi	res Refre	sh
formation Console	e					
					Cle	ar

Figure 1-6

7. After the update is complete, click OK. See Figure 1-7.

MovaLCT V5.4.2 p		e 1-7.				– 🗆 X
System(S) Setting	is (C) Tools(T)	Plug-in (P) U	Jser(U) Lan	guage(L) He	lp(H)	
Cloud Monitoring	Green Configuration	n Brightness	Calibration	Screen Contr	Monitoring	Multi-function Card
Program loadingth		ication port has	s device acces	sed		- 🗆 X
Program loading Select the comm Communication for the current op		eration		~ [Device q 1	Reconnect
Program updating						
Program Pat	C:\Users\jknnnnn\D	esktop\firmware\D	ATA_MCTRL300	_V4.7.4.1 add dr ₃	' mode	Browse
Advanced						Update
Extend the operat						
Hardware Program		1 🚺 Succe	ssful program OK			fres Refresh
Information Console	9					
						Clear

Figure 1-7

8. Verification

In hardware program version information, click Refresh (default value is Refresh All). Verification process starts by checking the version numbers between the LED display controller and the one with dehumidification. If the version numbers are consistent, it indicates that firmware upgrade is successful. See Figure 1-8.

stem(S) Se	ettings (C)	Tools(T)	Plug-in (P)	User(U)	Language(L)	Help(H)		
ud Monitoring	-	Configuratio	on Brightnes	s Calibra	ation Screer	Control	Monitoring	Multi-fur	nction Card
al System Info	15		7.0						
		ent commu	nication port l	has device i	accessed				
rogram loadii Select the co Communica for the curre	- mmunicatio ition port	on port for op COM3	eration			✓ Devi	ceq 1		Reconne
Program upd	ating								
Program Pa	t C:\Us	ersýknnnnnV	∂esktop\firmwar	eVDATA_MCTI	RL300_V4.7.4.1	add dry mo	de		Browse
Advanced									Update
Extend the op	eration iter	n							
Read-back of	recei								
ardware Prog Refres (ram Versior O Refres	Sendi	1 😫 0	utp 1	Recei	. 1	🗧 🗌 Re	fres	Refrest
ardware Prog ● Refres (Hardware Sendir V4	ram Versior Refres program ver Ig Card I.7.4.1 Total1	Sendi	1 😫 0				🗌 Re	fres	Refrest
Ardware Prog Refres (Hardware Sendir Sendir Receiv Receiv	ram Version Refres program ver Ing Card I.7.4.1 Total1 ving Card ving Card veeiving Card	Sendi sion informatio Remarks:2020 MCU otal1,Remarks	1 🖶 0	ICTRL300_V4	4.7.4.1 add dry_		€ □ Re	fres	Refrest
Refres (Refres (Sendir Sendir Sendir Receiv - V4 - Receiv	ram Version Refres program ver ing Card J.7.4.1 Total1 ring Card ceiving Card ceiving Card v4.6.8.42 T ceiving Card	Sendi sion informatio Remarks:2020 MCU otal1 ,Remarks FPGA	1 0 on 0.07.31 DATA_N	1CTRL300_V4 sPlus_MCU_V	4.7.4.1 add dry_ /1.3.6.19-LZW		€	fres	Refrest
Refres (Refres (Sendir Sendir Sendir Receiv - V4 - Receiv	ram Version Refres program ver ing Card i.7.4.1 Total1 ving Card i.ceiving Card iV4.6.8.42 T iV4.6.8.42 T	Sendi sion informatio Remarks:2020 MCU otal1 ,Remarks FPGA	1 0 0.07.31 DATA_N 2021.07.07 A5:	1CTRL300_V4 sPlus_MCU_V	4.7.4.1 add dry_ /1.3.6.19-LZW		€ □ Re	fres	Refrest

Figure 1-8

8.3. Configuring dehumidification settings

- When the LED display is operated normally over a period of time, follow the steps below before you turn the display off:
- 1. Run the program Nova LCT V5.4.2 Plus.
- 2. After screen configuration is complete, click Brightness. See Figure 2-1.

System(S) Sett	ings (C) T	iools(T) Plu	ıg-in (P) U	ser(U) Lanı	guage(L) Help			
Cloud Monitoring	Screen Co	nfiguration	Brightness	Calibration	Screen Control	Monitoring	Multi-function Ca	ard
_ocal System Infor	mation							
Control System	1	Ot	her Device	0	<u>View D</u>	etails of Device	2	
Monitor Informatior)			-				-
				界				
				•		(
				•				

Figure 2-1

3. In brightness adjustment screen, click the Enable Dry mode checkbox. See Figure 2-2.

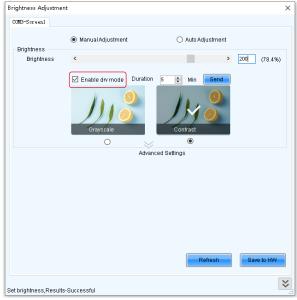


Figure 2-2

4. Set dehumidification time in the Duration field. Refer to Table 1 for suggested dehumidification duration.

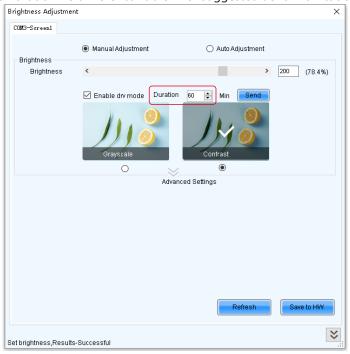


Figure 2-3

5. Click Send and Save to HW, then check that brightness is set successfully in the information box at the bottom of the screen.

Brightness Adjustment			×		
COM3-Screen1					
Brightness	Manual Adjustment	O Auto Adjustment			
Brightness	<	>	200 (78.4%)		
	Enable dry mode Duration	60 Min Bend Contrast © ed Settings			
2020/11/30 17:28:08	Set brightness Results-Successful	Refresh	Save to HW		
2020/11/30 17.28:09Set brightness, Results-Successful					
Set brightness,Results-	Successful		.::		

- Figure 2-4
- 6. To make sure the dehumidification function is initiated, wait 1 minute before you exit the brightness setting menu.

8.4. Activating Dehumidification function

- 1. Turn off the LED display and power off the LED display controller.
- 2. When using the LED display, turn on the LED display controller and the LED display.

* You can notice that, according to the dehumidification time you set, the brightness of your LED display changes from dark to bright gradually. When the highest brightness level is reached, the brightness returns to the default value defined by user automatically.

3. Whenever you turn on the LED display, the dehumidification function starts working automatically after the LED display controller is activated.

8.5. Cancelling Dehumidification function

- 1. In the brightness adjustment screen, deselect the Enable Dry mode checkbox.
- 2. Click Send and Save to HW.
- 3. After setting is complete, the dehumidification function must be disabled. Whether the LED display is under normal operation or during execution of dehumidification, the dehumidification function can always be cancelled with immediate effect regardless of its current status.

8.6. Notes

- 1. Dehumidification function has to be used with specific LED display controller program. If your LED display shows that the LED display controller you are using has not been upgraded with corresponding program, please contact us for support.
- 2. The maximum value you can set for dehumidification duration is 240 minutes, while the minimum value allowed is 5 minutes.
- 3. The principles of duration and brightness enhancement:
- 4. Based on the duration set by user, it will be divided into 15 proportional levels automatically. The display brightness will also be divided into 15 levels ranging from level 0 for a black screen to level 255 for a brighter screen. As duration level increases, brightness level will be adjusted to fit the duration level.
- 5. For example, when Duration is set to 150 min, then brightness changes every 10 minutes, brightness level changes 256/15 every time, meaning that brightness level increases by 17% every 10 minutes.
- 6. Referring to the dehumidification principle, it is suggested to set the dehumidification time based on the data listed below. You can also adjust the dehumidification time in accordance with your actual situation.

	Consecutive day(s) left	Durat	ion/min
	unused	Humidity<40%	Humidity≥40%
1	Day < 1	0	15
2	1 ≤ Day < 3	15	120
3	3 ≤ Day< 7	120	240
4	Day≥7	240	240

Table 1 Suggested dehumidification duration

7. Dehumidification is not a must function of the LED display, but it is indeed a desirable option as it can reduce problems associated with the presence of humidity such as low performance and shortened lifespan. In most cases, dehumidification can be cancelled and only be used when necessary.

9. Using the LED display controller

The LED display controller is a device served for managing any type of video and data sources for any screen configuration. Visit Novastar website to learn more about Novastar's LED display controller and select the one that suit your needs according to the resolution and screen configuration of your display.

https://www.novastar.tech/products/

To download the Novastar software and user's guide, click on the following link:

https://www.novastar.tech/downloads/controller/

Appendices

Appendix A. Appendix A. Warranty Statement

Warranty policy for Philips Professional Display Solutions

Thank you for purchasing this Philips product. Philips products are designed and manufactured with high standards and deliver high quality performance, ease of use and ease of installation. If you encounter any difficulties while using your product, we recommend that you first consult the user manual or the information in the support section of the website, where (depending on the product type) you may find a downloadable user manual, frequently asked questions, instruction videos or a support forum.

LIMITED WARRANTY

In the unlikely event the product requires service, we will arrange for your Philips product to be serviced free-of-charge within the warranty period, provided that the product was used in accordance with the user manual (e.g. in the intended environment). For these product categories, a partner company of Philips is the warrantor of the product. Please check the documentation supplied with your product.

WHO IS COVERED?

Your Warranty coverage begins from the first date of purchase of the product. You need to provide proof of purchase to receive warranty service. A valid sales receipt or other valid document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

If any defect due to faulty materials and/or workmanship occurs within the warranty period, we will make arrangements for a free of charge service. Where a repair is not possible or not commercially viable, we may replace the product with a new or equivalent refurbished product with similar functionality. Replacement will be offered at our discretion and the warranty will continue from the date of original purchase of the first date of purchase of the product. Please note that all parts, including repaired and replaced parts, are covered only for the duration of the original warranty period.

WHAT IS EXCLUDED? Your warranty does not cover:

- Consequential damages (including but not limited to loss of data or loss of income), nor compensation for activities done by yourself, such as regular maintenance, installing firmware updates or saving or restoring data (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of various types of external devices (e.g., Wi-Fi, antenna, USB dongles, OPS type devices) and other systems outside of the product.
- Reception problems caused by signal conditions or cable or antenna systems outside the unit.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- If the model or production number on the product has been altered, deleted, removed or made illegible.

The warranty applies on condition that the product has been handled properly for its intended use and in accordance with the operating instructions

To Obtain Warranty Service And Information

For detailed warranty coverage information and additional support requirement and help line, please contact the seller and/ or system integrator you purchased the product from. Please note in the USA, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Before Requesting Service

Please check your user's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

WARRANTY PERIOD

Warranty period for PHILIPS signage display is listed as below, for areas not covered in this table, please follow their warranty statement.

Standard warranty period for PHILIPS signage display is listed as below, for areas not covered in this table, please follow the local warranty statement.

Region	Warranty Period
USA, Canada	2 years
China	1 year
Asia Pacific	2 years
Europe	2 years
Brazil	2 years

Note that for professional products, the specific warranty terms of the sale- or purchase agreement may apply.

Appendix B. Appendix B. Troubleshooting

Frequently asked questions and common problems that may occur while using the system are explained in this section. Observe the following table containing a list of symptoms and the actions to take to solve the problems.

If a problem persists after performing the following actions, contact technical support.

Symptom	Possible cause and corrective action
No picture is displayed	 The power cable is disconnected. > Re-connect the power cable.
	 The signal cable is disconnected. > Re-connect the signal cable.
	 The main switch on the power distribution box is off. > Make sure the power distribution box is switched on.
	 The LED display controller is off. Inspect whether the power connection is correct and the switch has been turned on. Inspect whether the LED display controller output has signal and shows blank screen. Check whether the mode and parameter of screen configuration are correct. Check whether there is image input in input channel and whether it is correctly displayed.
The module is blinking	> Check the cable connection between the cabinet and power distribution box, and ensure the connection is secure.
The module cannot light up	> Check the cable connection between the cabinet and power distribution box, and ensure the connection is secure.

Appendix C. Dew point VS. Relative Humidity

The table below explains the relationship between temperature/relative humidity and dew point.

The cable below explains		ip between a	emperature/	clative flam	any and acti	point.		
Celsius (°C)	-20	-20	-20	-20	-20	-20	-20	-20
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-43.87	-37.24	-33.15	-30.15	-27.76	-25.77	-24.06	-22.56
Celsius (°C)	-10	-10	-10	-10	-10	-10	-10	-10
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-35.94	-28.76	-24.32	-21.06	-18.46	-16.30	-14.43	-12.79
Celsius (°C)	0	0	0	0	0	0	0	0
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-28.08	-20.33	-15.54	-12.01	-9.19	-6.84	-4.82	-3.03
Celsius (°C)	10	10	10	10	10	10	10	10
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-20.29	-11.96	-6.80	-2.99	0.04	2.58	4.77	6.70
Celsius (°C)	25	25	25	25	25	25	25	25
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-8.75	0.47	6.22	10.46	13.85	16.69	19.14	21.30
Celsius (°C)	35	35	35	35	35	35	35	35
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	-1.15	8.7	14.84	19.39	23.02	26.07	28.70	31.03
Celsius (°C)	45	45	45	45	45	45	45	45
Relative Humidity (%)	10	20	30	40	50	60	70	80
Dew point (°C)	6.38	16.87	23.42	28.28	32.17	35.43	38.25	40.74

Appendix D. Optional Components/Accessories If you need to purchase the components or accessories listed below, please contact your local service center for support.

CTN	Commercial description
CRD17024/00	LED module, 7x24-series, SMD1515 Copper
CRD17031/00	LED module, 7x31-series SMD2121 Copper
CRD17019/00	LED module, 7x19-series, SMD1515 Copper
CRD17124/00	LED module, 7x24 HB, SMD1515 Gold
CRD17131/00	LED module, 7x31 HB, SMD1921 Copper
CRD17139/00	LED module, 7x39 HB, SMD1921 Copper
BZ110090/00	P.cable, Schuko EU/IND to C13/1.8M/10x
BZ110090/05	Power cable, UK/HK to C13/1.8M/10x
BZ110090/17	Power cable, US/TWN to C13/1.8M/10x
BZ110090/75	Power input cable, AUS to C13/1.8M/10x
BZ110090/67	Power input cable, THAI to C13/1.8M/10x
BZ110030/07	RJ45 cable CAT5 / 1.5m / black / 20x
BZ110089/00	RJ45 cable CAT5 / 1.1m / black / 20x
BZ110088/00	RJ45 cable CAT5 / 65cm / black / 20x
BZ110087/00	PWR LOOP THR/C13-C14/25cm/black/20x
BZ110086/00	PWR LOOP THR/C13-C14/60cm/black/20x
BZ110085/00	PWR LOOP THR/C13-C14/1M/black/20x
BZ110081/00	PWR LOOP THR/C13-C14/2M/black/20x
BZ110084/00	LED module flatcable 45cm 20x
BZ110083/00	LED module flatcable 25cm 20x
BM107000/00	Service Tool kit 7/8/9000-Charger/3Ah 1x
BM107001/00	Front Tool Battery 7/8/9000, 3Ah 1x
BM199006/00	Value toolbox TBD, 1x
BM199005/00	Toolbox 7/8/9K M10/3xT-Hex/SD/ASGL/USB32
BZ207000/00	PSU 7000-series 200W 2x
BZ307000/00	HUB board 7000-series 5x
CRD20086/00	Novastar Rec. card, A5S 7xxx 5x
CRD20089/00	Novastar Rec. card, A5S Plus 5x
BM907001/00	Connecting plate 73/75xx 90 deg. 10x
BM907000/00	Connecting plate 7000 180 deg. 20x
BM907002/00 BM907003/00	Connecting plate 73/75xx 177.5 deg. 20x
BM907003/00	Connecting plate 73/75xx, 175 degree 20x Connecting plate 73/75xx, 172.5 deg. 20x
BM907006/00	Connecting plate 7000 to 4x4cm extr. 20x
BM907009/00	Connecting plate 7000 to 4x401 extr. 20x
BM907010/00	Base bar 72/74xx 180 degree, 1M 1x
BM907011/00	Base bar 72/74xx 180 degree, 25cm 1x
BM907005/00	Screw bolt, M10*20 inner hex 100x
BM907007/00	LED Diode 7000-serie XC1515 P1.9/2.4 36k
BM907008/00	LED Mask 7x24-serie, XC1515c, 50x
41BDL7439L/00	LED Panel/Cabinet 7439 100x25 HB
41BDL7539L/00	LED Panel/Cabinet 7539 100x25 45 deg HB
31BDL7439L/00	LED Panel/Cabinet 7439 75x25 HB
31BDL7539L/00	LED Panel/Cabinet 7539 75x25 45 deg HB
22BDL7439L/00	LED Panel/Cabinet 7439 50x25 HB

CTN	Commercial description
22BDL7539L/00	LED Panel/Cabinet 7539 50x25 45 deg HB
41BDL7431L/00	LED Panel/Cabinet 7431 100x25 HB
41BDL7531L/00	LED Panel/Cabinet 7531 100x250 45 deg HB
31BDL7431L/00	LED Panel/Cabinet 7431 75x25 HB
31BDL7531L/00	LED Panel/Cabinet 7531 75x25 45 deg HB
22BDL7431L/00	LED Panel/Cabinet 7431 50x25 HB
22BDL7531L/00	LED Panel/Cabinet 7531 50x25 45 deg HB
41BDL7231L/00	LED Panel/Cabinet 7231 100x25
41BDL7331L/00	LED Panel/Cabinet 7331 100x25, 45 deg
31BDL7231L/00	LED Panel/Cabinet 7231 75x25
31BDL7331L/00	LED Panel/Cabinet 7331 75x25, 45 deg
22BDL7231L/00	LED Panel/Cabinet 7231 50x25
22BDL7331L/00	LED Panel/Cabinet 7331 50x25, 45 deg
41BDL7424L/00	LED Panel/Cabinet 7424 100x25 HB
41BDL7524L/00	LED Panel/Cabinet 7524 100x25 45 deg HB
31BDL7424L/00	LED Panel/Cabinet 7424 75x25 HB
31BDL7524L/00	LED Panel/Cabinet 7524 75x25 45 deg HB
22BDL7424L/00	LED Panel/Cabinet 7424 50x25 HB
22BDL7524L/00	LED Panel/Cabinet 7524 50x25 45 deg. HB
41BDL7224L/00	LED Display Cabinet 7224 100x25
41BDL7324L/00	LED Display Cabinet 7324 100x25, 45 deg.
31BDL7224L/00	LED Display Cabinet 7224 75x25
31BDL7324L/00	LED Display Cabinet 7324 75x25, 45 deg.
22BDL7224L/00	LED Display Cabinet 7224 50x25
22BDL7324L/00	LED Display Cabinet 7324 50*25, 45 deg.
41BDL7219L/00	LED Display Cabinet 7219 100x25
41BDL7319L/00	LED Display Cabinet 7319 100x25, 45 deg.
31BDL7219L/00	LED Display Cabinet 7219 75x25
31BDL7319L/00	LED Display Cabinet 7319 75x25, 45 deg.
22BDL7219L/00	LED Display Cabinet 7219 50x25
22BDL7319L/00	LED Display Cabinet 7319 50*25, 45 deg.
BM904172/00	Empty LED Display Cabinet 72xx 100x25
BM904173/00	Empty LED Display Cabinet 73xx 100x25
BM903172/00	Empty LED Display Cabinet 72xx 75x25
BM903173/00	Empty LED Display Cabinet 73xx 75x25
BM902272/00	Empty LED Display Cabinet 72xx 50x25
BM902273/00	Empty LED Display Cabinet 73xx 50x25
CRD20001/00	Controller Novastar MCTRL300 (EU)
CRD20001/17	Controller Novastar MCTRL300 (US)
CRD20001/05	Controller Novastar MCTRL300 (HK)
CRD20001/75	Controller Novastar MCTRL300 (CN/AUS)
CRD20001/67	Controller Novastar MCTRL600 (THAI)
CRD20002/00	Controller Novastar MCTRL600 (EU)
CRD20002/17	Controller Novastar MCTRL600 (US)
CRD20002/05	Controller Novastar MCTRL600 (HK)
CRD20002/75	Controller Novastar MCTRL600 (CN/AUS)
CRD20002/67	Controller Novastar MCTRL600 (THAI)
CRD20003/00	Controller Novastar MCTRL660 (EU)
CRD20003/17	Controller Novastar MCTRL660 (US)


CTN	Commercial description
CRD20003/05	Controller Novastar MCTRL660 (HK)
CRD20003/75	Controller Novastar MCTRL660 (CN/AUS)
CRD20003/67	Controller Novastar MCTRL660 (THAI)
CRD20004/00	Controller Novastar MCTRL660PRO (EU)
CRD20004/17	Controller Novastar MCTRL660PRO (US)
CRD20004/05	Controller Novastar MCTRL660PRO (HK)
CRD20004/75	Controller Novastar MCTRL660PRO (CN/AUS)
CRD20004/67	Controller Novastar MCTRL660PRO (THAI)
CRD20005/00	Controller Novastar VX4U (EU)
CRD20005/17	Controller Novastar VX4U (US)
CRD20005/05	Controller Novastar VX4U (HK)
CRD20005/75	Controller Novastar VX4U (CN/AUS)
CRD20005/67	Controller Novastar VX4U (THAI)
CRD20006/00	Controller Novastar VX6S (EU)
CRD20006/17	Controller Novastar VX6S (US)
CRD20006/05	Controller Novastar VX6S (HK)
CRD20006/75	Controller Novastar VX6S (CN/AUS)
CRD20006/67	Controller Novastar VX6S (THAI)
CRD20007/00	Controller Novastar MCTRLR5 (EU)
CRD20007/17	Controller Novastar MCTRLR5 (US)
CRD20007/05	Controller Novastar MCTRLR5 (HK)
CRD20007/75	Controller Novastar MCTRLR5 (CN/AUS)
CRD20007/67	Controller Novastar MCTRLR5 (THAI)
CRD20008/00	Controller Novastar MCTRL4K (EU)
CRD20008/17	Controller Novastar MCTRL4K (US)
CRD20008/05	Controller Novastar MCTRL4K (HK)
CRD20008/75	Controller Novastar MCTRL4K (CN/AUS)
CRD20008/67	Controller Novastar MCTRL4K (THAI)
CRD20009/00	Controller Novastar TB3 (EU)
CRD20009/17	Controller Novastar TB3 (US)
CRD20009/05	Controller Novastar TB3 (HK)
CRD20009/75	Controller Novastar TB3 (CN/AUS)
CRD20009/67	Controller Novastar TB3 (THAI)
CRD20010/00	Controller Novastar TB6 (EU)
CRD20010/17	Controller Novastar TB6 (US)
CRD20010/05	Controller Novastar TB6 (HK)
CRD20010/75	Controller Novastar TB6 (CN/AUS)
CRD20010/67	Controller Novastar TB6 (THAI)
CRD20011/00	Controller Novastar TB8 (EU)
CRD20011/17	Controller Novastar TB8 (US)
CRD20011/05	Controller Novastar TB8 (HK)
CRD20011/75	Controller Novastar TB8 (CN/AUS)
CRD20011/67	Controller Novastar TB8 (THAI)

Appendix E. Technical Specifications

Picture/Display	
Peak brightness (nits)	4500*
Max. brightness (nits)	±3500*
Color Temperature (K) default	6500±500
Color Temperature (K) adjust range	4000-9500 (by software)
Viewing Angle (°) H/V	145/145
Brightness Uniformity	≥97%
Transparent rate(%)	N/A
Color Uniformity	±0.012Cx,Cy
Color coordinates	0.313, 0.325 (±0.012Cx,Cy)
Peak contrast ratio	6500:1
Max. contrast ratio	5000:1
Calibration (Brightness/Color)	Color and Brightness
Bit-depth (bit)	13-16
Scan rate (lines)	26
Refresh rate (Hz)	2100-3900 (14 bits: 3900Hz)
Frame Frequency (Hz)	50 & 60
* According to IDMS standard.	
Power	
Max. power consumption before calibration (W)	<199
Max. power consumption after calibration (W)	<157.8
Cabinet Typical Power consumption (W)	<52.6
Cabinet black screen consumption (W)	<11
BTU/M ² (BC)	<2715
BTU/M ² (AC)	<2152
Input Voltage	AC100-240V (50 & 60Hz)
Operating conditions	
Operation Temperature	-20°C-45°C
Storage Temperature	-20°C-50°C
Operation Humidity	10-80%
Storage Humidity	10-85%
Miscellaneous	
Regulatory approvals	FCC SDOC, Part 15 Class A
Certification	EN55032, EN55035, EN61000-3-2, EN61000-3-3, IEC/UL60950, IEC/ UL62368, CSA/UL62368-1, IEC62471, EAC, RoHS, IP Rating test, Fire Retardancy Certification: BS 476 Part7:1997 / DIN 4102-1 / UL94

Cabinet	
Cabinet Size W/O Module (WxHxD in mm)	1000x250x40
Side angle (degree)	90
Cabinet Size (inch)	40.6"
Cabinet Resolution (W×H in pixels)	416x104
Receiving card brand	Novastar
Receiving card type	A5S plus
Weight (W/O packing and accessories)	6.35Kg (±318g)
Cabinet pixels (Dot)	43264
Cabinet Area (m²)	0.25
Data connector	RJ45
Power connector	3 core socket (C14 in, C13 out)
Cabinet Construction	Die-Casting+Aluminum 90°
Module	
LED Type	SMD 1515 Gold wire
Pixel constitution	1R1G1B
LED Lifetime (Hrs)	100,000 hrs (at half-brightness)
Pixel Pitch (mm)	2.4
Module Size (WxH in mm)	249.9 x 249.9 (tolerance: +0.1 / -0.05)
Module Resolution (W×H in pixels)	104 x 104
Conformal coating (UV-resistant)	Yes (LED Module Bottom side and HUB board)
Accessories	
Power cable	1000 mm
LAN cable (RJ45, CAT-5)	LAN cable (RJ45, CAT-5) (1500mm)
QSG	1 piece
Other	
IP rating	IP30 for panel side
Working environment	Indoor

Appendix F. Magnet tension

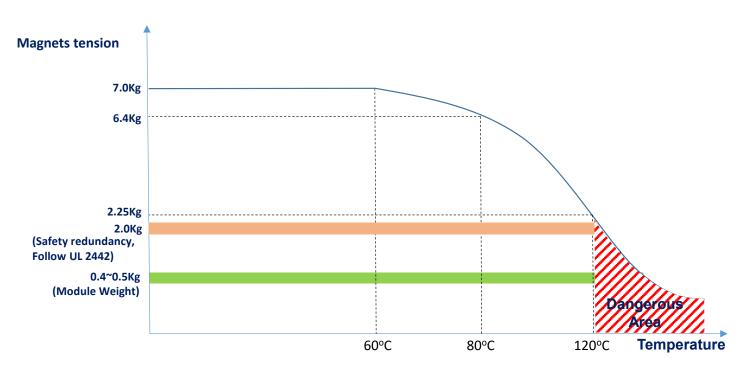

1. Each module uses 9 N52 NdFEB magnets. After measurement, the tensile force of N52 NdFEB magnets at various temperatures is as follows:


Temperature	20°C	60°C	80°C	120°C
The tension value of each magnet (Kg)	0.78	0.78	0.78	0.25
Tension value per module (Kg)	7	7	7	2.25

2. The maximum weight of each module is 0.5kg. According to UL2442 standard, 4 times the safety factor is 2.0kg. It can be seen from the above table that when the temperature is >120 degrees Celsius, the residual pull value of the magnet is close to 4 times the safety factor, that is, more than 120 degrees is the dangerous area.


Appendix G. Power/Data cable measure

Installation power cable measure




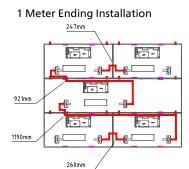



1.5 Meter Ending Installation

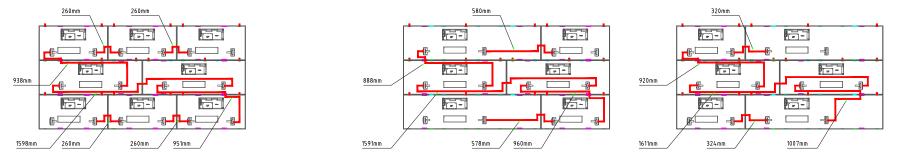

2 Meter Ending Installation

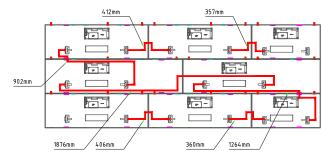


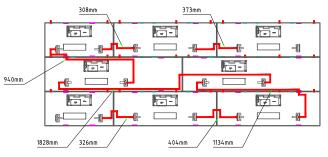


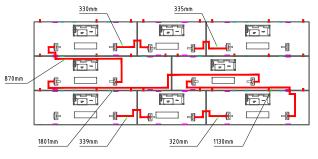


22BDL7424L	31BDL7424L	41BDL7424L
Power cable (250mm)	Power cable (1000mm)	Power cable (1000mm)

Installation data cable measure

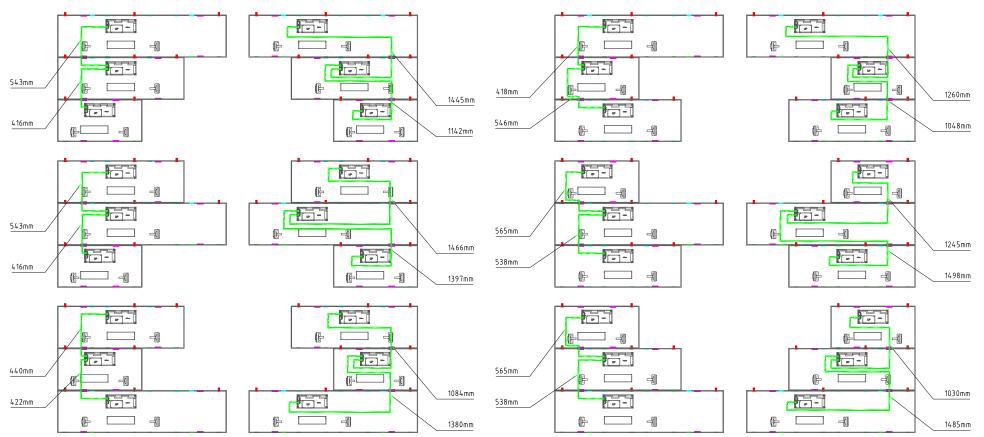

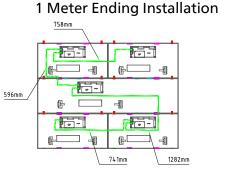

1.5 Meter Ending Installation

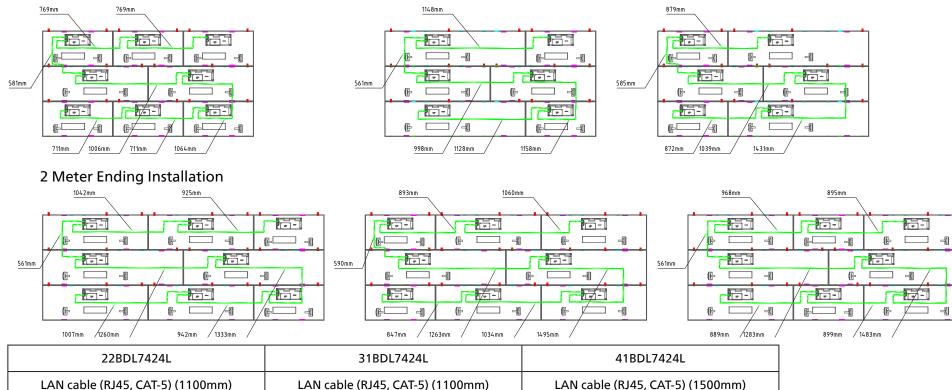

Appendix H. Mounting scheme


Below you will find some configuration examples for mounting scheme.


Manufacturer Default Alignment Pin

Alignment screw thread hole

Alignment hole

Opening for cable









1

L-4-3-2 Installation

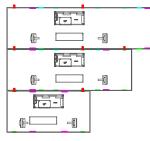



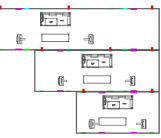


—–


-1

1-1




2

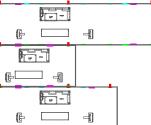






move 1 alignment pin

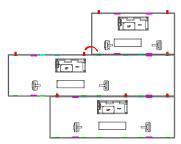



move 1 alignment pin



move 3 alignment pins

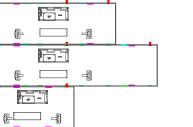

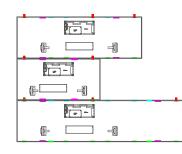


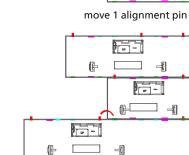


<u>6-</u>


₽

move 1 alignment pin

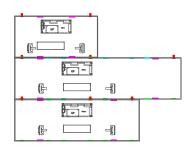

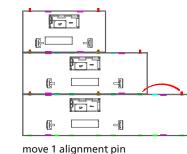



1 Meter Ending Installation

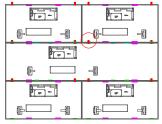


add 1 alignment pin

1.5 Meter Ending Installation

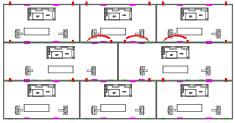


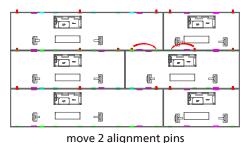

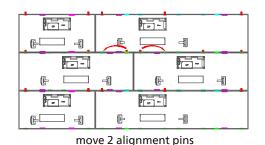

add 3 alignment pins

2 Meter Ending Installation

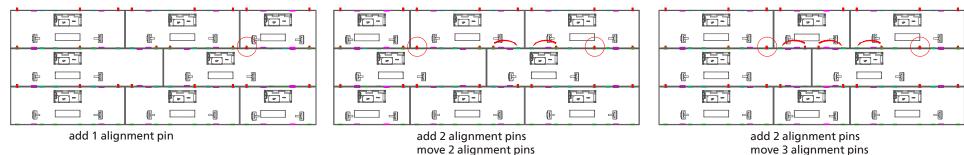





2022 $\ensuremath{\mathbb C}$ TOP Victory Investments Ltd. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Top Victory Investments Ltd., and Top Victory Investments Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Specifications are subject to change without notice.