



DECT Baby Monitor

- 100% private connection
- Night light and lullabies
- Talkback function

SCD560/00

The most reliable connection to your baby

Added support for you and your baby

Our new DECT SCD560/00 Baby Monitor delivers complete reassurance. Providing the most reliable connection with crystal clear sound, temperature control, a soothing night light and lullabies for you and your baby.

Benefits

Reliable technology

- DECT technology guarantees zero interference & 100% privacy
- Perfect clear sound due to DECT Technology

Constant Reassurance and Secure Connection

- Energy saving Smart ECO mode
- Sound level lights indicate if the baby makes noise
- Always know when your monitor is in range and connected
- Monitor the temperature in your baby's room

Freedom and flexibility

- Range up to 330 meters*
- Rechargeable parent unit
- Superior operating time up to 18 hours

Comforting and soothing your baby

- Comforting night light and lullabies to calm your little one
- Stay connected with talk back

Features

Zero interference with DECT

DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data

encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

PHILIPS

Perfect clear sound

Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.

Smart ECO mode




The unique Smart ECO mode automatically minimizes your transmission power and increases your battery lifetime. The closer you are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

Sound activation 3 LED lights



Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

Always connected

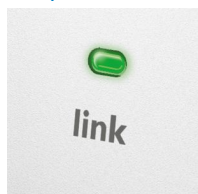

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

Temperature sensor



The temperature sensor with customized alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body temperature as

well as you can and a slight change in temperature can make your baby restless. A customized temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

330m Range



Indoor range up to 50 meters*. Outdoor range up to 330 meters*.

Rechargeable parent unit

The rechargeable parent unit enables you to move in and around the home.

Operating time up to 18 hours

The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

Night light and lullabies



There's nothing like a gentle lullaby and a warm tranquil glow of a night light to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes and switch on the night light, helping your baby to drift effortlessly to sleep in no time. (Remote activation not available in US and Canada).

Talk back function



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

Specifications

[field not found 'disclaimer_text']

Power

Operating time on battery hour	18 hours
Power Supply	120 V (US) 220 - 240 V
Charging time	10 hrs

Tuner/Reception/Transmission

Frequency band	DECT
Automatic channel selection	Yes

Convenience

Battery low indication	Yes
Volume control	Yes
Auto out-of-range warning	Yes
Sound-level lights	Yes
Battery charging indication	Yes
Sensitivity control	Yes

Technical specifications

Operating temperature range °C	10 - 40 °C
Storage temperature range	10 - 40 °C

Logistic data

F-box dimensions (W x H x D)	220 x 156 x 94 mm
------------------------------	-------------------

Development stages

Stages	Pregnancy 0 - 6 months
--------	---------------------------

Features

DECT Technology	Yes
Energy saving Smart ECO mode	ECO mode Yes
Linked and in range indication	Yes
Comforting night light	Yes
Talkback function	Yes
Soothing lullabies	Yes
LCD Screen	Yes
Sound activation lights	3 LED lights

Temperature sensor	Yes
Indoor range up to	50m
Outdoor range up to	330 meters

Packaging dimensions

Height	15.60 cm
Width	22.00 cm
Depth	9.60 cm
Nett weight	0.66 kg
Gross weight	0.83 kg
EAN	08710103610762
Number of products included	1
Country of origin	CN
Harmonised Systems Code	851762

Outer Carton

Length	30.10 cm
Width	23.50 cm
Height	18.30 cm
Gross weight	2.79 kg
EAN	18710103610769
Number of consumer packagings	3

* The operating range of the baby monitor varies depending on the surroundings and factors that cause interference.



data subject to change
2018, November 9

Version: 10.2.1
EAN: 08710103610762

© 2018 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com