

# PHILIPS

## AVENT

### DECT Baby Monitor

100% private connection

Nightlight

SCD503/00



## The most reliable connection to your baby

### The essential connection to your baby

Our DECT Baby Monitor delivers complete reassurance by providing the essentials of a baby monitor. The most reliable connection with crystal clear sound and a comforting nightlight for you and your baby.

#### Reliable technology

- DECT technology guarantees zero interference & 100% private
- Crystal clear sound thanks to DECT technology

#### Constant Reassurance and Secure Connection

- Energy saving Smart ECO mode for minimal transmission
- Always know when your monitor is in range and connected
- Sound level lights indicate if the baby makes noise

#### Freedom and flexibility

- Range up to 330 meters\*
- Superior operating time up to 24 hours
- The parent unit is mains powered and battery operated

#### Comforting and soothing your baby

- Comforting nightlight

# Highlights

## 100% private, no interference



DECT technology provides a secure and private connection, so you can be sure you are the only one listening in. It guarantees zero interference from any other transmitting devices- like other baby monitors, cordless phones and cell phones.

## Crystal clear sound


DECT technology provides crystal clear sound, so you can hear every tiny giggle, gurgle, and hic-up with perfect clarity.

## Smart ECO Mode



The unique Smart ECO mode automatically minimizes the audio transmission and increases your battery time. The closer you are to your baby, the less power is needed for a perfect connection.

## Always connected

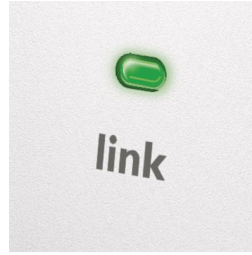

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

## Sound activation 5 LED lights

Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

## Range up to 330 meters\*



\*Indoor range up to 50m, outdoor range up to 330m.

## Operating time up to 24 hours

The small parent unit will give you the freedom of cordless streaming for up to 24 hours before re-charging is required. However this is

depending on the type of batteries used and how often and how long you use the parent unit on batteries.

## Battery and mains operated



The parent unit runs perfectly on mains power. For extra mobility you can also insert batteries to allow cordless use of the parent unit. You can insert two 1.5V R6 AA alkaline non-rechargeable batteries or two 1.2V R6 AA rechargeable batteries.

## Comforting nightlight

Your baby may still be restless when you first put them to bed. Help soothe and calm your baby to sleep with the warm tranquil glow of the nightlight.

# Specifications

## Features

DECT Technology  
Energy saving Smart ECO mode  
Linked and in range indication  
Sound activation lights: 5 LED lights  
Volume control and sound activation  
Comforting night light  
Indoor range up to: 50m  
Outdoor range up to: 330 meters

## Power

Operating time on battery hour: 24 hours  
Power Supply: 120 V (US), 220 - 240 V

## Tuner/Reception/Transmission

Frequency band: DECT  
Automatic channel selection  
Number of channels: 120

## Convenience

Battery low indication  
Volume control  
Auto out-of-range warning  
Sound-level lights

## Technical specifications

Operating temperature range °C: 10 - 40 °C  
Storage temperature range: 10 - 40 °C

## Logistic data

F-box dimensions (W x H x D): 220 x 156 x 56 mm

## Accessories

Quick start guide  
User manual

