

PHILIPS

AVENT

Digital Video Baby Monitor

Private and secure (A-FHSS)

2.7 inch (6.9 cm) colour screen

Soothing lullabies and talkback



SCD620



Always close to your baby

Private and secure with A-FHSS technology

The Philips Avent SCD620 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.7" LCD), whether it is day or night. Winner of Mumsnet Best Video Baby Monitor 2018.

Private and secure connection

- Private, secure connection with adaptive FHSS technology
- High resolution 2.7" (6.9 cm) screen with crystal-clear night vision
- Hear your baby with clear sound
- Energy-saving eco mode with connection indication

Reliability and reassurance

- LED lights show you when your unit is linked and in range

Freedom, flexibility, comforting and soothing

- Range up to 300 metres*
- Excellent operating time for overnight monitoring
- Stay connected with talk back
- Comforting lullabies to calm your little one
- Choose the best sound level for your surroundings



asimpleswitch.com

Highlights

Private, secure and adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

2.7" colour screen



See your baby, day and night, with crystal-clear, infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high-resolution, extra-large 2.7" (6.9 cm) colour screen.

Perfect clear sound video

Hear every tiny giggle, gurgle and hic-up with perfect clarity. Not only see but also hear your baby any time with high-quality, crystal-clear sound.

ECO mode




Switch on the ECO mode to reduce power consumption during quiet times in the baby's room, safe in the knowledge that you are still connected to your baby via the unique link

indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

300m Range

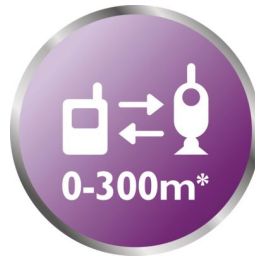

Indoor range up to 50 metres*, Outdoor range up to 300 metres*.

Operating time up to 10 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 10 hours before recharging is required.

Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

Lullabies



There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes to help your baby drift off to sleep in no time.

Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what level of noise is picked up by the baby unit, e.g. you might want to hear when your baby cries, but you may be less interested in his or her babbling.



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Features

Languages: English
Adjustable sound sensitivity
Adjustable viewing angle
Android, IOS, Tablet compatible: No
Audio only mode
Auto infrared night vision
Battery and mains operated baby unit: Mains only
Battery back-up function baby unit: No
Battery- and mains-operated parent unit
Battery operating time parent unit: Superior up to 10 hours
Belt Clip
Brightness control
Comforting night light: No
Digital Video Technology: Yes, adaptive FHSS
Digital zoom and pan: No

Energy saving Eco mode: Eco mode with link indication
Handheld and rechargeable: Yes, parent unit
Indoor range up to: 50 m
Outdoor range up to: 300m
Linked and in range indication
Low battery/lost connection alert
Lullabies: Yes, 5 x
Menu Style: Icons
Mini USB charging
Private and secure: Yes, adaptive FHSS
Talkback function
Temperature sensor: No
Vibration mode: No
Video LCD Screen: 2.7" (6.9 cm) colour
Voice activation screen: Yes, VOX mode

Convenience

Auto out-of-range warning
Battery charging indication
Battery low indication
Power on indication
Volume control
Sensitivity settings
Wall mountable

Power

Power supply: 100–240 V/50–60 Hz

Tuner/Reception/Transmission

Frequency band: 2.4 GHz

