

# PHILIPS

## AVENT

### Digital Video Baby Monitor

Private & secure (A-FHSS)

3.5 inch color screen, 2x zoom

Lullabies, night light & temp.

Operating time up to 12 hours



SCD843/05



## Always close to your baby

### Private and secure with A-FHSS technology

The Philips Avent SCD845 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (3.5" LCD), whether it is day or night.

#### Private and secure connection

- Private, secure connection with adaptive FHSS technology
- High resolution 3.5" screen with crystal clear night vision
- Hear your baby with clear sound
- Energy saving eco mode with connection indication

#### Freedom, flexibility, comforting & soothing

- Range up to 300 meters\*
- More flexibility with up to 12 hours of operating time\*
- Comforting night light and lullabies to calm your little one
- Talk to your baby remotely
- Vibration mode for subtle notifications
- Choose the best sound level for your surroundings

#### Reliability and reassurance

- Know you are connected with LED alerts
- Monitor the temperature in your baby's room

# Highlights

## Private, secure & adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

## 3.5" color screen with 2x zoom



See your baby, day and night, with crystal clear infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high resolution, extra large 3.5" color screen. With 2x digital zoom and pan for extra reassurance so you can see everything your baby is up to.

## Perfect clear sound video

Hear every tiny giggle, gurgle, and hic-up with perfect clarity. Not only see but also hear your baby anytime with high quality, crystal clear sound.


## ECO mode



Switch on the ECO mode to reduce power consumption during quiet times in the baby room while still knowing you are connected to

your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

## 300m Range

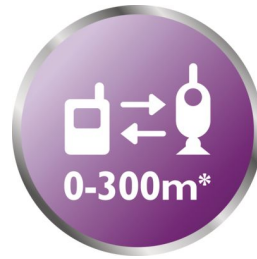

Indoor range up to 50 meters\*, Outdoor range up to 300 meters\*.

## Operating time up to 12 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 12 hours before re-charging is required.

## Night light and lullabies



There's nothing like a gentle lullaby and a warm tranquil glow of a night light to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes and switch on the night light, helping your baby to drift effortlessly to sleep in no time.

## Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

## Vibration alert



Personalize your alert settings and get notified by a silent and subtle vibration of the parent unit.

## Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit picks up, e.g. you will want to hear when your baby cries, but you may be less interested in its babbling.

## Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

# Specifications

## Features

Adjustable sound sensitivity  
Adjustable viewing angle  
Andriod, IOS, Tablet compatible: No  
Audio only mode  
Auto infrared night vision  
Battery and mains operated baby unit: Mains only  
Battery back-up function baby unit: No  
Battery operating time parent unit: Superior up to 12 hours  
Belt Clip  
Brightness control  
Comforting night light  
Digital Video Technology: Yes, Adaptive FHSS  
Digital zoom and pan: Yes, 2x  
Energy saving Eco mode: Eco mode with link

indication

Hand held and rechargeable: Yes, parent unit  
Indoor range up to: 50m  
Linked and in range indication  
Low batt/lost connection alert  
Lullabies: Yes, 5x  
Menu Style: Icons & text  
Mini USB charging  
Outdoor range up to: 300m  
Private and secure: Yes, adaptive FHSS  
Talkback function  
Temperature sensor  
Vibration mode  
Video LCD Screen: 3.5" color  
Voice activation screen: Yes, VOX mode  
Battery and mains operated parent unit

## Convenience

Auto out-of-range warning  
Battery charging indication  
Battery low indication  
Power on indication  
Volume control  
Sensitivity settings  
Wall mountable

## Power

Power supply: 100 – 240V / 50 - 60Hz

## Tuner/Reception/Transmission

Frequency band: 2.4GHz

