

PHILIPS

AVENT

DECT baby monitor



SCD530/00



Healthy climate, total comfort

Zero interference guaranteed with DECT technology

Enjoy complete peace of mind with the new Philips Avent range of DECT Baby Monitors you can relax, safe in the knowledge your baby's happy even when you are out the room.

Zero interference

- DECT technology guarantees zero interference

Crystal clear sound

- Reassurance with crystal clear sound
- Choose the best sound level for your surroundings
- LEDs light to signal noise levels

330 m range

- Extra long range for total mobility
- Up to 24 hour operation time before recharge
- Always know that you are connected

Complete comfort

- Monitor the humidity & temperature in the baby's room
- Remote activated night light and lullabies
- Stay connected with talk back

Highlights

Guaranteed zero interference



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby

Superior operating time



The small, rechargeable parent unit will give you the freedom of cordless roaming for up to 24 hours before re-charging is required

Humidity & temperature sensor



Combined humidity and temperature sensor allows you to monitor the climate in baby's room. Your baby can't regulate its body temperature as well as you can and a slight change in temperature, and too much or too little humidity can make your baby restless. A specially combined humidity and temperature


sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes. Monitor the complete climate in baby's room

LEDs light to signal noise



Lights are activated to indicate the level of sound in your baby's room. Even with the Parent Unit is muted, a vibrating sound alert will notify you when a set sound level is reached

Extended operating range

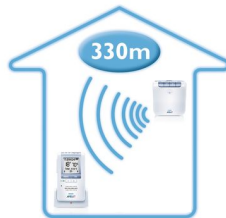

With a range of 330m, a belt clip and neck cord so you can be fully mobile in and around the home. A versatile travel bag will protect your baby monitor when you are away from home

Adjustable sound sensitivity



Enables you to adjust the sound and volume levels, so you can hear every giggle, gurgle and hic-up

Lullabies and night light



Your baby may still be restless when you first put them to bed. Help soothe and calm your baby to sleep with the warm tranquil glow of the night light which can be activate from the parent or baby unit. (Remote activation not available in US) There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes, helping your baby to drift effortlessly to sleep in no time. (Remote activation not available in US)

Two way communication



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home

Specifications

Technical specifications

Operating temperature range: 10 - 40 °C

Storage temperature range: 10 - 40 °C

Tuner/Reception/Transmission

Frequency band: DECT

Automatic channel selection

Number of channels: 120

Convenience

Auto out-of-range warning

Battery charging indication

Battery low indication

Power on indication

Sound-level lights

Volume control

Vibration alert

Sensitivity control

Accessories

AC/DC adaptor

Batteries

DFU/ user manual

Quick start guide

Charging base for parent unit

Belt clip, neck cord and travel bag

Power

Charging time: 3 hrs

Power supply: 220 - 240 V

Power supply: 120 V (US)

Operating time on battery: 24 hour(s)

Logistic data

F-box dimensions (W x H x D): 305 x 135 x 187 mm

Development stages

Stage: Pregnancy, 0 - 6 months

