

# PHILIPS

# AVENT

## DECT Baby Monitor

100% private connection

Night light and lullabies

Talkback function



SCD505/01

	SCD505	SCD508	SCD504	SCD517	SCD500
+	✓	✓	✓	✓	✓
Up to 300m*	✓	✓	✓	✓	✓
ECO Mode	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓
+	✓	✓	✓	✓	✓



## The most reliable connection to your baby Complete peace of mind whilst your baby sleeps

Our Avent DECT Baby Monitors give you the reassurance of feeling close to your baby, even when you are not in the same room. The most reliable connection with crystal clear sound, a soothing nightlight and lullabies for you and your baby.

### Reliable technology

- DECT technology guarantees zero interference & 100% privacy
- Perfect clear sound due to DECT Technology

### Constant Reassurance and Secure Connection

- Energy saving ECO mode
- Sound level lights indicate if the baby makes noise
- Always know when your monitor is in range and connected

### Freedom and flexibility

- Range up to 330 meters\*
- Rechargeable parent unit
- Superior operating time up to 24 hours

### Comforting and soothing your baby

- Calming & soothing
- Stay connected with talk back

# Highlights

## Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

## Perfect clear sound



Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.

## ECO mode




Switch on the ECO mode to reduce transmission power in the baby room. In the ECO mode the units only connect when the baby makes a sound.

## Sound activation 5 LED lights



Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

## Always connected

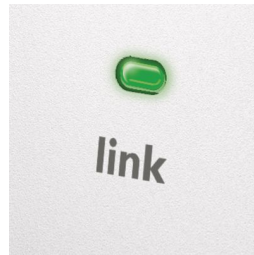

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

## 330m Range



Indoor range up to 50 meters\*. Outdoor range up to 330 meters\*.

## Rechargeable parent unit



The rechargeable parent unit enables you to move in and around the home.

## Operating time up to 24 hours



The small, rechargeable parent unit will give you the freedom of cordless roaming for up to 24 hours before re-charging is required. However this is depending on the type of batteries used and how often and how long you use the parent unit on batteries.

## Calming & soothing

Help soothe your baby to sleep with the warm tranquil glow of the night light and soft lullabies.

## Talk back function



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

# Specifications

## Power

Operating time on battery hour(s): 24 hour(s)  
Power Supply: 120 V (US), 220 - 240 V  
Charging time: 8 hour(s)

## Tuner/Reception/Transmission

Frequency band: DECT  
Number of channels: 120  
Automatic channel selection

## Accessories

Batteries  
AC/DC adaptor  
Quick start guide  
User manual  
Neck cord  
Charging base for parent unit: No

## Convenience

Battery low indication  
Volume control  
Auto out of range warning  
Sound-level lights  
Battery charging indication  
Sensitivity control

## Technical specifications

Operating temperature range °C: 10 - 40 °C  
Storage temperature range: 10 - 40 °C

## Logistic data

F-box dimensions (W x H x D): 220 x 156 x  
94 mm

## Features

DECT Technology  
Energy saving Smart ECO mode: ECO mode  
Sound activation lights: 5 LED lights  
Comforting night light  
Lullabies  
Volume control and sound activation  
Indoor range up to: 50m  
Outdoor range up to: 330 meters  
Talkback function

## Development stages

Stages: Pregnancy, 0 - 6 months

