

# PHILIPS

IPL hair removal  
system

Lumea Precision  
Plus

For use on body, face

15 minutes to treat lower legs

Lifetime >100.000 light  
pulses

Cordless design



SC2003/11



## Prevent hair regrowth

IPL hair removal: enjoy smooth skin every day

Philips Lumea IPL hair removal system works wonders to prevent the reappearance of hair on face as well as body. Gentle pulses of light, applied regularly, keep skin silky-smooth every day.

### Long lasting smoothness

- Effortlessly effective
- Enjoy smooth skin every day

### Hair removal with IPL technology

- Adapted for safe use in the comfort of your own home
- Suitable for a wide variety of hair and skin types

### Gentle and effective application for face and body

- Slide and Flash mode for a more convenient application
- Precision attachment for safe facial treatment
- Bigger body attachment for fast treatment
- Five adjustable light energy settings
- Safe and effective even on sensitive areas

### Maximum freedom, minimum hassle

- Cordless convenience
- No replacement parts, no hidden costs

# Highlights

## Long lasting smoothness



Philips Lumea applies gentle pulses of light to the hair root. As a consequence the hair sheds naturally and hair regrowth is inhibited. Repeating this treatment regularly will keep your skin smooth every day.

## Effortlessly effective



Our clinical studies have shown significant hair reduction in as little as four bi-weekly treatments resulting in smooth hair free skin. To maintain these results, simply repeat the treatment when needed. Time between treatments may vary based on your individual hair regrowth.

## IPL technology



Philips Lumea uses an innovative light-based technology called IPL (Intense Pulsed Light), derived from the technology used in professional beauty salons. Philips has adapted this technology for safe and effective use in the comfort of your own home. Philips worked closely with leading dermatologists to develop our breakthrough hair removal system. For more than 10 years we carried out extensive consumer research with more than 2000 women.

## Suitable hair and skin types




Philips Lumea works effectively on (naturally) dark blonde, brown and black hairs. As with other light-based treatments, Philips Lumea is NOT effective on red, light-blonde or white/grey hair. Philips Lumea is also NOT suitable for very dark skin.

## Five light energy settings



Philips Lumea has five adjustable light energy settings to ensure gentle but effective treatment. Used correctly, Philips Lumea's IPL treatment is safe and gentle to use even on sensitive skin and sensitive body areas.

## Application areas



Use with confidence to remove hair on face (upper lip, chin and sideburns) and body parts including legs, underarm, bikini area, stomach and arms.

## Cordless convenience



Lumea's unique cordless design is perfect for maximum reach and ease of use.

## No replacement parts needed




Philips Lumea is a complete solution that comes ready to work right out of the box. More importantly, it does not require any replacement lamps or gels.

## Extra safety for the face



The precision attachment is equipped with an extra integrated light filter and enables a safe and convenient application on the upper lip, chin and sideburns. It can also be used on other sensitive areas on the body, such as the underarms, the bikini area and hard-to-reach areas.

## Fast treatment on legs

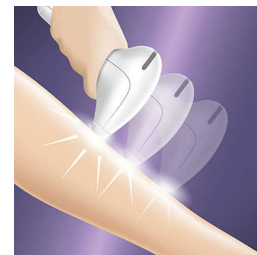

Bigger body attachment for fast treatment on large areas like legs.

# Specifications

## Application areas

**Body areas:** Legs, Belly, Bikini, Armpits, Arms

**Face areas:** Chin, Sideburns, Upper lip

## Safety and adjustable settings

**Integrated UV filter:** Protects skin from UV light

**5 light energy settings:** Adjustable to your skin type

**Integrated safety system:** Prevent unintentional flashing

## Application mode

**Slide and Flash:** For convenient application

**Step and Flash:** For treatment on curvy areas

**Corded/cordless use:** Cordless

## Power

**Charging time:** 100 min

**Voltage:** 100-240 V

**Running time:** Minimum 370 flashes

## Technical specifications

**High performance lamp:** Delivers <gt/> 100,000 flashes

## Attachments

**Precision attachment (2 cm<sup>2</sup>):** For safe application on face

**Body attachment (4 cm<sup>2</sup>):** For use below the neckline

## Service

**Warranty:** 2 years global warranty

## Items included

**Instructions for use:** Quick Start Guide, User manual

**Charger:** Multi voltage charger

**Storage:** Pouch

## Application time

**Lower leg:** 8 min

**Armpit:** 1 min

**Bikini line:** 1 min

**Face areas:** 1 min

