

# PHILIPS

## AVENT

### Digital Video Baby Monitor

#### Advanced

Private & secure (FHSS adaptive technology)

2.7" screen with crystal clear night vision

Soothing lullabies & two-way talk back



SCD833/05

## Always close to your baby

### Private and secure with A-FHSS technology

The Philips Avent SCD833 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.7" LCD), whether it is day or night.

#### Private and secure connection

- High resolution 2.7" screen with crystal clear night vision
- Energy saving eco mode with connection indication
- Hear your baby with clear sound
- Private, secure connection with adaptive FHSS technology

#### Freedom, flexibility, comforting & soothing

- Excellent operating time for overnight monitoring
- Choose the best sound level for your surroundings
- Range up to 300 meters\*
- Comforting lullabies to calm your little one
- Talk to your baby remotely

#### Reliability and reassurance

- Know you are connected with LED alerts

# Highlights

## Private, secure & adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

## 2.7" color screen

See your baby, day and night, with crystal clear infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high resolution extra large 2.7" color screen.

## Perfect clear sound video

Hear every tiny giggle, gurgle, and hic-up with perfect clarity. Not only see but also hear your baby anytime with high quality, crystal clear sound.


## ECO mode

Switch on the ECO mode to reduce power consumption during quiet times in the baby room while still knowing you are connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

## Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

## 300m Range

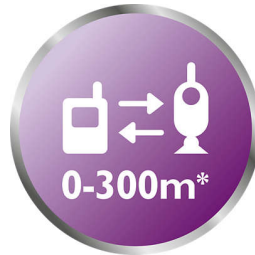

Indoor range up to 50 meters\*, Outdoor range up to 300 meters\*.

## Operating time up to 10 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 10 hours before re-charging is required.

## Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

## Lullabies

There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes and switch, helping your baby to drift effortlessly to sleep in no time.

## Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit picks up, e.g. you will want to hear when your baby cries, but you may be less interested in its babbling.

# Specifications

## Tuner/Reception/Transmission

Frequency band: 2.4GHz

## Convenience

Auto out-of-range warning  
Power on indication  
Battery low indication  
Battery charging indication  
Volume control  
Sensitivity settings  
Wall mountable

## Power

Power supply: 100 – 240V / 50 – 60Hz

## Consumer Trade Item

Height: 18.5 cm  
Width: 22 cm  
Length: 10.7 cm  
Net weight: 0.515 kg  
Gross weight: 0.696 kg

GTIN: 8710103930273  
Country of origin: GB  
Harmonized system code: 85287240

## Outer Carton

Height: 21.5 cm  
Width: 24 cm  
Length: 34 cm  
Net weight: 1.545 kg  
Gross weight: 2.398 kg  
GTIN: 18710103930270

## Features

Digital Video Technology: Yes, adaptive FHSS  
Adjustable sound sensitivity  
Video LCD Screen: 2.7" color  
Adjustable viewing angle  
Andriod, IOS, Tablet compatible: No  
Audio only mode  
Auto infrared night vision  
Battery and mains operated baby unit: Mains only  
Battery back-up function baby unit: No

Battery operating time parent unit: Superior up to 10 hours

Belt Clip

Brightness control

Comforting night light: No

Menu Style: Icons

Digital zoom and pan: No

Energy saving Eco mode: Eco mode with link indication

Hand held and rechargeable: Yes, parent unit

Indoor range up to: 50m

Linked and in range indication

Low batt/lost connection alert

Lullabies: Yes, 5x

Mini USB charging

Outdoor range up to: 300m

Private and secure: Yes, adaptive FHSS

Talkback function

Temperature sensor: No

Vibration mode: No

Voice activation screen: Yes, VOX mode

Battery and mains operated parent unit

