

# PHILIPS

## AVENT

### Digital Video Baby Monitor

#### Advanced

Private & secure (FHSS adaptive technology)

2.7" screen with crystal clear night vision

Soothing lullabies & two-way talk back



SCD833/05



## Always close to your baby

### Private and secure with A-FHSS technology

The Philips Avent SCD833 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.7" LCD), whether it is day or night.

#### Private and secure connection

- High resolution 2.7" screen with crystal clear night vision
- Energy saving eco mode with connection indication
- Hear your baby with clear sound
- Private, secure connection with adaptive FHSS technology

#### Freedom, flexibility, comforting & soothing

- Excellent operating time for overnight monitoring
- Choose the best sound level for your surroundings
- Range up to 300 meters\*
- Comforting lullabies to calm your little one
- Talk to your baby remotely

#### Reliability and reassurance

- Know you are connected with LED alerts

# Highlights

## Private, secure & adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

## 2.7" color screen

See your baby, day and night, with crystal clear infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high resolution extra large 2.7" color screen.

## Perfect clear sound video

Hear every tiny giggle, gurgle, and hic-up with perfect clarity. Not only see but also hear your baby anytime with high quality, crystal clear sound.


## ECO mode

Switch on the ECO mode to reduce power consumption during quiet times in the baby room while still knowing you are connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

## Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

## 300m Range

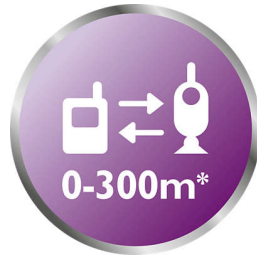

Indoor range up to 50 meters\*, Outdoor range up to 300 meters\*.

## Operating time up to 10 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 10 hours before re-charging is required.

## Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

## Lullabies

There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes and switch, helping your baby to drift effortlessly to sleep in no time.

## Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what noise level the baby unit picks up, e.g. you will want to hear when your baby cries, but you may be less interested in its babbling.

# Specifications

**Tuner/Reception/Transmission**

Frequency band: 2.4GHz

**Convenience**

- Auto out-of-range warning
- Power on indication
- Battery low indication
- Battery charging indication
- Volume control
- Sensitivity settings
- Wall mountable

**Power**

Power supply: 100 – 240V / 50 – 60Hz

**Features**

- Digital Video Technology: Yes, adaptive FHSS
- Video LCD Screen: 2.7" color
- Adjustable sound sensitivity
- Adjustable viewing angle
- Andriod, IOS, Tablet compatible: No
- Audio only mode
- Auto infrared night vision
- Battery and mains operated baby unit: Mains only
- Battery back-up function baby unit: No
- Battery operating time parent unit: Superior up to 10 hours
- Belt Clip
- Brightness control
- Comforting night light: No
- Menu Style: Icons

- Digital zoom and pan: No
- Energy saving Eco mode: Eco mode with link indication
- Hand held and rechargeable: Yes, parent unit
- Indoor range up to: 50m
- Linked and in range indication
- Low batt/lost connection alert
- Lullabies: Yes, 5x
- Mini USB charging
- Outdoor range up to: 300m
- Private and secure: Yes, adaptive FHSS
- Talkback function
- Temperature sensor: No
- Vibration mode: No
- Voice activation screen: Yes, VOX mode
- Battery and mains operated parent unit



\* The operating range of the baby monitor varies depending on the surroundings and factors that cause interference.