

PHILIPS

AVENT

Digital Video Baby Monitor

Baby monitor

Private and secure (A-FHSS)

3.5 inch colour screen, 2 x zoom

Lullabies, night light and temp.

Operating time up to 12 hours



SCD843/05



Always close to your baby

Private and secure with A-FHSS technology

The Philips Avent SCD845 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal-clear vision (3.5" LCD), day or night.

Private and secure connection

- High-resolution 3.5" screen with crystal-clear night vision
- Energy-saving eco mode with connection indication
- Hear your baby with clear sound
- Private, secure connection with adaptive FHSS technology

Freedom, flexibility, comforting and soothing

- Choose the best sound level for your surroundings
- Range up to 300 metres*
- Comforting night light and lullabies to calm your little one
- Vibration mode for subtle notifications
- More flexibility with up to 12 hours of operating time*
- Talk to your baby remotely

Reliability and reassurance

- Monitor the temperature in your baby's room
- Know you are connected with LED alerts

Highlights

Private, secure and adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

3.5" colour screen with 2 x zoom



See your baby, day and night, with crystal-clear infrared night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high-resolution, extra-large 3.5" colour screen. With 2 x digital zoom and pan for extra reassurance so you can see everything your baby is up to.


Perfect clear sound video

Hear every tiny giggle, gurgle and hic-up with perfect clarity. Not only see but also hear your baby any time with high-quality, crystal-clear sound.

ECO mode

Switch on the ECO mode to reduce power consumption during quiet times in the baby's room, safe in the knowledge that you are still connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

300m Range

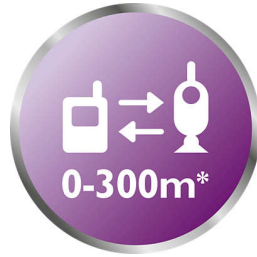

Indoor range up to 50 metres*, Outdoor range up to 300 metres*.

Operating time up to 12 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 12 hours before recharging is required.

Night light and lullabies

There's nothing like a gentle lullaby and the warm tranquil glow of a night light to calm a restless baby. From any room in the house, you can select one of 5 relaxing tunes and switch on the night light, helping your baby to drift effortlessly to sleep in no time.

Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

Vibration alert



Personalise your alert settings and be notified by a silent and subtle vibration of the parent unit.


Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what level of noise is picked up by the baby unit, e.g. you might want to hear when your baby cries, but you may be less interested in his or her babbling.

Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

Temperature sensor

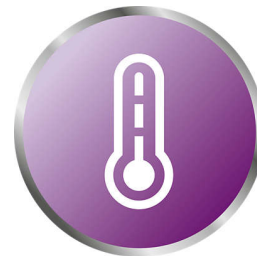

The temperature sensor with customised alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body temperature as well as you can and a slight change in temperature can make your baby restless. A customised temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

Specifications

Tuner/Reception/Transmission

Frequency band: 2.4 GHz

Convenience

Auto out-of-range warning

Battery low indication

Power on indication

Battery charging indication

Volume control

Sensitivity settings

Wall mountable

Power

Power supply: 100–240 V/50–60 Hz

Features

Digital Video Technology: Yes, Adaptive FHSS

Video LCD Screen: 3.5" colour

Adjustable sound sensitivity

Adjustable viewing angle

Android, IOS, Tablet compatible: No

Audio only mode

Auto infrared night vision

Battery and mains operated baby unit: Mains only

Battery back-up function baby unit: No

Battery operating time parent unit: Superior up to 12 hours

Belt Clip

Brightness control

Comforting night light

Menu Style: Icons and text

Digital zoom and pan: Yes, 2 x

Energy saving Eco mode: Eco mode with link indication

Handheld and rechargeable: Yes, parent unit

Indoor range up to: 50 m

Linked and in range indication

Low battery/lost connection alert

Lullabies: Yes, 5 x

Mini USB charging

Outdoor range up to: 300m

Private and secure: Yes, adaptive FHSS

Talkback function

Temperature sensor

Vibration mode

Voice activation screen: Yes, VOX mode

Battery- and mains-operated parent unit

