



Philips Avent Audio
Monitors
DECT Baby Monitor

100% private connection
Night light and lullabies
Talkback function



SCD560/00

The most reliable connection to your baby

Added support for you and your baby

Our new DECT SCD560/00 Baby Monitor delivers complete reassurance. Providing the most reliable connection with crystal clear sound, temperature control, a soothing night light and lullabies for you and your baby.

Reliable technology

- DECT technology guarantees zero interference & 100% privacy
- Perfect clear sound due to DECT Technology

Constant Reassurance and Secure Connection

- Always know when your monitor is in range and connected
- Sound level lights indicate if the baby makes noise
- Monitor the temperature in your baby's room
- Energy saving Smart ECO mode

Freedom and flexibility

- Range up to 330 meters*
- Superior operating time up to 18 hours
- Rechargeable parent unit

Comforting and soothing your baby

- Stay connected with talk back
- Comforting night light and lullabies to calm your little one

PHILIPS
AVENT

Highlights

Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

Perfect clear sound



Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.

Smart ECO mode



The unique Smart ECO mode automatically minimizes your transmission power and


increases your battery lifetime. The closer you are to your baby, the less power is needed for a perfect connection (not available in US and Canada).

Sound activation 3 LED lights




Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

Always connected

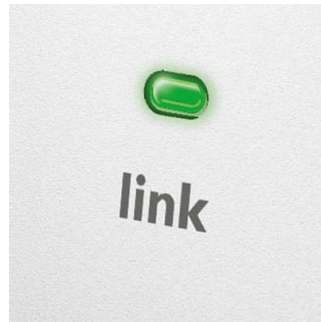

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

Temperature sensor

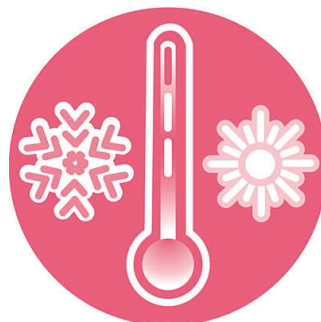

The temperature sensor with customized alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body temperature as well as you can and a slight

change in temperature can make your baby restless. A customized temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

330m Range



Indoor range up to 50 meters*. Outdoor range up to 330 meters*.

Rechargeable parent unit



The rechargeable parent unit enables you to move in and around the home.

Operating time up to 18 hours



The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

Specifications

Development stages

- Stage: Pregnancy, 0 - 6 months

Features

- Comforting night light
- Indoor range up to: 50m
- Linked and in range indication
- Outdoor range up to: 330 meters
- Talkback function
- Temperature sensor
- LCD Screen
- Soothing lullabies

Power

- Operating time on battery hour: 18 hours
- Charging time: 10 hour(s)
- Power Supply: 120 V (US), 220 - 240 V

Tuner/Reception/Transmission

- Frequency band: DECT
- Automatic channel selection

Convenience

- Auto out-of-range warning
- Battery low indication
- Battery charging indication
- Volume control
- Sound-level lights

Convenience

- Sensitivity control

Technical specifications

- Storage temperature range: 10 - 40 °C
- Operating temperature range °C: 10 - 40 °C

Logistic data

- F-box dimensions (W x H x D): 220 x 156 x 94 mm

Features

- DECT Technology
- Energy saving Smart ECO mode: ECO mode, Yes
- Sound activation lights: 3 LED lights



Issue date 2021-03-10

Version: 11.2.1

EAN: 08 71010 36107 62

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The operating range of the baby monitor varies depending on the surroundings and factors that cause interference.