



Bagless vacuum cleaner with PowerCyclone 5 Technology

- 1800 W
- PowerCyclone 5
- Multi Clean nozzle
- EPA 10 filter

FC9350/62

## Higher suction power\* with PowerCyclone 5

Compact, yet powerful

The new Philips PowerPro Compact vacuum cleaner delivers remarkable cleaning results, thanks to PowerCyclone 5 technology and MultiClean nozzle. The dust container is designed for hygienic emptying.

### Benefits

#### Remarkable cleaning results

- PowerCyclone 5 technology separates dust and air in one go
- New Multi Clean nozzle for thorough cleaning on all floors
- 1800 W motor for strong suction power

#### Effortless cleaning

- Advanced dust container design for hygienic emptying
- Light weight and compact, giving you the freedom to move

- Soft brush integrated into handle, always ready to use
- ActiveLock couplings to easily adjust to each cleaning task
- Large wheels for smooth motion control

#### Clean air filter system

- EPA10 filter for healthy air

**PHILIPS**

## Features

### PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

### EPA filter system




The pleated EPA filter has a large surface and good filtration performance. It can catch small dust particles and in combination with the cyclonic flow, this prevents the filter from clogging fast and gives you better and longer-lasting filtration results.

### Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

### Light weight and compact

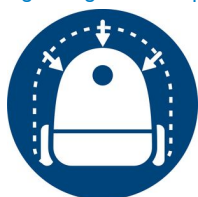

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

### Soft brush at your fingertips



A dusting brush attachment is built right into the handle so it's always ready to use for furniture, flat surfaces and upholstery.

### ActiveLock couplings



The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

### Multi Clean nozzle



The new Multi Clean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed to seal closely to the floor to ensure a good pick-up of even the fine dust.

### 1800 Watt motor



1800 W motor generates strong suction power for excellent cleaning results.

### Large rear wheels



The large rear wheels enable smooth motion control.

## Specifications

[field not found 'disclaimer\_text']

### Performance

Airflow (max)	37 l/s
Input power (IEC)	1600 W
Input power (max)	1800 W
Sound power level	82 dB
Suction power (max)	350 W
Vacuum (max)	33 kPa

### Usability

Action radius	9 m
Carrying handle	Front
Cord length	6 m
Tube type	Metal 2-piece telescopic tube
Wheel type	Plastic
Tube coupling	ActiveLock

### Design

Color	Deep black
-------	------------

### Filtration

Dust capacity	1.5 L
Exhaust filter	EPA 10 filter
Motor filter	Washable filter

### Nozzles and accessories

Accessories included	Crevice tool Integrated brush
Accessory storage	On tubeclip
Standard nozzle	MultiClean nozzle

### Sustainability

Packaging	> 90% recycled materials
-----------	--------------------------

User manual	100% recycled paper
-------------	---------------------

### Weight and dimensions

Dimensions of product (LxWxH)	410 x 281 x 247 mm
Weight of product	4.5 kg
Dimensions of packaging (LxWxH)	525 x 320 x 315 mm

### Packaging dimensions

Height	31.50 cm
Width	32.00 cm
Depth	52.50 cm
Nett weight	6.30 kg
Gross weight	7.64 kg
EAN	08710103825036
Number of products included	1
Country of origin	CN
Harmonised Systems Code	850819

### Outer Carton

Length	52.50 cm
Width	32.00 cm
Height	31.50 cm
Gross weight	7.64 kg
EAN	18710103825033
Number of consumer packagings	1

\* Compared to PowerPro Compact FC8471/01



data subject to change  
2018, October 28

Version: 4.0.1  
EAN: 08710103825036

© 2018 Koninklijke Philips N.V.  
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)