

# PHILIPS

Bagless vacuum cleaner

Marathon

AutoClean

PerfectCare



FC9226



## Performs better for longer

Self-cleaning filter, no bag required

### Optimal cleaning power every time

- AutoClean filter optimises suction power

### Cleaning perfection

- 2000 Watt motor generating max. 400 Watt suction power

### Easy cleaning even around furniture

- Tri-active nozzle with unique 3-in-1 action

### Traps dust and allergens inside


- Ultra Clean Air HEPA 13 filter, 99.95% filtration

### Right tool for each type of floor

- Super Parquet nozzle removes 3 x more sticky dirt
- Turbo Brush nozzle removes 25% more hairs and dust


# Highlights

## AutoClean filter

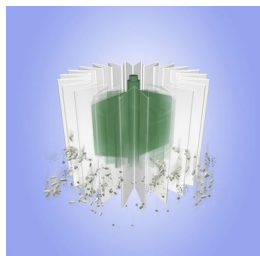

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

## 2000 Watt motor

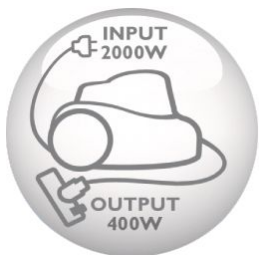

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

## Super Parquet nozzle



The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

# Specifications

## Design

**Colour:** Emperor red

## Filtration

**Dust capacity:** 1.5 l

**Exhaust filter:** Ultra Clean Air HEPA 13 filter

## Nozzles and accessories

**Accessories:** Crevice tool, Small nozzle

**Accessory storage:** On handgrip

**Additional nozzle:** Super Parquet nozzle, Turbo brush

**Standard nozzle:** TriActive nozzle

## Performance

**Airflow (max):** 37 l/s

**Input power (IEC):** 1800 W

**Input power (max):** 2000 W

**Noise level (Lc IEC):** 78 dB

**Suction power (max):** 400 W

**Vacuum (max):** 33 kPa

## Usability

**Action radius:** 12 m

**Carrying handle:** Top and front

**Cord length:** 9 m

**Tube coupling:** Button

**Power control:** Electronic on appliance

**Tube type:** Metal lacquered 2-piece telescopic tube

**Wheel type:** Rubber

## Weight and dimensions

**Weight of product:** 7.5 kg

