

# PHILIPS

## Steam iron

### PowerLife

2400 W

45 g/min continuous steam

170 g steam boost

SteamGlide soleplate



GC2998/86



## Built to perform, day after day

4x longer life with SteamGlide soleplate\*

For great results day after day, you want an iron that never lets you down. With its anti-scratch SteamGlide soleplate, high consistent steam output and integrated calc-clean, this high quality iron gives you performance that lasts.

#### Fast & powerful crease removal

- 2400 W to heat up quickly
- Up to 170 g steam boost blasts stubborn creases
- Steam output up to 45 g/min for strong, steady performance
- Vertical steaming for hanging fabrics

#### Long lasting performance

- Scratch resistant SteamGlide soleplate provides good gliding
- Built-in calc-clean slider, long-lasting steam performance
- Tested cord for maximum durability and safety

#### Comfortable ironing

- Automatic shut-off when iron is left unattended
- Drip-stop keeps garments spotless while ironing
- Comfortable, textured handle for easy grip



[asimpleswitch.com](http://asimpleswitch.com)

# Highlights

## 2400 W to heat up quickly



Delivers a fast warm-up and powerful performance.

## Steam boost up to 170 g




Penetrates deeper into fabrics to easily remove stubborn creases.

## Continuous steam up to 45g/min



Strong and consistent steam output to remove creases faster.

## Vertical steam

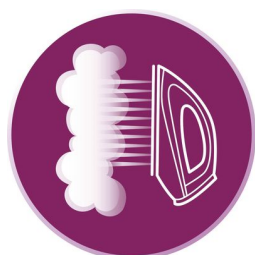

The vertical steam function lets you refresh garments right on the hanger and remove creases from curtains as they hang. No ironing board required.

## SteamGlide soleplate



Our special SteamGlide soleplate smoothly glides over any fabric. It's also non-stick, scratch-resistant and easy to clean.

## Built-in calc-clean slider



This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium buildup, or limescale, and maintain peak performance.

## Quality-tested cord



All our steam iron cords are rigorously tested for maximum safety and durability.

## Automatic shut-off



The iron shuts itself off if you leave it standing still. On its heel rest, it will automatically switch off in 8 minutes. Lying flat, it shuts down after 30 seconds motionless.

## No more messy dripping



Our Drip Stop system lets you iron delicate fabrics at low temperatures with confidence. There's no need to worry about water droplets causing stains.



[asimpleswitch.com](http://asimpleswitch.com)

## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas – Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Fast crease removal

Water spray  
Continuous steam: 45 g/min  
Power: 2400 W  
Steam boost: 170 g

## Easy to use

Water tank capacity: 320 ml  
Drip Stop  
Extra stable heel rest  
Safety auto off

Tap water suitable  
Extra large filling hole  
Soleplate name: SteamGlide

## Scale management

Descaling and cleaning: Built-in Calc Clean  
Slider

## Size and weight

Packaging dimensions (WxHxL):  
33.2x16.7x13.7 cm  
Product dimensions (WxHxL):  
31.2x14.7x12.7 cm  
Weight of iron: 1.255 kg

## Guarantee

2 year worldwide guarantee

## Green efficiency

User manual: 100% recycled paper

