

PHILIPS

Bagless vacuum cleaner

PowerPro Active

2000W

PowerCyclone 4

HEPA 10 washable filter

FC8635/71



Always the highest suction power*

With PowerCyclone 4 Technology

The new Philips PowerPro Active delivers outstanding cleaning results thanks to the PowerCyclone 4 technology. The advance dust container is easy to empty and helps avoiding dust clouds.

Clean air in your home

- The EPA filter catches microscopic vermin causing allergy

Ergonomic grip for far reach

- Reach all corners thanks to the extra long ergonomic grip

Powerful cleaning performance


- PowerCyclone 4 technology separates dust and air in one go
- 2000 Watt motor for high performance

Easy to clean

- Advanced dust container design for easy to emptying

Highlights

Easy to empty dust container

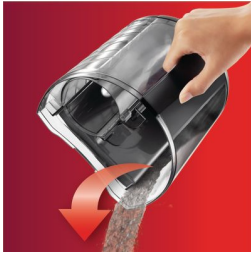

The dust container is perfectly designed to dispose dust without creating a dust cloud. Thanks to its unique shape and smooth surface, dust is collected at one side of the container and evenly glides into the dust bin.

PowerCyclone 4 Technology



PowerCyclone 4 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber to separate the dust from the air.

EPA filter system



The pleated EPA filter has a large filter surface and good filtration performance. In combination with the cyclonic airflow, this prevents it from clogging fast and gives you better and longer-lasting filtration results.

2000 Watt motor



The 2000 Watt motor generates max. 370 Watt suction power for high performance.

Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

Specifications

Design

Color: Merlin blue metallic

Performance

Input power (max): 2000 W
 Input power (IEC): 1800 W
 Suction power (max): 370 W
 Vacuum (max): 33 kPa
 Airflow (max): 37 l/s
 Noise level (Lc IEC): 80 dB

Filtration

Dust capacity: 1.7 L
 Exhaust filter: Microfilter
 Motor filter: EPA 10 washable filter

Usability

Action radius: 9 m
 Cord length: 6 m
 Tube type: Aluminum telescopic tube
 Carrying handle: Top and front
 Tube coupling: Conical
 Wheel type: Rubber
 Power control: Electronic on appliance

Nozzles and accessories

Standard nozzle: Multi-purpose nozzle
 Accessories included: Crevice tool, Small nozzle
 Accessory storage: On tubeclip

Sustainability

Packaging: > 90% recycled materials
 User manual: 100% recycled paper

Weight and dimensions

Weight of product: 6 kg
 Dimensions of product (LxWxH): 473x304x301 mm

