



Philips
Pressurised steam
generator

GC8325

Great results, minimum effort

Endless, powerful steam with 1.4 litre water tank

Powerful yet surprisingly compact, this ironing system produces non-stop, high pressure steam, making ironing fast and easy. Thanks to the 1.4 litre detachable water tank, you can iron for hours without interruption.

Fast and powerful ironing

- Up to 5 bars of steam pressure for fast ironing
- Continuous steam up to 120 g/min
- Ready to use in 2 minutes with unlimited refill
- 180 g steam boost to remove stubborn creases easily

Comfortable ironing

- Lightweight iron for effortless ironing

Smooth gliding

- SteamGlide soleplate for powerful steam and superb gliding

Iron up to 3 hours without refilling

- Extra-large detachable 1.4 litre water tank

Reduce energy consumption

- Save 20% energy and 40% water consumption

PHILIPS
sense and simplicity

Highlights

Up to 5 bar



Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabric, making your ironing fast and easy, even on difficult fabrics.

Continuous steam up to 120 g/m



Continuous steam output up to 120 g/min thanks to the small amounts of water that are pumped into the boiler each time. For perfect and fast crease removal.

Detachable water tank



To make ironing effortless you need a lot of steam. High steam output means a lot of

refilling. The extra-large 1.4 l water tank reduces the need for refilling.

Lightweight


The iron is only 1.2 kg making ironing easy and effortless.

SteamGlide Soleplate



This specially designed soleplate combines superior ceramic coating for superior gliding on all fabrics and carefully designed vents for powerful crease removal.

Steam ready in 2 minutes

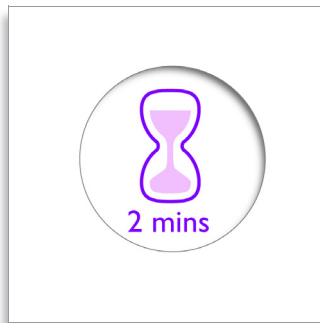

Steam is ready at the maximum level in 2 minutes, and you can refill the water at anytime

Eco-setting



Save 20% energy and 40% water consumption by selecting the eco-setting. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

Steam boost up to 180 g



Steam boost enables you to easily remove even the most stubborn creases.

Specifications

Comfortable ironing

- Suitable for tap water
- Hose length: 1.9, 1.9
- Anti-scale management: Easy Rinse
- Cord length: 2.5 m
- Safe in use: Overheat safety stop
- Additional comfort: Steam trigger lock

Weight and dimensions

- Product weight: 6.06
- Product dimensions: 350 x 350 x 250

Smooth gliding

- Soleplate: SteamGlide soleplate

Technical specifications

- Voltage: 220 - 240

- Frequency: 50–60
- Boiler wattage: 1200
- Iron wattage: 800

Easy to use

- reaching tricky areas: Steam tip, Button groove
- Control: Temperature ready light, Water tank empty light, Steam ready light, Variable steam settings
- Water tank: Crystal clear
- Easy to set up and store: Extra-large water inlet, Easy cord and hose storage

Crease removal

- Vertical Steam: Continuous vertical steam
- Soleplate: Optimal vent pattern



Issue date 2012-07-26

Version: 1.0.1

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com