

PHILIPS

Induction cooker

27mm Ultra-thin body

2100W high power

HD4991/52



Powerful cooking, more variety

Effective heating and various cooking menus

Making cooking quick and efficient: 2100W of heating power, reaches temperatures as high as 280°C in an instant. 27mm ultra-thin design with 2.3 kgs weight, provides superior convenience. Safety features guarantee worry-free cooking.

High temperatures, rapid heating up

- 2100W heating power for rapid heating

Ideal for cooking a variety of healthy dishes

- Preset and timed cooking function save time and hassle
- 6 healthy cooking menus featuring unique heating programs
- 6 power levels suitable for different cooking needs

Multiple safety protections for your peace of mind


- Whirlwind fan provides rapid cooling and long service life
- Multiple self-protection features eliminate safety hazards
- Insulated design protects parts for longer service life

Stylish design for ultimate convenience

- Lightweight body weighing only 2.3kg
- Rotating touch technology for adjusting power and time
- Ultra thin design for a luxurious and elegant new experience

Highlights

High-efficiency heating coil

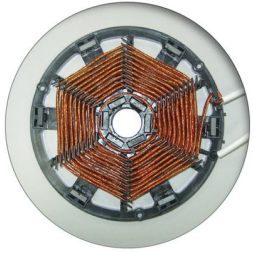

Boasts a copper heating coil with 18 high conductivity magnetic strips, a genuine 2100 W of heating power, instantly reaching temperatures of 280 degrees, full power control and high-efficiency heating

Efficient cooling structure



The fan duct layout, high frequency rotation whirlwind fan, spaced heating coil, insulation technology of the top ceramic plate, and high efficiency cooling system all work to extend the service life of the product

Preset and timer



Presetting function allow cooking times to be preset up to 24 hours in advance for steaming. Cooking completion time can be set in advance. 5 major functions for timed cooking of up to 2 hours for steaming, frying, hot pot, stir frying and Teppanyaki.

6 menus



The 6 handpicked menus include smart culinary programs to help you make delicious food with ease, whether you're making soup/congee, making hot pot, steaming, frying, stir frying or even quick frying vegetables. Special stir frying function provides 3 minutes of continuous high power heating, especially suited to the cooking habits of Chinese families

6 power levels



6 power levels: 60°C, 80°C, 160°C, 200°C, 240°C and 280°C, satisfying your cooking requirements from simmering to stir-frying. Rotate the heating ring or touch "+" "-" to adjust to your required power

Light and easy to carry



Lightweight body weighing only 2.3kg

Multiple safety protections

Smart current and voltage detection provides power-off protection in case of abnormalities. Smart temperature detection at the bottom of the pot provides power-off protection in case of

over-heating. The cooker turns off automatically after 1 minute if there is no pot placed on it and turns off automatically after 3 minutes if it detects that the pot has boiled dry. Child lock protection helps avoid accidents due to misuse of the product

Rotating touch technology



Hi-tech touch sensitive controls avoid the physical wear that occurs with traditional buttons through long-term use. Water-resistant and accurate, with long-lasting sensitivity. Adjust cooking times easily and accurately by using the rotating touch controls for ultimate convenience

Ultra-thin flat panel design



Ultra thin flat panel design, 27mm thickness, with an edge of only 9mm for a luxurious and elegant new experience

Unique insulated design



Insulated design protects parts for longer service life

Specifications

Accessories

28cm diameter SUS304 soup pot

Design specifications

Panel: A Grade microcrystal glass

Panel color: Black

Technical specifications

Rated frequency: 50 Hz

Rated input power: 2100 W

Cord length: 1.2 m

Rated voltage: 220 V

Dimensions and weight

Product dimensions (L×W×H): 39×32×39 cm

Product weight: 2.7 kg

