

PHILIPS

Steam iron

Azur

Steam 40g/min; 100g steam boost

SteamGlide Plus soleplate

Safety Auto Off

2400 Watts

GC4425/02



Power with precision

Super steam, super glide iron

For easier and smoother ironing, you want the best combination of gliding and powerful steam. This Philips iron with SteamGlide soleplate provides you the best of both!

Easily removes creases

- Continuous steam output up to 40 g/min

Comfortable ironing

- Extra-long 3 m cord for maximum reach
- Double Active Calc System prevents scale build-up
- 100 g steam boost to remove stubborn creases easily

Safe ironing

- Delicate fabric protector for steam-ironing delicate fabrics
- Electronic shut-off when iron is left unattended
- Drip-stop system keeps your garments spotless while ironing

Easy gliding on all fabrics


- SteamGlide soleplate is Philips premium soleplate

Reaches into tricky areas

- Steam tip allows you to have steam in hard-to-reach areas

Highlights

Extra-long 3 m cord

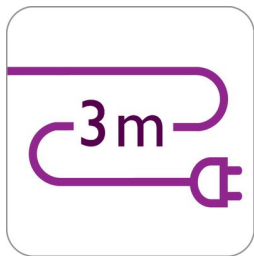

With the extra-long 3 m cord of your Philips iron, you can easily reach right up to the edges of your ironing board – and further!

Delicate fabric protector

The Delicate Fabric Protector makes it possible to iron your delicate garments at low temperature with maximum steam, without creating shiny patches.

Double Active Calc System



Double Active Calc system of your Philips steam iron prevents scale build-up through anti scale pills and an easy to use calc clean function.

Auto shut-off



The electronic shut-off automatically switches the iron off when it is left unattended or tips over.

Drip-stop system



The Drip Stop system of your Philips steam iron lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

Up to 40 g/min of steam




Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect amount of steam to efficiently remove all creases.

Steam boost up to 100 g



Steam boost up to 100g for fast removal of even the most stubborn creases.

Steam tip

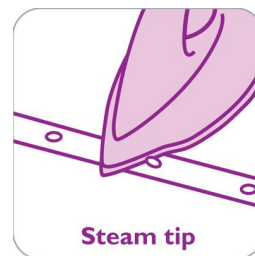

The unique steam tip of this Philips iron, combines a particularly pointed front of the soleplate with special elongated steam slots in the tip, to reach right into the smallest and most difficult areas for the best ironing results.

SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

Specifications

Fast & powerful crease removal

Soleplate: SteamGlide

Steam output

Continuous steam output: 40 g/min

Steam boost: 100 g

Vertical steaming

Variable steam settings

Spray

Steam tip

Power: 2400 W

Easy to use

Water tank capacity: 350 ml

Filling and emptying water: Extra large filling hole

Drip stop

Soft grip

Safety auto off

Power cord length: 3 m

Calc management

Suitable for tap water

Calc clean solution: Double active calc clean

Technical specifications

Weight of iron: 1.55 kg

Product dimensions: 30.3 x 12 x 15.2 cm

Voltage: 220 - 240 V

Accessories

Delicate fabric protector

