

PHILIPS

Steam iron

Azur Ionic

Ionic Deepsteam

GC4740



Removes creases easily from cotton and linen

Powerful ironing with Ionic DeepSteam

Remove even the toughest creases, thanks to Ionic DeepSteam. This powerful steam iron creates steam particles 50% smaller, that reach deep into stubborn fabrics like cotton and linen, so you get great results easily!

Comfortable ironing

- Soft grip for lasting ironing comfort

Safe ironing

- Electronic safety shut-off when iron is left unattended

Easy crease removal from cotton and linen

- 50% smaller steam particles reach deeper into tough creases
- Continuous steam output up to 40 g/min
- Steam boost up to 170 g

Easy gliding on all fabrics


- The perfect balance between gliding and stretching

Safe storage

- Heat protective cover allows immediate safe storage

Highlights

Ionic DeepSteam

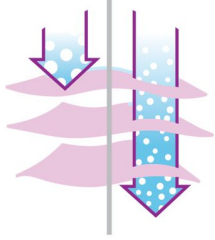

The ionisation process creates smaller steam particles that reach deeper into the fabric. This means even the toughest creases are removed easily.

SteamGlide PLUS




For the best results you need a soleplate that has the optimal balance between gliding and stretching. This is offered through SteamGlide PLUS with its easy glide zone and perfect stretch zone.

Steam boost up to 170 g



The steam boost can be used for vertical steaming and tough creases.

Automatic safety shut-off

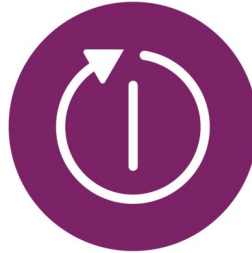

The electronic safety shut-off automatically switches the iron off when it is left unattended or tips over.

Specifications

Accessories

Included in pack: Cord binder for easy cord storage, Heat protective cover

Comfortable ironing

Additional comfort: 360 degree cord freedom, Soft grip

Anti-scale management: Double Active Calc System

Cord length: 3 m

No leakage: Drip-stop system

Safe in use: Automatic shut-off when iron is left unattended, Exceeds international drop test standards

Suitable for tap water

Water tank capacity: 335 ml

Crease removal

Continuous steam: Up to 40 gr/min

Ionic Deepsteam: Ionic DeepSteam

Reaching tricky areas: Steam tip

Spray

Steam Boost: Up to 170 gr/min

Vertical Steam

Easy to use

Control: Temperature ready light, Variable steam settings

Fast heat-up

Smooth gliding

Soleplate: SteamGlide soleplate

Technical specifications

Frequency: 50–60

Power: 2400

Voltage: 220 - 240

Weight: 1.7 kg

Water tank capacity: 350 ml

