

PHILIPS

Steam iron

PowerLife

2400 W

45 g/min continuous steam

170 g steam boost

SteamGlide soleplate



GC2998/86



Built to perform, day after day

4 x longer life with SteamGlide soleplate*

For great results day after day, you want an iron that never lets you down. With its anti-scratch SteamGlide soleplate, consistent high steam output and integrated calc-clean, this high-quality iron gives you performance that lasts.

Fast and powerful crease removal

- 2400 W to heat up quickly
- Up to 170 g steam boost blasts stubborn creases
- Steam output up to 45 g/min for strong, steady performance
- Vertical steaming for hanging fabrics

Long-lasting performance

- SteamGlide soleplate — superior gliding and scratch resistance
- Built-in calc-clean slider, long-lasting steam performance
- Tested cord for maximum durability and safety

Comfortable ironing

- Automatic shut-off when iron is left unattended
- Drip stop keeps garments spotless while ironing
- Comfortable, textured handle for easy grip



[asimpleswitch.com](https://www.asimpleswitch.com)

Highlights

2400 W to heat up quickly



Delivers a fast warm-up and powerful performance.

Steam boost up to 170 g




Penetrates deeper into fabrics to easily remove stubborn creases.

Continuous steam up to 45 g/min



Strong and consistent steam output to remove creases faster

Vertical steam

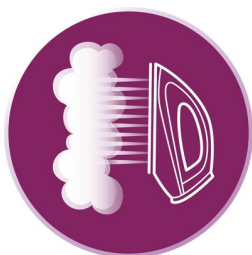

The vertical steam function lets you refresh garments right on the hanger and remove creases from curtains as they hang. No ironing board required.

SteamGlide soleplate



Our exclusive SteamGlide soleplate moves smoothly over any fabric. A durable, 5 layer coating—including anti-corrosive base—makes it last longer. Non-stick, scratch-resistant and easy to keep clean.

Built-in calc-clean slider




This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium build-up, or lime scale, and maintain peak performance.

Quality-tested cord



All our steam iron cables are rigorously tested for maximum safety and durability.

Automatic shut-off

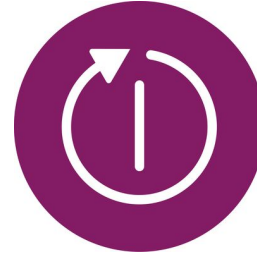

The iron shuts itself off if you leave it standing still. On its heel rest, it will automatically switch off in 8 minutes. Lying flat, it shuts down after 30 motionless seconds.

No more messy dripping



Our Drip Stop system lets you iron delicate fabrics at low temperatures with confidence. There's no need to worry about water droplets causing stains.



[asimpleswitch.com](https://www.asimpleswitch.com)

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

Specifications

Fast crease removal

Water spray
Continuous steam: 45 g/min
Power: 2400 W
Steam boost: 170 g

Easy to use

Water tank capacity: 320 ml
Drip Stop
Extra-stable heel rest
Safety auto off

Tap water suitable
Extra-large filling hole
Soleplate name: SteamGlide

Scale management

Descaling and cleaning: Built-in Calc-Clean
Slider

Size and weight

Packaging dimensions (W x H x D): 33.2 x 16.7
x 13.7 cm
Product dimensions (W x H x D): 31.2 x 14.7 x
12.7 cm
Weight of iron: 1.255 kg

Guarantee

2 year worldwide guarantee

Green efficiency

User manual: 100% recycled paper

