PHILIPS

Vacuum cleaner with bag

Performer Compact

2000 W

Super Clean Air filter

3L



FC8383/01



Full performance. High suction power.

Compact yet powerful with AirflowMax technology

The new Philips Performer Compact vacuum cleaner delivers top cleaning performance with minimum effort. AirflowMax technology keeps the suction power stronger for longer. The ExtraClean nozzle removes dust efficiently on all floors.

Remarkable cleaning results

- · 2000 W motor for strong suction power
- $\bullet \ \ \text{Revolutionary AirflowMax technology for strong suction power}$
- · New ExtraClean nozzle for thorough cleaning on all floors

Effortless cleaning

- · On-board accessories for ultimate convenience
- ActiveLock couplings to easily adjust to each cleaning task
- · Compact and light for effortless cleaning and easy storage

Clean air filter system

- Super Clean Air filter captures >99% of particles
- S-bag Classic Long Performance lasts up to 50% longer





Highlights

2000 Watt motor



2000 W motor generates strong suction power for excellent cleaning results.

AirflowMax technology



The unique AirflowMax technology keeps the suction power stronger for longer* to use the bag to the very end. The technology is build around the optimization of three key elements: 1) Unique ribs profile inside the dust chamber to maximize airflow around the dustbag and enable the use of the entire bag surface. 2) Specially designed dust chamber capacity that allows the dustbag to fully unfold uniformly. 3) High quality, non-clogging fibre structures in the dustbag absorb dust without blocking the pores, thus avoiding a reduction in suction power.

ExtraClean nozzle



The new ExtraClean nozzle delivers a thorough cleanning on all types of floors. The nozzle is designed with a large front opening to pick up

big crumbs, while at the same time it seals closely to the floor to ensure a good pick-up of the fine dust.

On-board accessories



The vacuum cleaner is designed with integrated accessories, so that you do not need to carry extra pieces around while you clean. The crevice tool is located on the canister, always ready to use.

ActiveLock couplings




The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

Compact and lightweight



Thanks to its small size, the appliance can be easily stored, saving valuable space. The light weight makes it easy to carry around.

Super Clean Air filter

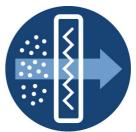

The Super Clean Air filter captures >99% of harmful particles such as pollen, dust mites or pet hair. So you can enjoy clean healthy air in your home!



IF DESIGN AWARD

Award-winning products are selected by the top names in designEach year, iF International Forum Design GmbH organizes one of the world's most celebrated and valued design competitions: the iF DESIGN AWARD.

Recognized as a symbol of design excellence around the world, the iF DESIGN AWARD welcomes over 5,000 submissions from 70 countries every year.



reddot award 2016 winner

RED DOT DESIGN AWARD 2016

The Red Dot Design Award is an international product design and communication design prize. Winning an award in this competition is proof that the creative minds have a vision and are able to commit, to carry out, to research and to experiment – and that they are a name to watch out for in the future. There are prize categories for product design, design agencies, and design concepts.

Specifications

Performance

Input power (max): 2000 W Input power (IEC): 1800 W Suction power (max): 375 W Sound power level: 83 dB Vacuum (max): 23,5 kPa

Design

Color: Deep Black

Filtration

Dust capacity: 3 L

Dust bag type: s-bag Classic Long

Performance

Exhaust filter: Super Clean Air filter Motor filter: 1 layer foam filter

Usability

Action radius: 9 m Cord length: 6 m

Tube type: Metal 2-piece telescopic tube

Tube coupling: ActiveLock Wheel type: Rubber Carrying handle: Front

Nozzles and accessories

Standard nozzle: ExtraClean nozzle

Accessories included: Crevice tool, Integrated

brush

Sustainability

Packaging: > 90% recycled materials User manual: 100% recycled paper

Weight and dimensions

Weight of product: 4.5 kg

Dimensions of product (LxWxH): $400 \times 282 \times$

251 mm

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-02-12 Version: 14.5.1

