

PHILIPS

Bagged vacuum cleaner

Performer

2200 W

500W suction power

Allergy H13 filter

Turbo brush



FC9174/61



The highest suction power ever

500 Watt suction power for effortless cleaning

The highest suction power ever, resulting in effortless cleaning: this is what the FC917x range is all about. Combined with a hygienic filter and easy dustbag removal system the FC917x range takes care of all your dust and dirt.

Superior performance


- 2200W motor generating max. 500W suction power
- Allergy H13 filter system captures >99.9% of fine dust
- TriActive nozzle for 3-way thorough cleaning action
- Turbo brush, perfect for (pet) hair and fluff cleaning

Effortless cleaning

- Long 10-meter reach goes further without unplugging
- Easy long-lasting bags fit into XXL 4-liter dust chamber

Highlights

Powerful cleaning

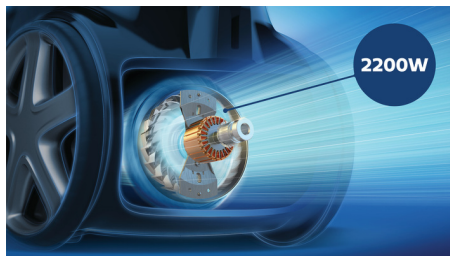

Highly efficient 2200 Watt motor generates max. 500 Watt suction power for perfect cleaning results.

Long 10-meter reach




With a reach of 10 meters from plug to nozzle, it keeps you cleaning longer without unplugging.

Allergy H13 filter



Allergy H13 filter system catches >99.9% of fine dust particles – including pollen, pet hair and dustmites – ideal for allergy sufferers. Filtration level is equivalent to HEPA 13*.

Long-lasting 4L s-bags

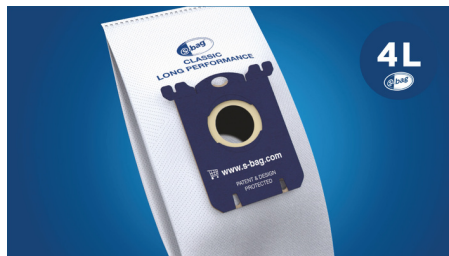

Large 4-liter dust chamber and long-lasting universal bags allow optimum suction power until full, plus sealed, mess-free disposal.

TriActive nozzle



TriActive nozzle utilizes 3 cleaning actions in one go. The specially designed soleplate removes dust from deep within carpets, while the large front opening sucks up big bits. Air channels on both sides of the nozzle pick up any dust and dirt alongside walls or furniture.

Turbo brush



The rotating Turbo brush is designed for optimal cleaning of pet hair and fluff, opening up carpet fibers for a deeper clean.

Specifications

Design

Color: Emperor red

Filtration

Dust bag type: s-bag

Exhaust filter: Allergy H13 filter

Dust capacity: 4 L

HEPA Air Seal

Nozzles and accessories

Accessories included: Crevice tool, Small nozzle

Standard nozzle: TriActive nozzle

Usability

Carrying handle: Top and front

Clean Comfort cassette

Tube coupling: Button

Dust full indicator

Tube type: Metal lacquered 2-piece telescopic tube

Wheel type: Rubber

Action radius: 10 m

Cord length: 7 m

Performance

Airflow (max): 47 l/s

Input power (IEC): 2000 W

Input power (max): 2200 W

Noise level (Lc IEC): 78 dB

Suction power (max): 500 W

Vacuum (max): 34 kPa

Weight and dimensions

Weight of product: 6.3 kg

Dimensions of product (LxWxH): 500 x 320 x 280 mm

