

# PHILIPS

Bagless vacuum cleaner

PowerPro

2000W

PowerCyclone 5

HEPA 10 washable filter



FC8760/01



## Effortless cleaning, powerful performance With PowerCyclone technology

The new Philips PowerPro vacuum cleaner effortlessly cleans your floors thanks to the PowerCyclone 5 technology. The advanced dust container is easy to empty and helps avoiding dust clouds.

### **Powerful cleaning performance**

- PowerCyclone 5 technology separates dust and air in one go
- 2000 Watt motor for high performance

### **Extra long reach for convenient cleaning**

- More cleaning with less effort

### **Easy to clean**

- Advanced dust container design for hygienic emptying
- Washable foam filter for life-long performance

# Highlights

## PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

## 2000 Watt motor



The 2000 Watt motor generates max. 360 Watt suction power for high performance.

## Easy to empty dust container




The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

## Life-long washable foam filter



The foam filter can be easily washed under the tap for life-long performance.

## 10 m action radius

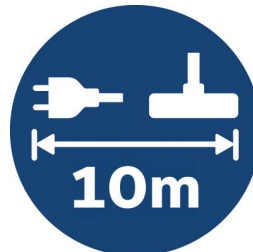

10 m action radius for cleaning with less effort.

# Specifications

## Design

Color: Juicy red

## Filtration

Exhaust filter: EPA 10 filter  
 Motor filter: Lifetime washable filter  
 Dust capacity: 2 L  
 HEPA Air Seal

## Nozzles and accessories

Accessories included: Crevice tool, Small nozzle  
 Accessory storage: On tubeclip  
 Standard nozzle: Wheeled all-purpose nozzle

## Performance

Airflow (max): 37 l/s  
 Input power (IEC): 1800 W  
 Input power (max): 2000 W  
 Noise level (Lc IEC): 80 dB  
 Suction power (max): 360 W  
 Vacuum (max): 33 kPa

## Sustainability

Packaging: > 90% recycled materials  
 User manual: 100% recycled paper

## Usability

Carrying handle: Top and front  
 Tube coupling: Easy release  
 Power control: Electronic on appliance  
 Tube type: Metal 2-piece telescopic tube  
 Wheel type: Rubber  
 Action radius: 10 m  
 Cord length: 7 m

## Weight and dimensions

Weight of product: 5.5 kg  
 Dimensions of product (LxWxH): 440 x 300 x 290 mm

